

AD 691893

VOLUME II: USER'S MANUAL

STEPHEN JORDAN
GENE E. MADDUX
ROBERT H. MALLETT

JULY 1969

**AIR FORCE FLIGHT DYNAMICS LABORATORY
AIR FORCE SYSTEMS COMMAND
WRIGHT-PATTERSON AIR FORCE BASE, OHIO**

CLEARINGHOUSE

376

**MAGIC: AN AUTOMATED GENERAL PURPOSE
SYSTEM FOR STRUCTURAL ANALYSIS**

VOLUME II: USER'S MANUAL

STEPHEN JORDAN
GENE E. MADDUX
ROBERT H. MALLETT

This document has been approved for public
release and sale; its distribution is unlimited.

FOREWORD

This report was prepared by Textron's Bell Aerosystems Company (BAC), Buffalo, New York, under USAF Contract No. AF 33(615)-57-C-1505. The contract was initiated under Project No. 1467, 'Structural Analysis Methods,' Task No. 146702, 'Thermal Elastic Analysis Methods.' The program was administered by the Air Force Dynamics Laboratory (AFFDL), Systems Command, Wright-Patterson Air Force Base, Ohio 45433, under the cognizance of Mr. G. E. Maddux, AFFDL Program Manager. The program was carried out by the Structural Systems Department, Bell Aerosystems Company, during the period 15 March 1967 to 15 March 1968 under the direction of Dr. Robert H. Mallett, BAC Program Manager.


This report 'MAGIC: An Automated General Purpose System for Structural Analysis,' is published in three volumes, 'Volume I: Engineer's Manual', 'Volume II: User's Manual', and 'Volume III: Programmer's Manual'. The manuscript for Volume II was released by the authors in March 1968 for publication as an AFFDL Technical Report.

The numerical results presented in this report were obtained, in part, on the AFFDL tie-in to the Wright-Patterson Air Force Base Electronic Data Processing Center. The utilization of this equipment and the helpful assistance of AFFDL personnel is acknowledged.

The authors wish to express appreciation to colleagues in the Advanced Structural Design Technology Section of the Structural Systems Department for their individually significant, and collectively indispensable, contributions to this effort.

The authors wish to express appreciation also to Miss Beverly J. Dale and Mr. Daniel DeSantis for the expert computer programming that transformed the analytical development into a practical working tool.

This technical report has been reviewed and is approved.

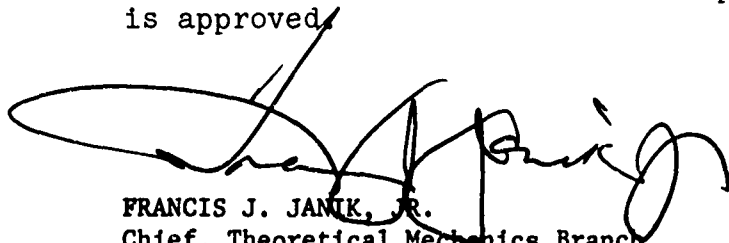

FRANCIS J. JANIK, JR.
Chief, Theoretical Mechanics Branch
Structures Division

ABSTRACT

An automated general purpose system for analysis is presented. This system, identified by the acronym "MAGIC" for "Matrix Analysis via Generative and Interpretive Computations", provides a flexible framework for implementation of the finite element analysis technology. Powerful capabilities for displacement, stress and stability analyses are included in the subject MAGIC System for Structural analysis.

The matrix displacement method of analysis based upon finite element idealization is employed throughout. Six versatile finite elements are incorporated in the finite element library. These are; frame, shear panel, triangular cross-section ring, toroidal thin shell ring, quadrilateral thin shell and triangular thin shell elements. These finite element representations include matrices for stiffness, incremental stiffness, prestrain load, thermal load, distributed mechanical load and stress.

The MAGIC System for structural analysis is presented as an integral part of the overall design cycle. Considerations in this regard include, among other things, preprinted input data forms, automated data generation, data confirmation features, restart options, automated output data reduction and readable output displays.

Documentation of the MAGIC System is presented in three parts; namely, Volume I: Engineer's Manual, Volume II: User's Manual and Volume III: Programmer's Manual. The subject document, Volume II, contains instructions for the preparation of input data and interpretation of output data with examples drawn from the applications presented in Volume I.

TABLE OF CONTENTS

Section	Page
I INTRODUCTION	1
II INPUT TO THE MAGIC SYSTEM	3
A. Introduction	3
B. System Input Data	3
C. Structural Input Data	9
1. General Description	9
2. Title Section	19
3. Material Tape Input Section	21
4. System Control Information Section	26
5. Print Control Section	31
6. Grid Point Coordinate Section	33
7. Grid Point Pressure Section	35
8. Grid Point Temperature Section	39
9. Rotational Transformation Section (Input Matrices)	43
10. Rotational Transformation Section (Gen. Transformations)	48
11. Boundary Condition Section	51
12. Prescribed Displacement Section	56
13. External Grid Point Load Section	61
14. Element Control Data Section	66
15. Element Input Section	71
16. Element Input Description	75
17. Check or End Section	118
III INPUT AND OUTPUT OF THE MAGIC SYSTEM	119
A. General Description	119
B. Three Element Portal Frame	120
C. Cantilever Beam	144
D. Thick Walled Disc	166
E. Thin Walled Cylinder, Edge Loading	193
F. Square Plate - Parabolic Membrane Loading (Quadrilateral Thin Shell Idealization)	222
G. Square Plate - Normal Pressure Loading (Quadrilateral Thin Shell Idealization)	248
H. Square Plate - Parabolic Membrane Loading (Triangular Thin Shell Idealization)	275
I. Square Plate - Normal Pressure Loading (Triangular Thin Shell Idealization)	303
IV REFERENCES	330
APPENDIX A Table of Error Messages	331

LIST OF ILLUSTRATIONS

Figure		Page
II-1	Title Data Form	20
II-2	Material Tape Input Data Form	24
II-3	System Control Information Data Form	30
II-4	Print Control Data Form	32
II-5	Grid Point Coordinate Data Form	34
II-6	Grid Point Pressure Data Form	37
II-7	Grid Point Temperature Data Form	41
II-8	Rotational Transformation (Input Matrices) Data Form	47
II-9	Rotational Transformation (Generate Trans. Matrices) Data Form	50
II-10	Boundary Condition Data Form	54
II-11	Prescribed Displacement Data Form	60
II-12	External Grid Point Loads Data Form	65
II-13	Element Control Data Form	70
II-14	Element Input Data Form	73
II-15	Frame Element Representation	80
II-16	Quadrilateral Shear Panel Representation	84
II-17	Triangular Cross-Section Ring Representation	89
II-18	Toroidal Thin Shell Ring Representation	96
II-19	Boundary Condition Input For Toroidal Ring	97
II-20	Quadrilateral Thin Shell Element Representation	107
II-21	Triangular Thin Shell Element Representation	117
II-22	Check or End Data Form	118(a)

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-B.1	Idealized Three Element Portal Frame	121
III-B.2	Title Information, Three Element Portal Frame	122
III-B.3	Material Tape Input, Three Element Portal Frame	123
III-B.4	System Control Information, Three Element Portal Frame	124
III-B.5	Gridpoint Coordinates, Three Element Portal Frame	125
III-B.6	Boundary Conditions, Three Element Portal Frame	126
III-B.7	External Loads, Three Element Portal Frame	127
III-B.8	Element Control Data, Three Element Portal Frame	128
III-B.9	Element Input, Three Element Portal Frame	129
III-B.10	End Card, Three Element Portal Frame	130
III-B.11	Format Abstraction Instruction Listing	137
III-B.12	Title And Material Data Output, Three Element Portal Frame	138
III-B.13	Gridpoint Data, Boundary Condition And Finite Element Description Output, Three Element Portal Frame	139
III-B.14	Transformed External Assembled Load Column Output, Three Element Portal Frame	140
III-B.15	Reduced Stiffness Matrix Output, Three Element Portal Frame	141
III-B.16	Load, Displacement And Stress Output, Three Element Portal Frame	142
III-B.17	Force And Reaction Output, Three Element Portal Frame	143

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-C.1	Idealized Cantilever Beam	145
III-C.2	Title Information, Cantilever Beam	146
III-C.3	Material Tape Input, Cantilever Beam	147
III-C.4	System Control Information, Cantilever Beam	148
III-C.5	Gridpoint Coordinates, Cantilever Beam	149
III-C.6	Boundary Conditions, Cantilever Beam	150
III-C.7	External Loads, Cantilever Beam	151
III-C.8	Element Control Data, Cantilever Beam	152
III-C.9	Element Input, Cantilever Beam	153
III-C.10	End Card, Cantilever Beam	154
III-C.11	Title And Material Data Output, Cantilever Beam	159
III-C.12	Gridpoint Data And Boundary Condition Output, Cantilever Beam	160
III-C.13	Finite Element Description Output, Cantilever Beam	161
III-C.14	Transformed External Assembled Load Column Output, Cantilever Beam	162
III-C.15	Reduced Stiffness Matrix Output, Cantilever Beam	163
III-C.16	Load, Displacement And Stress Output, Cantilever Beam	164
III-C.17	Force And Reaction Output, Cantilever Beam	165

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-D.1	Idealized Thick Walled Disk	167
III-D.2	Title Information, Thick Walled Disk	169
III-D.3	Material Tape Input, Thick Walled Disk	170
III-D.4	System Control Information, Thick Walled Disk	171
III-D.5	Gridpoint Coordinates, Thick Walled Disk	172
III-D.6	Gridpoint Temperatures, Thick Walled Disk	173
III-D.7	Boundary Conditions, Thick Walled Disk	174
III-D.8	External Loads, Thick Walled Disk	175
III-D.9	Element Control Data, Thick Walled Disk	176
III-D.10	End Card, Thick Walled Disk	177
III-D.11	Title And Material Data Output, Thick Walled Disk	186
III-D.12	Gridpoint Data And Boundary Condition Output, Thick Walled Disk	187
III-D.13	Finite Element Description Output, Thick Walled Disk	188
III-D.14	Transformed External Assembled Load Column Output, Thick Walled Disk	189
III-D.15	Reduced Stiffness Matrix Output, Thick Walled Disk	190
III-D.16	Thermal Stress, Element Applied Loads And Displacement Output, Thick Walled Disk	191
III-D.17	Stress, Force And Reaction Output, Thick Walled Disk	192

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-E.1	Idealized Thin Walled Cylinder, With Edge Loading	194
III-E.2	Title Information, Thin Walled Cylinder	196
III-E.3	Material Tape Input, Thin Walled Cylinder	197
III-E.4	System Control Information, Thin Walled Cylinder	198
III-E.5	Gridpoint Coordinates, Thin Walled Cylinder	199
III-E.6	Boundary Conditions, Thin Walled Cylinder	200
III-E.7	External Loads, Thin Walled Cylinder	201
III-E.8	Element Control Data, Thin Walled Cylinder	202
III-E.9	Element Input, Thin Walled Cylinder	203
III-E.10	End Card, Thin Walled Cylinder	204
III-E.11	Title And Material Data Output, Thin Walled Cylinder	215
III-E.12	Gridpoint Data And Boundary Condition Output, Thin Walled Cylinder	216
III-E.13	Finite Element Description Output, Thin Walled Cylinder	217
III-E.14	Transformed External Assembled Load Column Output, Thin Walled Cylinder	218
III-E.15	Reduced Stiffness Matrix Output, Thin Walled Cylinder	219
III-E.16	Load, Displacement And Stress Output, Thin Walled Cylinder	220
III-E.17	Force And Reaction Output, Thin Walled Cylinder	221

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-F.1	Idealized Square Plate, Parabolic Membrane Loading (Quadrilateral Thin Shell Idealization)	223
III-F.2	Title Information, Square Plate (Quadrilateral Thin Shell Idealization)	225
III-F.3	Material Tape Input, Square Plate (Quadrilateral Thin Shell Idealization)	226
III-F.4	System Control Information, Square Plate (Quadrilateral Thin Shell Idealization)	227
III-F.5	Gridpoint Coordinates, Square Plate (Quadrilateral Thin Shell Idealization)	228
III-F.6	Boundary Conditions, Square Plate (Quadrilateral Thin Shell Idealization)	229
III-F.7	External Loads, Square Plate (Quadrilateral Thin Shell Idealization)	230
III-F.8	Element Control Data, Square Plate (Quadrilateral Thin Shell Idealization)	231
III-F.9	Element Input, Square Plate (Quadrilateral Thin Shell Idealization)	232
III-F.10	End Card, Square Plate (Quadrilateral Thin Shell Idealization)	233
III-F.11	Title And Material Data Output, Square Plate (Quadrilateral Thin Shell Idealization)	242
III-F.12	Gridpoint Data, Boundary Condition And Finite Element Description Output, Square Plate (Quadrilateral Thin Shell Idealization)	243
III-F.13	Transformed External Assembled Load Column Output, Square Plate (Quadrilateral Thin Shell Idealization)	244

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-F.14	Reduced Stiffness Matrix Output, Square Plate (Quadrilateral Thin Shell Idealization)	245
III-F.15	Load, Displacement And Stress Output, Square Plate (Quadrilateral Thin Shell Idealization)	246
III-F.16	Force And Reaction Output, Square Plate (Quadrilateral Thin Shell Idealization)	247

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-G.1	Idealized Simply Supported Plate, Normal Pressure Loading (Quadrilateral Thin Shell Idealization)	249
III-G.2	Title Information, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	252
III-G.3	Material Tape Input, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	253
III-G.4	System Control Information, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	254
III-G.5	Gridpoint Coordinates, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	255
III-G.6	Gridpoint Pressures, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	256
III-G.7	Boundary Conditions, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	257
III-G.8	External Loads, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	258
III-G.9	Element Control Data, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	259
III-G.10	Element Input, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	260
III-G.11	End Card, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	261
III-G.12	Title And Material Data Output, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	269

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-G.13	Gridpoint Data, Boundary Condition And Finite Element Description Output, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	270
III-G.14	Transformed External Assembled Load Column Output, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	271
III-G.15	Reduced Stiffness Matrix And Reduced Element Applied Loads, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	272
III-G.16	Load, Displacement And Stress Output, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	273
III-G.17	Force And Reaction Output, Simply Supported Plate (Quadrilateral Thin Shell Idealization)	274

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-H.1	Idealized Square Plate, Parabolic Membrane Loading (Triangular Thin Shell Idealization)	276
III-H.2	Title Information, Square Plate (Triangular Thin Shell Idealization)	278
III-H.3	Material Tape Input, Square Plate (Triangular Thin Shell Idealization)	279
III-H.4	System Control Information, Square Plate (Triangular Thin Shell Idealization)	280
III-H.5	Gridpoint Coordinates, Square Plate (Triangular Thin Shell Idealization)	281
III-H.6	Boundary Conditions, Square Plate (Triangular Thin Shell Idealization)	282
III-H.7	External Loads, Square Plate (Triangular Thin Shell Idealization)	283
III-H.8	Element Control Data, Square Plate (Triangular Thin Shell Idealization)	284
III-H.9	Element Input, Square Plate (Triangular Thin Shell Idealization)	285
III-H.10	End Card, Square Plate (Triangular Thin Shell Idealization)	286
III-H.11	Title And Material Data Output, Square Plate (Triangular Thin Shell Idealization)	297
III-H.12	Gridpoint Data, Boundary Condition And Finite Element Description Output, Square Plate (Triangular Thin Shell Idealization)	298
III-H.13	Transformed External Assembled Load Column Output, Square Plate (Triangular Thin Shell Idealization)	299

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-H.14	Reduced Stiffness Matrix Output, Square Plate (Triangular Thin Shell Idealization)	300
III-H.15	Load, Displacement And Stress Output, Square Plate (Triangular Thin Shell Idealization)	301
III-H.16	Force And Reaction Output, Square Plate (Triangular Thin Shell Idealization)	302

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-I.1	Idealized Simply Supported Plate, Normal Pressure Loading (Triangular Thin Shell Idealization)	304
III-I.2	Title Information, Simply Supported Plate (Triangular Thin Shell Idealization)	307
III-I.3	Material Tape Input, Simply Supported Plate (Triangular Thin Shell Idealization)	308
III-I.4	System Control Information, Simply Supported Plate (Triangular Thin Shell Idealization)	309
III-I.5	Gridpoint Coordinates, Simply Supported Plate (Triangular Thin Shell Idealization)	310
III-I.6	Gridpoint Pressures, Simply Supported Plate (Triangular Thin Shell Idealization)	311
III-I.7	Boundary Conditions Simply Supported Plate (Triangular Thin Shell Idealization)	312
III-I.8	External Loads, Simply Supported Plate (Triangular Thin Shell Idealization)	313
III-I.9	Element Control Data, Simply Supported Plate (Triangular Thin Shell Idealization)	314
III-I.10	Element Input, Simply Supported Plate (Triangular Thin Shell Idealization)	315
III-I.11	End Card, Simply Supported Plate (Triangular Thin Shell Idealization)	316
III-I.12	Title And Material Data Output, Simply Supported Plate (Triangular Thin Shell Idealization)	324
III-I.13	Gridpoint Data, Boundary Condition And Finite Element Description Output, Simply Supported Plate (Triangular Thin Shell Idealization)	325
III-I.14	Transformed External Assembled Load Column Output, Simply Supported Plate (Triangular Thin Shell Idealization)	326

LIST OF ILLUSTRATIONS (CONTD)

Figure		Page
III-I.15	Reduced Stiffness Matrix Output, Simply Supported Plate (Triangular Thin Shell Idealization)	327
III-I.16	Load, Displacement And Stress Output, Simply Supported Plate (Triangular Thin Shell Idealization)	328
III-I.17	Force And Reaction Output, Simply Supported Plate (Triangular Thin Shell Idealization)	329

LIST OF TABLES

Table		Page
I	Definition of Possible Format Types	5
II	Typical Input Data Deck for Magic	10
III	System MAGIC Abstraction Instruction Listing	15

SECTION I

INTRODUCTION

The MAGIC System is made up of three primary functional elements; namely, Preprocessor, Execution and Structural Monitors. The organizational interrelation of these monitors is considered in Volumes I and III of this report (References 1,2). Of interest here are the interfaces of these monitors with the MAGIC System User.

The Preprocessor Monitor relies wholly upon the FORMAT System for its capability. This Monitor has the responsibility for reading and interpreting FORMAT data, setting system parameters, allocating available internal and external storage, and translating the input abstraction instructions into a form useable by the Execution Monitor. Under normal operation of the MAGIC System for structural analysis, User provided data to the Preprocessor Monitor consists of a preset control deck. On the other hand, nonstandard operation of the MAGIC System to perform matrix algebra requires development of a complete problem oriented control deck for the Preprocessor Monitor.

The Execution Monitor carries out instructions passed from the Preprocessor Monitor and has no interfaces with the MAGIC System User. The primary input data interface resides in the Structural Monitor. Modules underlying the Structural Monitor, read, interpret, and store the structure input, generate the requested matrices and furnish these matrices in a form useable by the Executive Monitor.

Corresponding to the computational flow through the MAGIC System, Section 2 of this report begins with instructions for the specification of data to the Preprocessor Monitor. Then, attention is focused upon the structural data. Preprinted, report form input sheets are described that facilitate the specification of structure data.

Section 3 is devoted to interpretation of the output from the MAGIC System. Output from the Structural Monitor records the input data problem description as well as optional intermediate results. System level matrix output of final results is handled by the FORMAT standard matrix print capability.

Instructions for the interpretation of output data are presented in the context of example problem executions. Each problem is accompanied by a set of the preprinted input sheets described in Section 2.

Functional knowledge of the MAGIC System is gained best by utilization. Therefore, it is recommended that elementary example problems be executed in parallel with study of the MAGIC System documentation.

SECTION II

INPUT TO THE MAGIC SYSTEM

A. INTRODUCTION

The MAGIC System presents two input data interfaces to the Structural Analyst. The first encountered in operation of the MAGIC System is referred to as the System Input Data interface. This input data is generally not problem orientated. Rather, it can be viewed as the system level control setup to accommodate the structural analysis process.

The second input data interface with the User concerns the Structural Input Data. This is problem orientated data which accounts for nearly all the effort expended in conducting structural analyses.

Separate subsections, devoted to instructions for the specification of System Input Data and Structural Input Data, follow. Utilization of the MAGIC System for structural analysis is covered in depth. The reader is referred to Reference 3 for detailed instructions on carrying out general matrix computations.

B. SYSTEM INPUT DATA

System Input Data is given definition most clearly within the context of a general card deck setup. Beginning with the first card and proceeding in the required order, the System Input Data is described using a modified list format.

<u>\$FORMAT Card</u>	- required, format type I
Function	- indicate beginning of a FORMAT case, select machine configuration
Option	- STANDARD - use set machine configuration - UPDATE - alter set machine configuration - CHANGE - supply new machine configuration
Default Option	- STANDARD

The first line of the foregoing description of the FORMAT card indicates that provision of this card is mandatory and that the card format is "type I". The "type I" card format is defined in Table I. A total of four types of card formats are employed for the following cards; namely, types I, II, III and IV. All types are defined in Table I.

The remaining lines of the FORMAT card description do not require clarification in the context of the MAGIC System. The reader is referred to Reference 3 for in-depth discussion.

Beginning at this point with the second card in the System Input Data deck, description of the individual cards is continued.

<u>\$RUN Card</u>	- required, format type I
Function	- control execution of problem
Options	- GO - full execution of problem
	- NOGO - execution terminated after preprocessor
	- LOGIC - listing of preprocessor logic and allocation
	- NO LOGIC - no listing of preprocessor logic and allocation
Default Option	- GO, NO LOGIC
<u>ANALYSIS Card</u>	- Optional, format type II
Function	- Supply page header label for FORMAT System output
Text	- any alphameric information
Omission Option	- header label blank
<u>PROBLEM Card</u>	- optional, format type II
Function	- supply page header label for matrix print instruction
Text	- any alphameric information
Omission Option	- header label blank

TABLE I
DEFINITION OF POSSIBLE FORMAT TYPES

FORMAT TYPE I

CARD COLUMN

1	16 72
\$ FORMAT	STANDARD
\$ RUN	GØ, LØGIC
\$ INSTRUCTION	SOURCE
\$ MATRIX	LIST, PRINT
\$ SPECIAL	LIST
\$ END	any Text

FORMAT TYPE II

CARD COLUMN

1 772
ANALYSIS (any text enclosed in parantheses)
PROBLEM (any text enclosed in parantheses)

TABLE I
CONCLUDED

FORMAT TYPE III

CARD COLUMN

1 7 72

INPUT TAPE (name, modifier)

OUTPUT TAPE (name, modifier)

name - 1 to 6 alphameric characters, first of which is
alphabetic

modifier - integer number

FORMAT TYPE IV

CARD COLUMN

1 7 72

PAGE SIZE (14 * 11)

or

(11 * 8)

<u>INPUT TAPE Card</u>	- optional, format type III
Function	- supply name and modifier of master input tape to FORMAT System
Omission	- FORMAT System assumes there is no master input tape
<u>OUTPUT TAPE Card</u>	- optional, format type III
Function	- supply name and modifier of master output tape to FORMAT System
Omission	- FORMAT System assumes no master output tape will be needed
<u>PAGE SIZE Card</u>	- optional, format type IV
Function	- select limits of printing output
Options	- (14 * 11)
	- (11 * 8)
	- (8 * 11)
Default Option	- (14 * 11)
<u>\$INSTRUCTION Card</u>	- required, format type I
Function	- indicate beginning of abstraction instructions
	- indicate location of abstraction instructions
Option	- SOURCE - abstraction instructions are in card data deck (only option available at this time)

The abstraction instructions specify the built-in operations, matrix and non-matrix, to be executed. Basic preset abstraction instruction sequences are associated with the MAGIC System. Other abstraction sequences can be defined by the User to carry out various computations. A general description of these instructions is given in Reference 3.

<u>\$MATRIX Card</u>	- optional, format type I
Function	- indicate beginning of card input matrices
Option	- (LIST - card images of matrix data are printed) - NOLIST - card images of matrix data are not printed - PRINT - matrices are printed after sorting - NOPRINT - matrices are not printed after sorting
Default Option	- NOLIST, NOPRINT
Omission Option	- FORMAT System assumes no card input matrices

System level matrices may be introduced via cards using this feature. The MATRIX card indicates the existence of such data. This option is often useful in structural analyses although matrices are conventionally generated internal to the MAGIC System.

<u>\$SPECIAL Card</u>	- optional, format type I
Function	- indicate beginning of special module data (e.g. - structural system data)
Options	- (NOLIST - card, images of special data not printed) - (LIST - card images of special data are printed if NOGO specified on RUN card)

All data not expressly defined under the MATRIX option enters via the SPECIAL data feature. For example, all data provided to the Structural System Monitor is introduced under the SPECIAL data card. This data is not processed in any way within the Preprocessor Monitor. It is merely accepted and passed to the interface between the User and the Structural System Monitor.

<u>\$END Card</u>	- required, format type I
Function	- indicate end of a FORMAT II case

The END card completes the presentation of the types of data which make up the System Input Data. Perspective on the System Input Data as a whole is gained by reference to an example. Table II illustrates a typical input data deck for the MAGIC System. Comments are included to make this example self explanatory.

Table III is a listing of MAGIC System abstraction instruction sequences to conclude this subsection on System Input Data. Attention is focused next on the everyday problem of specifying the Structural Input Data which is passed directly to the Structural System Monitor.

C. STRUCTURAL INPUT DATA

1. General Description

Significant portions of the labor and computer costs of structural analysis are occasioned by incomplete or improper specification of structural input data. In recognition of this, a number of features have been incorporated into the MAGIC System to assist in the confirmation of problem data prior to execution. The most important of these are the prelabeled input data forms which are an integral part of the MAGIC System. These input data forms contain a number of special features, e.g.:

- (1) "MODAL" Options are provided which preset a table to a given set of values. This MODAL option may be used where indicated.
- (2) "REPEAT" Options are provided which minimize the input data specified by the User. This REPEAT option may be used where indicated.
- (3) The User exercises control options simply by placing an 'X' in a given location on a prelabeled input data form.
- (4) The prelabeled input data forms have permanent label cards which automatically precede subsets of data thereby allowing flexibility in the arrangement of input decks.

TABLE II
TYPICAL INPUT DATA DECK FOR MAGIC SYSTEM

INPUT CARDS	EFFECT
<p>\$ FORMAT STANDARD</p> <p>\$ RUN GO, LOGIC</p> <p> ANALYSIS (PLUG 2 INSERTION)</p> <p> PROBLEM (ONE ELEMENT - PLUG 2)</p> <p> PAGE SIZE (14 * 11)</p> <p> INPUT TAPE (LIB1, 011668)</p> <p> OUTPUT TAPE (LIB2, 021068)</p>	<p>Signifies beginning of data and instructs FORMAT II System to use standard machine configuration.</p> <p>Full execution and print preprocessor logic.</p> <p>FORMAT II System output label will be as indicated.</p> <p>Matrix print header label will be as indicated.</p> <p>Print output will be arranged for 14" x 11" paper.</p> <p>Master input tape exists for the job with given name and modifier.</p> <p>Master output tape will be needed for the job, give it name LIB1 and modifier 021068.</p>

TABLE II
CONTINUED

INPUT CARDS	EFFECT
<p>\$ INSTRUCTION SOURCE</p> <p>C DISPLACEMENT AND STRESS ANALYSIS</p> <p>C ,MATLBB,,LOADS,TR,TA,K,F,S,SO,,,</p> <p>C MATLBA,.USER04.</p>	<p>Signifies beginning of abstraction instruction.</p> <p>COMMENTS (will appear in listing, non-executable)</p> <p>Enter Structural Generative System to generate:</p> <p>MATLBB - Revised material library</p> <p>LOADS - system grid point loads</p> <p>TR - boundary condition matrix</p> <p>TA - assembly matrix</p> <p>K - element stiffness matrices</p> <p>F - element generated load matrices</p> <p>S - element stress matrices</p> <p>SO - element thermal stress matrices</p> <p>MATLBA is input material library and will be found on master input tape LIB1</p>

TABLE II
CONTINUED

INPUT CARDS	EFFECT
C C FORM TAR (TRANSFORMATION TO ASS. C AND REDUCE) C TRT = TR .TRANSP. C TAR = TA .TMULT. TRT	COMMENTS Perform $[TAR] = [TA]^T [TR]^T$
C C ASSEMBLE AND REDUCE ELEMENT C STIFFNESS MATRICES C KTEMP = K .TMULT. TAR C STIFF = TAR .TMULT. KTEMP C PRINT (FORCE, DISP,,) STIFF	COMMENTS Perform $[STIFF] = [TR] [TA] [K] [TA]^T [TR]^T$ and print STIFF. Since K is symmetric TMULT is equivalent to MULT
C C ASSEMBLE AND REDUCE ELEMENT C APPLIED LOADS C FTELAR = TAR .TMULT. F C PRINT (REDDOF, COND,,) LOADR	COMMENTS Perform $\{LOADR\} = [TR] \{LOADS\}$ and print results.
C C COMBINE ELEMENT AND SYSTEM LOADS C C TLOAD = FTELAR .ADD. LOADR C PRINT (REDDOF, COND,,) TLOAD	COMMENTS Perform $\{TLOAD\} = \{FTELAR\} + \{LOADR\}$ and print results.

TABLE II
CONTINUED

INPUT CARDS	EFFECT
<p>C SOLVE FOR DISPLACEMENTS</p> <p>DISPR = STIFF .SEQEL. TLOAD PRINT (REDDOF, COND,,) DISPR</p> <p>C SOLVE FOR ELEMENT STRESSES</p> <p>STREL = S .MULT. TAR STRESF = STREL .MULT. DISPR STRESS = STRESF .SUBT. SO PRINT (NRSEL, COND,,) STRESS</p> <p>C SOLVE FOR ELEMENT FORCES</p> <p>FORCEL = KTEMP .MULT. DISPR FORCES = FORCEL .SUBT. F PRINT (D.O.F., COND,,) FORCES</p> <p>C SOLVE FOR SYSTEM REACTIONS</p>	<p>COMMENTS</p> <p>Solve $[STIFF]\{DISPR\} = \{TLOAD\}$ for $\{DISPR\}$ and print results.</p> <p>COMMENTS</p> <p>Remove unwanted stresses by performing $[STREL] = [S] [TA]^T [TR]^T$ then solve for final stresses by performing $\{STRESS\} = [STREL]\{DISPR\} - \{SO\}$ and print results.</p> <p>COMMENTS</p> <p>Perform $\{FORCES\} = [K] [TA]^T [TR]^T$ $\{DISPR\} - \{F\}$ and print results.</p> <p>COMMENTS</p>

TABLE II
CONCLUDED

INPUT CARDS	EFFECT
<p> REACTN = TA .MULT. FORCES REACT = REACTN .SUBT. LOADS PRINT (D.O.F., COND,,) REACT SAVE (LIB2) MATLBB \$ SPECIAL (STRUCTURAL INPUT DATA) \$ END </p>	<p> Perform $\{ \text{REACT} \} = [TA] \{ \text{FORCES} \}$ - $\{ \text{LOADS} \}$ and print results. Place revised material library, MATLBB, on master output tape LIB2 Indicates beginning of structural data deck Signifies end of case </p>

TABLE III
MAGIC ABSTRACTION INSTRUCTION LISTING

INSTRUCTION	SOURCE
C	
C	DISPLACEMENT AND STRESS ANALYSIS INSTRUCTION SEQUENCE
C	
	MATLBA,LOADS,TR,TA,KEL,FEL,SEL,SZALEL, , , , = .USER04.
C	
C	PRINT OUTPUT MATRICES
C	
	PRINT (D.O.F.,COND. ,E6,) LOADS
	PRINT (REDDOF,D.O.F.,E6,) TR
	PRINT (NSYS ,NORSUM,E6,) TA
	PRINT (ROW ,COL ,E6,) KEL
	PRINT (ROW ,COL ,E6,) FEL
	PRINT (ROW ,COL ,E6,) SEL
	PRINT (ROW ,COL ,E6,) SZALEL
C	
C	FORM TAR MATRIX (ASSEMBLY AND APPLICATION OF
C	BOUNDARY COND.)
	TRT = TR .TRANSP.
	TAR = TA .TMULT. TRT
C	
C	ASSEMBLE AND REDUCE ELEMENT STIFFNESS MATRICES
C	
	KTEMP = KEL .TMULT. TAR
	STIFF = TAR .TMULT. KTEMP
	PRINT (FORCE ,DISP. , ,) STIFF
C	
C	ASSEMBLE AND REDUCE ELEMENT APPLIED LOADS
C	
	FTELAR = TAR .TMULT. FEL
	PRINT (REDDOF,COND. , ,) FTELAR
C	
C	APPLY BOUNDARY CONDITIONS TO SYSTEM LOADS
C	
	LOADR = TR .MULT. LOADS
	PRINT (REDDOF,COND. , ,) LOADR
C	
C	COMBINE ELEMENT AND SYSTEM LOADS
C	
	TLOAD = FTELAR .ADD. LOADR
	PRINT (REDDOF,COND. , ,) TLOAD

TABLE III

CONCLUDED

INSTRUCTION	SOURCE
C	
C	SOLVE FOR DISPLACEMENTS
C	
	DISPR = STIFF .SEQEL. TLOAD
	PRINT (REDDOF,COND. , ,) DISPR
C	
C	SOLVE FOR ELEMENT STRESSES
C	
	STREL = SEL .MULT. TAR
	STRESF = STREL .MULT. DISPR
	STRESS = STRESF .SUBT. SZALEL
	PRINT (NRSEL ,COND. , ,) STRESS
C	
C	SOLVE FOR ELEMENT FORCES
C	
	FORCEL = KTEMP .MULT. DISPR
	FORCES = FORCEL .SUBT. FEL
	PRINT (D.O.F.,COND. , ,)FORCES
C	
C	SOLVE FOR SYSTEM REACTIONS
C	
	REACTN = TA .MULT. FORCES
	REACT = REACTN .SUBT. LOADS
	PRINT (D.O.F.,COND. , ,) REACT

- (5) Zeros must be indicated where pertinent. Blanks are never zeros except where specifically indicated.
- (6) Only prelabeled input forms associated with options that are exercised in any particular problem are needed. Data associated with options not exercised are simply omitted.
- (7) A program option is provided to conduct a read and write of input data with execution suppressed. Output from the data read and write option includes the material properties derived from the Materials Library as well as tables completed by MODAL specification of data. This option is exercised by simply placing the prelabeled input data form designated as CHECK at the end of the input data deck.

The prelabeled input data forms are separable into four main categories; namely, Material Library, Control Data, Problem Data and Data Read and Write.

The Material Library Section is a particularly useful input feature of the MAGIC System. This library is a permanent data set available for interrogation by the system. Additions and/or deletions to the Material Library are executed by the MAGIC System. The updating of the Materials Library may be conducted independently of program execution or as an integrated pre/post execution operation.

A library specification of material may include Elastic Constants, Coefficients of Thermal Expansion and Mass Density. Material anisotropy is assumed as well as temperature dependence. Provision is made for data at up to ten temperature levels. Linear interpolation is employed in interrogation of the material specification.

The number of entries in the Material Library need not be limited, though the time for interrogation is affected by the number of entries. Listings of the complete library or specified portions are conveniently available by program option.

The Control Section provides the User with controls on System parameters. A prelabeled input form is provided. Figure II-3 shows the prelabeled data form which pertains to System Control Information.

The Problem Data Section consists of the following input:

- (1) Grid point coordinates
- (2) Grid point pressures
- (3) Grid point temperatures
- (4) Rotational transformations
- (5) Boundary conditions
- (6) External loads
- (7) Prescribed displacements
- (8) Element input

The numerical input pertinent to the above problem data is presented in floating point and fixed point notations. In floating point notation, the decimal point is always shown on the input data and in fixed point notation the decimal is never shown. The floating point notation is applicable, for example, to measureable quantities such as loads, coordinates, etc. The fixed point notation is limited to whole numbers or integers such as grid point numbers.

In floating point notation, a number may be written in either the conventional manner or as a factor of 10^n ; for example, the number 30 000 000 = 30×10^6 can be written as either 30 000 000.0 or 30.0 E6. For numerical input data (both fixed and floating point) plus signs are not normally used. Negative numbers and negative exponents, however, must be preceded by a minus sign.

In the Problem Data Section, extensive use can be made of the MODAL and REPEAT options. Identical elements should be grouped in order to maximize the use of REPEAT options. Grid points should be numbered in such a manner that full advantage is taken of stiffness matrix banding.

The Data Read and Write Section is provided to conduct read and write of input data with primary calculations suppressed. This is exercised via the prelabeled input data form designated as CHECK.

It is recommended that this feature be used routinely to minimize execution against incorrect problem specifications. Reduction in costs and frequently, reduction in elapsed calendar time can be expected with disciplined use of this feature.

The input data package has been designed to minimize redundant information. As a consequence, consistency checks do not verify that the same information given at different times is in fact the same. Rather, these checks insure that pre-specified types and quantities of data are consistent with the data of reference. For example, the specification of a certain type of analysis implies the need for associated items of data. Messages are printed corresponding to inconsistencies identified and execution is suppressed though complete Read and Write is attempted.

The procedure used in the preparation of the prelabeled data forms will now be explained in detail. The description will proceed by data sections. It is important to note that slashes (/) which appear on the prelabeled input data forms, instruct the Key punch Operator to proceed to the next entry position on the input data form, or if all entries have been punched, to the next data section.

2. Title Section (Figure II-1)

A prelabeled input data form is provided for the TITLE Section and is shown in Figure II-1.

The first entry on the form is prelabeled REPORT and requires no information from the User. It is to be noted that this label card designated REPORT must be the first card for all data decks which use these prelabeled input data forms.

The second entry on the form is prelabeled TITLE and also requires no information from the User.

The third entry on the form concerns the Number of Title Cards which are to follow. This information appears in Columns 7-9 and is given in fixed point form.

Alphameric description of the problem is placed on the following cards. The total number of these cards must be equal to the number which appears in Columns 7-9 of the third entry, (Number of Title Cards).

SAC 1015

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

REPORT (1)

1	2	3	4	5	6
T	I	T	L	E	

(/)

789

NUMBER OF TITLE CARDS

111

TITLE INFORMATION

[illegible]

FIGURE II-1 TITLE DATA FORM

3. Material Tape Input Section (Figure II-2)

The Material Tape Input Section is used when a material is to be added, revised or deleted from the material tape. It can also be employed at the User's option to examine the contents of the tape or to obtain a summary of the materials which appear on the tape at the time the request is being made.

The labeled input data from provided for material tape entries, is shown in Figure II-2. The first entry on the form is prelabeled MATER and requires no input from the User.

The second entry on the form concerns the number of requests which are being made against the material tape. This information appears in Columns 7-9 of the second entry, and the User may make as many requests as desired against the material tape.

The third entry in the section contains the following detailed information as shown in the figure.

Request Number - (Cols. 7-9)

The total number of requests which are made against the material tape must be equal to the number of requests specified on the second entry of the form. It should be noted, however, that the first set of material data (Material Properties Table) is input before a second request is made.

Material Number -(Cols. 10-15)

The material number for a material which is to be added to the tape is chosen at the discretion of the User. If a number is chosen that corresponds to the number of a material which already appears on the tape, the new material will not be accepted unless the lock code associated with the new material is exactly the same as the lock code of the material which already appears on the tape. If this is the case the new material will be added to the tape and the material that formerly appeared there will be deleted.

Lock Code - (Cols. 16-17)

A lock code is associated with each material specification. Any User has access to the entire material library but modification of an existing material specification requires a prior knowledge of the lock code. The lock code is not disclosed by displays of the material library. As a consequence revision or deletion of any entry remains under the control of the initiator. The lock code may be any combination of alphameric characters.

Material Identification - (Cols. 18-41)

The material identification is left to the discretion of the analyst.

Material Tape Input - (Cols. 42-50)

The information which appears in those columns is self explanatory. For example, if the material is isotropic, and a print of the material tape is desired, the User simply places an 'X' in Column 42 and in Column 48.

Number of Material Points - (Cols. 51-52)

The number entered in these columns determines the number of material (temperature) points which will appear in the material properties table. At the present time, the number of allowable material points is ≤ 9 .

Material Properties Table

All the data input to the Material Properties Table, appears in floating point form. If the material in question is isotropic, only the Modulus of Elasticity, E , Poisson's Ratio, ν , and the coefficient of thermal expansion, α , are needed for each temperature point. The value of the modulus of shearing rigidity, G , is calculated by the program.

For an orthotropic material there are three cards required for each temperature point entered. For these cases, the value of, G_{ij} , must be entered by the User for each of the x, y, and z directions.

IMPORTANT REMINDERS:

- (1) Poisson's Ratio, ν_{ij} is defined as strain induced in the j direction by a stress in the i direction.
- (2) For isotropic materials Poisson's ratio, ν_{ij} , must lie between 0.0 and 0.5 ($0.0 \leq \nu_{ij} \leq 0.5$) Violation of this rule causes the material properties matrix $[E]$ to become non-positive definite.
- (3) A maximum of nine (9) material (temperature) points may be input per material and a minimum of 1 must appear for a material of constant temperature.
- (4) Certain limits on material properties must be observed. These limits are as follows:
 - (a) Young's Modulus (E) $E > 1.0$
 - (b) Thermal Coefficient (α) $-1.0 < \alpha < 1.0$
 - (c) Shear Modulus (G) $G > 1.0$
- (5) If it is desired to bypass the internal check of input material properties an asterisk (*) is placed in Column 10, the first column of the material number in the third entry.
- (6) The Number of Requests and/or Revisions of Material Tape must be specified on the System Control Information Data Form (Figure II-3).

MATERIAL (//)
1 2 3 4 5 6

(//)
7 8 9
No. of Requests

MAGIC STRUCTURAL ANALYSIS SYSTEM
INPUT DATA FORMAT

MATERIAL TAPE INPUT

Request Number	MATERIAL NUMBER		Lock Code	MATERIAL IDENTIFICATION																Isotropic	Orthotropic	Plastic Isotropic	Plastic Orthotropic	Add Plastic	Delete Material	Print Tape	Print Mat'l. Table	Print Mat'l. Summary	Number of Mat'l. Pts.	Number of Plastic Pts.	MASS DENSITY															
				1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6												7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4			

(//)

MATERIAL PROPERTIES TABLE

TEMPERATURE					
1	2	3	4	5	6
7	8	9	0	1	2

24

YOUNGS MODULI													POISSONS RATIOS													COEF. OF THERMAL EXPANSION													RIGIDITY MODULI																																																																																																																																																																																					
Direction													Direction													Direction													Direction																																																																																																																																																																																					
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2																																																																																																																																																																																			
ν_{xy}													ν_{yz}													ν_{zx}													G_{xy}													G_{yz}													G_{zx}																																																																																																																																																											

FIGURE II-2 MATERIAL TAPE INPUT DATA FORM

[illegible]

4. System Control Information Section (Figure II-3)

The prelabeled System Control Information data form is shown in Figure II-3. The first entry on the form is pre-labeled SYSTEM, and requires no input from the User.

The second entry on the form contains the eleven (11) items of information defined in the list which follows. All items of information are written in fixed point notation with the exception of Item 11 which is written in floating point form.

(1) Number of System Grid Points - (Cols. 1-6)

The number of System Grid Points is equal to the largest integer number which participates in element connection (assembly). This number is best obtained from a scan of the completed Element Control Data Cards. These will be described in detail in a subsequent data section.

(2) Number of Input Grid Points - (Cols. 7-12)

The number of input grid points is equal to the integer number of grid points for which coordinates are data specified. This number is best obtained from a scan of the completed Grid Point Coordinate Input Section. The number entered is equal to the total number of grid points for which coordinates are specified. (Maximum allowable = 999).

(3) Number of Degree of Freedom/Grid Point - (Cols. 13-14)

The number of degrees of freedom per grid point is dictated by the type of finite elements which are being used for any particular analysis.

(a) Three (3) Degrees of Freedom per Grid Point

Triangular Cross-Section
Ring Element

(b) Six (6) Degrees of Freedom per Grid Point

- 1 - Frame Element
- 2 - Quadrilateral Shear Panel Element
- 3 - Quadrilateral Thin Shell Element
- 4 - Triangular Thin Shell Element

(c) Nine (9) Degrees of Freedom per Grid Point

Toroidal Thin Shell Ring Element

At the present time, only elements that are characterized by the same number of degrees of freedom per grid point can be used together in any one analysis. For example, the toroidal thin shell ring and frame elements are not compatible.

(4) Number of Load Conditions - (Cols. 15-16)

The Number of Load Conditions is equal to the number of external load conditions that are applied to the system. Note that external loads are not to be confused with element applied loadings such as temperature and pressure.

At least one load condition is required for every analysis even if there are no external loads applied to the system. An entry must be made in the External Loads Section even for zero loads.

At the present time, the maximum number of external load conditions allowed is one hundred (100).

(5) Number of Initially Displaced Grid Points - (Cols. 17-22)

Initially displaced grid points are present only if function minimization (or other iterative technique) is employed in the analysis. In the present MAGIC System no provision is made for initially displaced grid points. Therefore, no entries should be made in this location.

(6) Number of Prescribed Displaced Grid Points -
(Cols. 23-28)

Applied loading may be prescribed in terms of non-zero displacement values. A single displacement load condition can be accommodated per execution. The number of prescribed displaced grid points is the number of grid points that are assigned known values of displacement other than zero. If there are no prescribed non-zero grid point displacements, this entry is ignored by the User.

(7) Number of Grid Point Axes Transformation Systems -
(Cols. 29-30)

The number of grid point axes transformation systems required by the problem is entered in this location. If grid point axes are being used in an analysis, the number of systems employed is best obtained from a scan of the completed Rotational Transformation (GRAXES or TRANS) Sections which will be described in a following section. If there are no grid point axes transformations employed, this entry is ignored by the User.

(8) Number of Elements - (Cols. 31-36)

The total number of elements to be employed in the analysis is entered in this location. The allowable number of elements is governed by the order of the unreduced stiffness matrices for each individual element. The sum of the element stiffness matrix orders must be ≤ 2000 . For example, the element stiffness matrix for the quadrilateral thin shell element is of the order 48 by 48. Therefore a maximum of 41 quadrilateral thin shell elements can be used in any one analysis because $48 \times 41 = 1968$ which is less than 2000.

(9) Number of Requests and/or Revisions of Material
Tape - (Cols. 37-38)

The total number of requests and/or revisions being made against the material tape for any particular run are entered in this location. This number must be equal to the number which appears on the second entry under Section II, Material Tape Input Section (Figure II-2).

(10) Number of Input Boundary Condition Points
(Cols. 39-44)

The Number of Input Boundary Condition Points is equal to the number of exceptions to the MODAL card associated with the Boundary Condition Section. This number is best obtained by scanning the completed Boundary Condition Section and counting the total number of grid points which are entered as Listed Input.

(11) T_o for Structure (With Decimal Point) -
(Cols. 45-52)

The number entered in this location is equal to the equilibrium temperature for the structure to be analyzed. If a value is not entered in this location, an ambient temperature of zero degrees will be assumed.

If a thermal stress analysis is being run, then the ambient temperature must be entered if different than zero degrees.

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

SYSTEM CONTROL INFORMATION

ENTER APPROPRIATE NUMBER, RIGHT
ADJUSTED, IN BOX OPPOSITE
APPLICABLE REQUESTS

		S	Y	S	T	E	M	
		1	2	3	4	5	6	
1. Number of System Grid Points		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	(/)
2. Number of Input Grid Points		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
		7	8	9	10	11	12	
3. Number of Degrees of Freedom/Grid Point						<input type="text"/>	<input type="text"/>	
						13	14	
4. Number of Load Conditions						<input type="text"/>	<input type="text"/>	
						15	16	
5. Number of Initially Displaced Grid Points		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
		17	18	19	20	21	22	
6. Number of Prescribed Displaced Grid Points		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
		23	24	25	26	27	28	
7. Number of Grid Point Axes Transformation Systems						<input type="text"/>	<input type="text"/>	
						29	30	
8. Number of Elements		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
		31	32	33	34	35	36	
9. Number of Requests and/or Revisions of Material Tape.						<input type="text"/>	<input type="text"/>	
						37	38	
10. Number of Input Boundary Condition Points		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
		39	40	41	42	43	44	
11. T_0 For Structure (With Decimal Point)		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	(/)
		45	46	47	48	49	50	51
								52

FIGURE II-3 SYSTEM CONTROL INFORMATION DATA FORM

5. Print Control Section (Figure II-4)

The labeled input data form provided for the Print Control Section is shown in Figure II-4.

On this form provision is made for printing the following items:

- (1) Assembly - Stiffness - (Col. 1)
- (2) Inverse - (Col. 2)
- (3) Triangularized - Stiffness - (Col. 3)
- (4) Displacements - (Col. 4)
- (5) Intermediate Function Minimization (Col. 5)

This section is not applicable in the present MAGIC System. It is included because it is anticipated that these and other options will be provided in this manner in future MAGIC Systems.

It is noted, however, that output from the Structural Monitor records the input data problem description as well as optional intermediate results. These optional intermediate results can be obtained using the element matrix print options which are described in the Element Control Section. It should also be noted that System level matrix output of final results is handled by the FORMAT standard matrix print capability.

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

PRINT OPTIONS

P	R	I	N	T		(/)
1	2	3	4	5	6	

PLACE 'X' IN BOX OPPOSITE
DESIRED PRINT

1. Assembly - Stiffness

☐

1

2. Inverse - Stiffness

☐

2

3. Triangularized - Stiffness

☐

3

4. Displacements

☐

4

5. Intermediate Function Minimization

☐

5

(/)

FIGURE II-4 PRINT CONTROL DATA FORM

6. Grid Point Coordinate Section (Figure II-5)

The labeled input data form provided for the Grid Point Coordinate Section is shown in Figure II-5. The first entry is prelabeled COORD and requires no input from the User.

The second and following entries contain information pertaining to the grid point numbers and their corresponding coordinates as follows.

Grid Point Number - (Cols. 7-12)

Grid points are entered as fixed point numbers and can be entered in any sequence desired. The maximum number of input grid points allowed is equal to 999. The total number of grid points entered in this section must be called out on the System Control Information Data Form in the entry reserved for the Number of Input Grid Points (Figure II-3).

Grid Point Coordinates - (Cols. 13-42)

Grid point coordinates are entered as floating point numbers. For each grid point number entered, a corresponding set of coordinates must also be entered. In the cartesian system these correspond to X, Y, and Z coordinates while in a cylindrical system, the corresponding coordinates are R, θ , and Z.

7. Grid Point Pressure Section (Figure II-6)

Pressure loading is considered as element applied loading and is transformed into consistent energy equivalent grid point loads within the MAGIC System. For convenience to the User, the pressures are input at each grid point. In order to accomplish this, a labeled input data form is provided for the Grid Point Pressure Section. This form is shown in Figure II-6.

In this section the User may employ two time saving devices.

- (1) MODAL - The MODAL option automates the specification of recurring values within a subset of input data. This feature enables data-prescribed initialization of tables. Explicit data requirements are thereby limited to specification of exceptions to the modal initialization.
- (2) REPEAT - A Repeat option is available which allows the User to retain data from a previous point for the indicated point.

The first entry on the form is prelabeled PRESS and requires no input from the User. The second entry on the form is the MODAL entry. MODAL is prelabeled in Columns 1-5 of this entry. Columns 13-42 are reserved for input pressures. This MODAL option allows the User to input a pressure value or set of pressure values (depending on the finite element employed) which the system applies to every grid point unless otherwise indicated by a separate entry on the grid point cards which follow the MODAL entry.

In the present MAGIC System, a maximum of two pressure values may be input per grid point. These pressures (entered in floating point notation) are interpreted according to the element which is being employed in the analysis.

The third and following entries in the section contain information pertaining to the Grid Point Numbers, Repeat Option and corresponding pressure values as follows:

Grid Point Number - (Cols. 7-11)

- (1) Grid points are entered as fixed point numbers.
- (2) Grid points can be entered in any sequence desired.
- (3) Along with each grid point a maximum of two pressure values can be input. The pressure entry is a function of the type of element or elements employed in the analysis (See Element Control Section).

Repeat - (Col. 12)

The repeat option allows the User to repeat re-occurring pressure from grid point to grid point. This is accomplished in the following manner. If pressures at a number of grid points are identical, the User enters the grid point number and associated pressure or pressures for the first grid point at which the pressure or pressures are acting. For the following points with identical pressures, just the grid point number (Col. 7-11) and an 'X' in the Repeat (Col. 12) need be entered.

REMEMBER:

- (1) For a problem with equal pressures at all grid points, only the MODAL entry is required.
- (2) The Repeat option can be used effectively for sets of grid points which have identical pressures.
- (3) For a problem where pressure loading is not pertinent, the User simply ignores the Grid Point Pressure Section.
- (4) Pressures associated with each finite element are completely described in the Element Control Section.
- (5) Pressure loadings are element related and are not to be confused with External Loads.

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1 2 3 4 5 6
P R E S S (/)

GRID POINT PRESSURES

1	2	3	4	5	6
M	O	D	A	L	

[illegible][illegible]

FIGURE II-6 GRID POINT PRESSURE DATA FORM

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

GRID POINT PRESSURES
(continued)

[illegible]

FIGURE II-6 CONCLUDED

8. Grid Point Temperature Section - (Figure II-7)

Temperature loading is considered as element applied loading and is transformed into consistent energy equivalent grid point loads according to element type. For convenience to the User, the temperature values (or temperature gradients) are input at each grid point. In order to accomplish this, a labeled input data form is provided for the Grid Point Temperature Section. In this section (as in the Grid Point Pressure Section) the User may employ two time saving devices.

- (1) MODAL - The MODAL option automates the specification of recurring values within a subset of input data. This feature enables data-prescribed initialization of tables. Explicit data requirements are thereby limited to the specification of exceptions to the MODAL initialization.
- (2) REPEAT - A Repeat option is available which allows the User to retain data from a previous point for the indicated point.

The prelabeled input data form provided for the Grid Point Temperature Section is shown in Figure II-7. The first entry on the form is prelabeled TEMP and requires no input from the User.

The second entry on the form is the MODAL entry. MODAL is prelabeled in Columns 1-5 of this entry. Columns 13-42 are reserved for input temperatures (or temperature gradients). The MODAL option allows the User to input a temperature, or temperature gradient, (depending on the finite element employed) which the system applies to every grid point unless otherwise indicated by a separate entry on the grid point cards which follow the MODAL entry.

The second and following entries in the section contain information pertaining to the Grid Point Numbers, Repeat Option, and corresponding temperature values (or gradients) as follows:

Grid Point Number - (Cols. 7-11)

- (1) Grid points are entered as fixed point numbers.
- (2) Grid points can be entered in any sequence desired.

Repeat - (Col. 12)

The repeat option allows the User to repeat reoccurring temperatures (or gradients) from grid point to grid point. This is accomplished in the following manner. If temperatures at a number of grid points are identical, the User enters the grid point number and associated temperature data for the first grid point. For the following points having the same temperature data, just the grid point number (Col. 7-11) and an 'X' in the Repeat (Col. 12) need be entered.

From Figure II-7 it is noted that provision is made for three values of temperature (or temperature gradients) depending on what finite element is being used in the analysis. A complete description of each element along with appropriate instructions for the input of temperatures and temperature gradients will be presented in the Element Control Section.

In the present MAGIC System provision is not made for input into Cols. 33-42 which contain the quantity, T_3 . These columns should therefore be ignored by the User.

REMEMBER:

- (1) For a problem with equal temperatures at all grid points, only the MODAL entry is required.
- (2) The Repeat option can be used effectively for sets of grid points which have the same temperatures.
- (3) Remember to specify T_0 on the System Control Information Data Form (Figure II-3).
- (4) For a problem where temperature loading is not pertinent the User simply ignores the Grid Point Temperature Section.
- (5) Temperature loadings are element related and are not to be confused with External Loads.
- (6) The temperatures input in the Section must be consistent with the units of the coefficient of thermal expansion, α , which was input in the Material Tape Input Section (Figure II-2).

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

GRID POINT TEMPERATURES

1	2	3	4	5	6
T	E	M	P		

(/)

1	2	3	4	5	6
M	O	D	A	L	

T E M P E R A T U R E S																															
T ₁						T ₂						T ₃																			
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2

(/)

[illegible]

FIGURE II-7 GRID POINT TEMPERATURE DATA FORM

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

GRID POINT TEMPERATURES (continued)

[illegible]

FIGURE II-7 CONCLUDED

9. Rotational Transformations Section -
Input Matrices - (Figure II-8)

In general, a reference axis system is associated with each grid point. This Local System (\bar{X} , \bar{Y} , \bar{Z}) may be specified in two ways. Firstly, it can be specified in terms of a 3×3 transformation relative to Global Axes (X , Y , Z). Alternatively, axes for a grid point may be specified by a set of coordinate points. The three by three transformation relative to Global Axes is then generated internally and exhibited in the edited display of problem description data. This feature enables treatment of boundary constraints arbitrarily oriented with respect to Global Axes. It also allows displacement output to be displayed in convenient Local Systems (e.g. shell midsurface and normal directions).

This section deals with the case in which the User inputs the three by three transformation matrices relative to Global Axes.

The labeled input data form provided for this section is shown in Figure II-8. The first entry is prelabeled TRANS and requires no input from the User. The second and subsequent entries contain the following items of information.

System Number - (Cols. 7-9)

The System Number is entered as a fixed point number. This number can be from 1 to n where n is the number of Local Systems which are being transformed. The value of n must be called out on the System Control Information Data Form (Figure II-3).

Number of Applicable Grid Points - (Cols. 10-12)

The entry made in this position is equal to the number of grid points which are contained in the Local System being transformed. This number is entered as a fixed point number.

The next entries made by the User pertain to the applicable grid points themselves. The number of grid points entered must be equal to the number which was entered in the Number of Applicable Grid Points Location (Cols. 10-12).

Applicable Grid Points - (Cols. 7-51)

There is provision made for a maximum of 15 applicable grid points per system number in this location. Each grid point is contained in a three column field and is entered as a fixed point number. If more than 15 grid points are applicable to one transformation, the remaining points must be defined under additional systems.


Transformation Matrix

The following entries are the elements of the three by three transformation matrix itself. The transformation matrix is of the form

$$\{X_G\} = [T] \{X_L\}$$

where the $\{X_G\}$ refers to Global (X, Y, Z) coordinate Vector and the $\{X_L\}$ refers to Local System (\bar{X} , \bar{Y} , \bar{Z}) coordinate Vector. The transformation matrix is of the form:

$$[T] = \begin{bmatrix} \lambda_x & u_x & v_x \\ \lambda_y & u_y & v_y \\ \lambda_z & u_z & v_z \end{bmatrix}$$

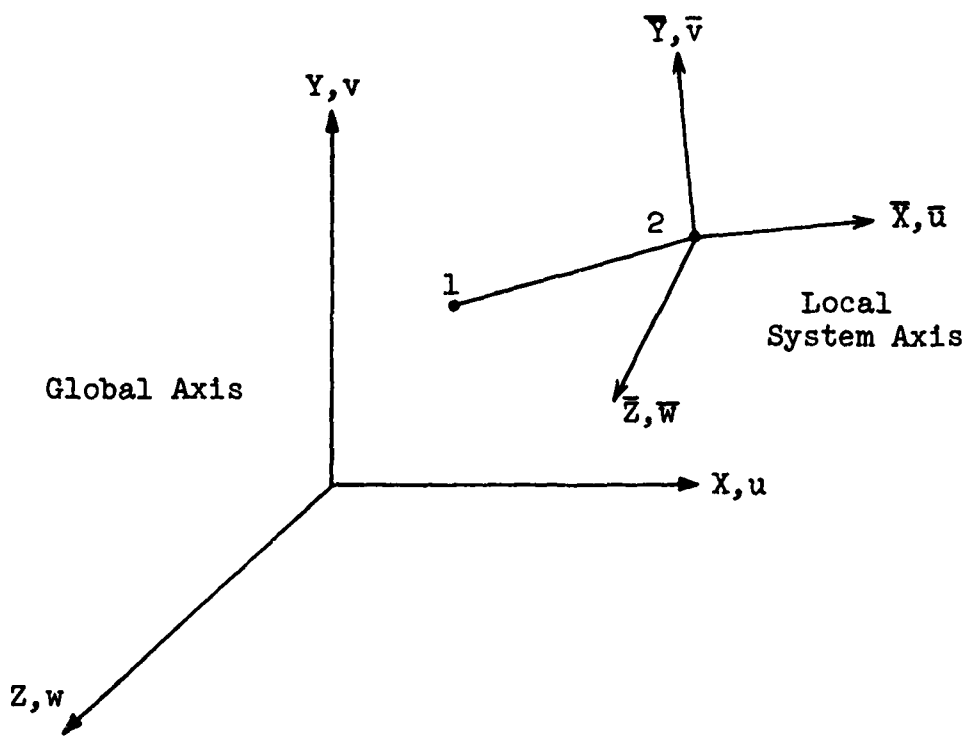

$$\begin{aligned}
 \lambda_{\bar{x}} &= \cos \theta_{x\bar{x}} & u_{\bar{x}} &= \cos \theta_{y\bar{x}} & v_{\bar{x}} &= \cos \theta_{z\bar{x}} \\
 \lambda_{\bar{y}} &= \cos \theta_{x\bar{y}} & u_{\bar{y}} &= \cos \theta_{y\bar{y}} & v_{\bar{y}} &= \cos \theta_{z\bar{y}} \\
 \lambda_{\bar{z}} &= \cos \theta_{x\bar{z}} & u_{\bar{z}} &= \cos \theta_{y\bar{z}} & v_{\bar{z}} &= \cos \theta_{z\bar{z}}
 \end{aligned}$$

and the input to the prelabeled input data form is as follows:

TRANSFORMATION MATRIX																													
COLUMN 1										COLUMN 2										COLUMN 3									
1	2	3	4	5	6	7	8	9	10	1	2	3	4	5	6	7	8	9	10	1	2	3	4	5	6	7	8	9	10
																													(/)
																													(/)
																													(/)

REMEMBER:

- (1) Total number of Systems which are being transformed must be set forth on the Systems Control Information Data Form (Figure II-3).
- (2) In this section the transformation matrices are input by the User. In the following section, titled GRAXES the transformation matrices are calculated internally by the MAGIC System.

1	2	3	4	5	6
7	8	9	10	11	12

(/)

SYSTEM NUMBER			Number of Applicable Grid Points		
7	8	9	10	11	12

APPLICABLE GRID POINTS												
1	2	3	4	5	6	7	8	9	10	11	12	13
7	8	9	10	11	12	13	14	15	16	17	18	19

SYSTEM NUMBER			Number of Applicable Grid Points		
7	8	9	10	11	12

APPLICABLE GRID POINTS												
1	2	3	4	5	6	7	8	9	10	11	12	13
7	8	9	10	11	12	13	14	15	16	17	18	19

SYSTEM NUMBER			Number of Applicable Grid Points		
7	8	9	10	11	12

APPLICABLE GRID POINTS												
1	2	3	4	5	6	7	8	9	10	11	12	13
7	8	9	10	11	12	13	14	15	16	17	18	19

SYSTEM NUMBER			Number of Applicable Grid Points		
7	8	9	10	11	12

APPLICABLE GRID POINTS												
1	2	3	4	5	6	7	8	9	10	11	12	13
7	8	9	10	11	12	13	14	15	16	17	18	19

SYSTEM NUMBER			Number of Applicable Grid Points		
7	8	9	10	11	12

APPLICABLE GRID POINTS												
1	2	3	4	5	6	7	8	9	10	11	12	13
7	8	9	10	11	12	13	14	15	16	17	18	19

FIGURE II-8 ROTATIONAL TRANSFORMATION (INPUT MATRICES) DATA FORM

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

ROTATIONAL TRANSFORMATIONS (INPUT MATRICES)

LE GRID POINTS															
	5	6	7	8	9	10	11	12	13	14	15				
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1

(/)

TRANSFORMATION MATRIX															
COLUMN 1				COLUMN 2				COLUMN 3							
1	2	3	4	5	6	7	8	9	10	11	12	1	2	3	4

(/)

(/)

(/)

LE GRID POINTS															
	5	6	7	8	9	10	11	12	13	14	15				
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1

(/)

TRANSFORMATION MATRIX															
COLUMN 1				COLUMN 2				COLUMN 3							
1	2	3	4	5	6	7	8	9	10	11	12	1	2	3	4

(/)

(/)

(/)

LE GRID POINTS															
	5	6	7	8	9	10	11	12	13	14	15				
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1

(/)

TRANSFORMATION MATRIX															
COLUMN 1				COLUMN 2				COLUMN 3							
1	2	3	4	5	6	7	8	9	10	11	12	1	2	3	4

(/)

(/)

(/)

LE GRID POINTS															
	5	6	7	8	9	10	11	12	13	14	15				
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1

(/)

TRANSFORMATION MATRIX															
COLUMN 1				COLUMN 2				COLUMN 3							
1	2	3	4	5	6	7	8	9	10	11	12	1	2	3	4

(/)

(/)

(/)

LE GRID POINTS															
	5	6	7	8	9	10	11	12	13	14	15				
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1

(/)

TRANSFORMATION MATRIX															
COLUMN 1				COLUMN 2				COLUMN 3							
1	2	3	4	5	6	7	8	9	10	11	12	1	2	3	4

(/)

(/)

(/)

T MATRICES) DATA FORM

10. Rotational Transformations Section - General Trans. Matrices (Figure II-9)

A reference axis system is normally associated with each grid point. This Local System (X, Y, Z) may be specified in two ways. Firstly, it can be specified in terms of a 3×3 transformation relative to Global Axes (X, Y, Z). Alternatively, axes for a grid point may be specified by a set of coordinate points. The three by three transformation relative to Global Axes is then generated internally and exhibited in the edited display of problem description data. This feature enables treatment of boundary constraints arbitrarily oriented with respect to Global Axes. It also allows displacement output to be displayed in convenient Local Systems (e.g. shell midsurface and normal directions).

This section deals with the case in which the transformation matrices are generated internally by the MAGIC System based on instructions supplied by the User.

The labeled input data form provided for this section is shown in Figure II-9. The first entry is prelabeled GRAXES and requires no information from the User. The second and subsequent entries contain the following items of information.

System Number - (Cols. 7-9)

The grid point triad System Number is an integer identification code which enables convenient and explicit reference to particular grid point axes transformations of the form

$$\{X_G\} = [T] \{X_L\}$$

$\{X_G\}$ = Global Coordinate Vector

$\{X_L\}$ = Local System Coordinate Vector

$[T]$ = Transformation Matrix

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR ARE
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

Local Axis Direction - (Cols. 10-12)

A grid point axis system is described by specifying the identification numbers of two grid points which lie along one axis together with the identification number of a gridpoint, which lies in one of the Local coordinate planes. The integer number '1' is placed in Column 10, 11, or 12, corresponding to the respective definition of the \bar{X} , \bar{Y} , or \bar{Z} axis by two coordinate points.

Plane Definition Grid Point Numbers - (Cols. 13-24)

The grid point number column 1 and 2 identify the two grid points which lie along an axis of the grid point coordinate system. The positive direction is assumed from 1 toward 2. The coordinate plane (in which the coordinate point associated with the grid-point column labeled 3 resides), depends upon the axis defined by the first two points. The interpretation is as follows:

- (1) If points 1 and 2 define the \bar{X} -axis then point 3 lies in the (\bar{X}, \bar{Y}) plane.
- (2) If points 1 and 2 define the \bar{Y} -axis then point 3 lies in the (\bar{X}, \bar{Y}) plane.
- (3) If points 1 and 2 define the \bar{Z} -axis then point 3 lies in the (\bar{X}, \bar{Z}) plane.

Applicable Grid Point Numbers - (Cols. 25-69)

This data specifies the list of grid points associated with the grid point axis coordinate system identification number. If the list length exceeds the available space on the first line, then the remaining points must be redefined under additional Systems.

REMEMBER:

- (1) Total number of Systems which are being transformed must be set forth on the Systems Control Information Data Form (Figure II-3).
- (2) In this section the transformation matrices are generated internally by the System. In the preceding section entitled TRANS the transformation matrices were input by the User.

ROTATIONAL TRANSFORMATIONS (Generate Transformation Matrices)

SYS.	Lead Axis Direction			Place Definition Grid Point Numbers			APPLICABLE GRID POINT NUMBERS														
	X	Y	Z	1	2	3	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0	10	11	12	1	2	3	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
72.0				1	2		1	2	3	4	5	6	7	8	9						

FIGURE II-9 ROTATIONAL TRANSFORMATION (GENERATE TRANS. MATRICES) DATA FORM

11. Boundary Condition Section (Figure II-10)

The labeled input data form provided for the Boundary Condition Section is shown in Figure II-10. Three types of input codes define the types of displacement allowed:

- (a) 0 = No displacement allowed,
- (b) 1 = Unknown Displacement and
- (c) 2 = Known (Prescribed) Displacement.

The input code designated, '2', Known Displacement, pertains to displacement loading. If displacement loading is present in an analysis, the degrees of freedom which have known values of displacement are designated with the input code '2'. A separate prelabeled input data form designated as the prescribed Displacement Section is provided so that the User may input the values of the known (prescribed) displacements associated with these degrees of freedom. This form will be described in detail in the following section.

With regard to the Boundary Condition Section, the User may employ two time saving devices.

- (1) MODAL - The MODAL option automates the specification of reoccurring values within a subset of input data. This feature enables data-prescribed initialization of tables. Explicit data requirements are thereby limited to specification of exceptions to the MODAL initialization.
- (2) REPEAT - A Repeat option is available which allows the User to retain data from a previous point for the indicated point.

The first entry on the Boundary Condition form is prelabeled BOUND and requires no input from the User. The second entry on the form is the MODAL entry. MODAL is pre-labeled in columns 1-5 of this entry. Columns 13-21 are reserved for boundary conditions. The MODAL option allows the User to input a set of boundary conditions which the system applies to every grid point unless otherwise indicated by a separate entry on the grid point cards (Listed Input) which follow the MODAL entry.

A total of nine degrees of freedom per point is provided for on the prelabeled input forms. Three translation degrees of freedom (u, v, w), three rotations ($\theta_x, \theta_y, \theta_z$) and three generalized degrees of freedom (1, 2, 3). The total number of degree of freedom entries per point is a function of the plug type being employed in the analysis.

- (1) Triangular Cross-Section Ring - Three Degree of Freedom Entries per Point: Corresponding Displacements (u, v, w).
- (2) Frame Element, Quadrilateral Shear Panel, Quadrilateral and Triangular Thin Shell Elements - Six Degree of Freedom Entries per Point: Corresponding Displacements ($u, v, w, \theta_x, \theta_y, \theta_z$).
- (3) Toroidal Thin Shell Ring Element - Nine Degree of Freedom Entries per Point: Corresponding Displacements ($u, o, w, o, \theta_y, o, u', o, w''$).

Following the MODAL entry are the entries pertaining to Listed Input. Included are Grid Point Numbers, Repeat Option and corresponding boundary conditions as follows:

Grid Point Number - (Cols. 7-11)

- (1) Grid points are entered as fixed point numbers.
- (2) Grid points can be entered in any order.

Repeat - (Col. 12)

The repeat option allows the User to repeat reoccurring boundary conditions, from grid point to grid point. This is accomplished in the following manner. If the boundary conditions at a number of grid points are identical, the User enters the grid point number and associated boundary conditions for the first grid point. For the following points with identical boundary conditions, just the grid point number (Cols. 7-11) and an 'X' in the Repeat (Col. 12) need be entered.

REMEMBER:

- (1) The repeat option can be used effectively for sets of grid points which have identical boundary conditions.
- (2) The Number of Input Boundary Condition Points must be specified on the System Control Information Data Form (Figure II-3). This value is equal to the number of exceptions to the MODAL card.

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

BOUNDARY CONDITIONS (continued)

INPUT CODE 0 - No Displacement Allowed
1 - Unknown Displacement
2 - Known Displacement

LISTED INPUT

[illegible]

FIGURE II-10 CONCLUDED

12. Prescribed Displacement Section (Figure II-11)

Applied loading may be prescribed in terms of non-zero displacement values. A single displacement load condition can be accommodated per execution. The number of prescribed displaced grid points is the number of grid points that are assigned known values of displacement other than zero.

This section is used in conjunction with the Boundary Condition Section when an input code '2' is used in that section. This code designates that the grid point degree of freedom for which '2' is entered has a prescribed displacement. In order to input the actual value for each prescribed displacement, the Prescribed Displacement Data Form is provided and is shown in Figure II-11.

A total of nine possible prescribed displacements per grid point are provided for in the section. These are as follows:

- (1) three Translations (u, v, w)
- (2) three Rotations ($\theta_x, \theta_y, \theta_z$) and
- (3) three Generalized Displacements (1, 2, 3).

The total number of degree of freedom entries per grid point is a function of the plug type being employed in the analysis.

- (1) Triangular Cross-Section Ring - Three Degree of Freedom Entries per Point: Possible Displacements (u, v, w).
- (2) Frame Element, Quadrilateral Shear Panel, Quadrilateral and Triangular Thin Shell Elements - Six Degree of Freedom Entries per Point: Possible Displacements ($u, v, w, \theta_x, \theta_y, \theta_z$).
- (3) Toroidal Thin Shell Ring Element - Nine Degree of Freedom Entries per Point: Possible Displacements ($u, o, w, o, \theta_y, o, u', o, w''$).

Where the (u', o, w'') correspond to the last three generalized displacements (1, 2, 3) which will be completely described in the Toroidal Ring portion of the Element Control Section.

The applicable values of prescribed displacement are entered as floating point numbers. It is important to note that Key punch Personnel have been instructed to ignore entries that are not filled in. Blank entries are not considered as zero's. Zero's must be entered in an entry when applicable.

The first entry on the Prescribed Displacement Data Form is prelabeled PRDISP and requires no information from the User. The second entry is prelabeled PCOND in columns 1-5. Columns 7-11 are reserved for the Condition Number.

Condition Number - (Cols. 7-11)

The condition number is a fixed point number. In the present MAGIC System, only one (1) displacement load condition can be accommodated per execution. Therefore, the number '1' is entered in this location.

The next entry on the form is the MODAL entry. This entry allows the User to input a set of prescribed displacements which the program assumes to apply to every grid point unless otherwise indicated by a separate grid point entry on the grid point cards. MODAL is prelabeled on this card and the only information required by the User are the prescribed displacement values which have been discussed previously.

The third and following entries contain information pertaining to the Grid Point Numbers, Repeat Option and prescribed displacement values as follows:

Grid Point Number - (Cols. 7-11)

- (1) Grid Points are entered as fixed point numbers.
- (2) Grid Points can be entered in any sequence desired.

Repeat - (Col. 12)

The repeat option allows the User to repeat values of prescribed displacements from grid point to grid point. This is accomplished in the following manner. If the prescribed displacements at a number of grid points are identical, the User enters the grid point number and associated displacements for the first grid point. For the following points with identical displacements, only the grid point number (Col. 7-11) and an 'X' in the Repeat (Col. 12) need be entered.

REMEMBER:

- (1) Zeros must be entered when applicable. Blanks are not zeros.
- (2) If the number of degree of freedom entries per grid point is equal to three (3), then only the translation entry (u, v, w) is applicable. The other two entries (Rotations and Generalized) are ignored by the User.
- (3) If the number of degree of freedom entries per grid point is equal to six (6) then the translation and rotation entries must be considered. If for instance, at a certain grid point there are prescribed values of translations, but not rotations, zeros must be entered for the rotation values or the rotation entry will be ignored by the Key punch Operator. This would cause premature termination of the run since six degree of freedom elements require two cards per grid point.
- (4) If the number of degree of freedom entries per grid point is equal to nine (9) - (Toroidal Ring Element) then entries for translation, rotation and generalized values of displacement must be entered where applicable. If some of these entries are equal to zero, these zero values must still be entered otherwise the entries will be ignored by the Key punch Operator causing termination of the run.
- (5) The Number of Prescribed Displaced Grid Points must be specified on the System Control Information Data Form (Figure II-3). This value is equal to the number of exceptions to the MODAL card.

SUMMARY:

For convenience the last three Reminders are briefly stated as,

- (1) Three (3) Degree of Freedom Entries per Grid Point; 1 Prescribed Displacement Card Required per Grid Point.

- (2) Six (6) Degree of Freedom Entries per
Grid Point; 2 Prescribed Displacement Cards
Required per Grid Point.
- (3) Nine (9) Degree of Freedom Entries per
Grid Point; 3 Prescribed Displacement Cards
Required per Grid Point.

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

PREScribed DISPLACEMENTS

[illegible][illegible][illegible][illegible]

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR are
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

13. External Grid Point Load's Section - (Figure II-12)

Concentrated loads are specified by component against grid point number. For convenience the axes of reference may be specified optionally as Global or Local System (grid point) Axes.

The labeled input data format provided for the External Grid Point Loads Section is shown in Figure II-12. A total of nine possible external loads are provided for in this section. These are as follows:

- (1) three Forces (F_x , F_y , F_z),
- (2) three Moments (M_x , M_y , M_z) and
- (3) three Generalized Forces (F_1 , F_2 , F_3).

The total number of degree of freedom entries per grid point is dependent on the plug type being employed in the analysis. Three types appear in the MAGIC System, i.e.

- (1) Triangular Cross-Section Ring - Three Degree of Freedom Entries per Point: Possible External Forces (F_x , F_y , F_z).
- (2) Frame Element, Quadrilateral Shear Panel, Quadrilateral and Triangular Thin Shell Elements - Six Degree of Freedom Entries per Point: Possible External Forces (F_x , F_y , F_z , M_x , M_y , M_z).
- (3) Toroidal Thin Shell Ring - Nine Degree of Freedom Entries per Point: Possible External Forces (F_x , 0, F_z , 0, M_y , 0, F_1 , 0, F_3). The F_1 , 0 and F_3 are a set of generalized forces which will be described in detail in the section dealing with the Toroidal Ring Element.

The applicable concentrated Grid Point Loads are entered as floating point numbers. It is important to note that Key punch Personnel have been instructed to ignore entries that are not filled in. Blank entries are not considered as zeros. Zeros must be entered in an entry when applicable.

The first entry on the External Grid Point Loads Form is prelabeled LOADS and requires no information from the User. The second entry is prelabeled LCOND in Columns 1-5. The User supplies two items of information for this entry as follows:

Condition Number - (Cols. 7-11)

- (1) Each external load condition requires a number.
- (2) Each External Load Condition is entered on a Separate labeled input data form.
- (3) In every analysis, the User must designate at least one (1) External Load Condition. This applies even when there are no External Loads acting on the system.
- (4) The condition number is entered as a fixed point number.

Element Applied Load Scalar - (Cols. 13-22)

The Element Applied Load Scalar (EALS), entered as a floating point number, is a device which enables the User to scale the element applied load up or down by a scalar multiplier. Element applied loading is pressure or thermal loading. The EALS is utilized in the following way.

$$\text{Total Load} = \text{External Grid Point Loads} + (\text{EALS}) \\ \times \text{Element Applied Loads}$$

For multiple load conditions, the EALS is always applied to the original element applied loads. As an example, if for the first loading condition, the EALS = 0.50, the Total Load would equal the following:

$$\text{Total Load} = \text{External Grid Point Loads} + (0.5) \\ \times \text{Element Applied Loads}$$

If for the second load condition, the EALS = 0.10, the Total Load would equal the following:

$$\text{Total Load} = \text{External Grid Point Loads} + (0.1) \\ \times \text{Original Element Applied Loads}$$

The next entry on the form is the MODAL entry. This entry allows the User to input a set of External Loads which the program assumes to apply to every grid point unless otherwise indicated by a separate grid point entry on the grid point cards. MODAL is prelabeled on this card and the only information required by the User are the External Load Values which have been discussed previously.

The third and following entries contain information pertaining to the Grid Point Numbers, Repeat Option and External Loads, as follows:

Grid Point Number - (Cols. 7-11)

- (1) Grid Point Numbers are entered as fixed point numbers.
- (2) Grid Point Numbers can be entered in any sequence desired.

Repeat - (Col. 12)

The repeat option allows the User to repeat values of external loads from grid point to grid point. This is accomplished in the following manner. If the external loads at a number of grid points are identical, the User enters the grid point number and associated external loads for the first grid point. For the following points having identical loads, only the grid point number (Col. 7-11) and an 'X' in the Repeat (Col. 12) need be entered.

REMEMBER:

- (1) The External Grid Point Loads Section must be utilized even if there are no external grid point loads acting on the structure. For this case, only the MODAL Card is required with zero entries in the appropriate locations.
- (2) The Repeat option can be used effectively for sets of grid points having identical external loads.
- (3) External Grid Point Loads are not element related and should not be confused with element applied loads such as pressures and thermal loading.
- (4) The number of external load conditions must be specified on the System Control Information Data Form (Figure II-3).

- (5) Zeros must be entered when applicable. Blanks are not zeros.
- (6) If the number of degree of freedom entries per grid point is equal to three (3) then only the force values (F_x , F_y , F_z) are applicable. The other two entries (Moments and Generalized Forces) are ignored by the User.
- (7) If the number of degree of freedom entries per grid point is equal to six (6) then the Force and Moment Values must be considered. If for instance, at a certain grid point there are applied forces but no applied moments, zeros must be entered for the Moment values or this entry will be ignored by the Key punch Operator. This would cause premature termination of the run since six degree of freedom elements require two External Load cards per grid point.
- (8) If the number of degree of freedom entries per grid point is equal to nine (9) then Forces, Moments and Generalized Forces must be entered. If some of these entries are equal to zero, these zero values must still be entered otherwise the entries will be ignored by the Key punch Operator causing premature termination of the run.

SUMMARY:

For convenience the last three Reminders are briefly stated as,

- (1) Three (3) Degree of Freedom Entries per Grid Point;
1 External Load Card Required per Grid Point.
- (2) Six (6) Degree of Freedom Entries per Grid Point;
2 External Load Cards Required per Grid Point.
- (3) Nine (9) Degree of Freedom Entries per Grid Point;
3 External Load Cards Required per Grid Point.

BAC 1627

1	2	3	4	5	6
LOADS					

(/)

1												2											
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2		
CONDITION												SCALAR											

Condition
Number

Scalar

MAGIC STRU
INP

1	2	3	4	5	6
MODAL					

FORCE VALUES																																			
F _x												F _y												F _z											
1												2												3											
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2				

M _x											
1											
1	2	3	4	5	6	7	8	9	0	1	2

Grid Pt.
Number

1												2												3												4																																																																																																																																																																																																																																																																																																																											
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2																																																																																																																																																																																																																																																																																																																																

1												2																																																																																																																																																																																			
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2																																																																																																																																																																										

FIGURE II-12 EXTERNAL GRID POINT LOADS DATA FORM

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

EXTERNAL LOADS

[illegible][illegible]

14. Element Control Data Section (Figure II-13)

The Element Control Data Section establishes control on the types and number of elements which are to be used in a specific analysis. A prelabeled input data form is provided for the Element Control Data Section and is shown in Figure II-13. This form is applicable to all finite elements which are contained in the MAGIC Library. Upon examination of the form it is seen that certain data are applicable to all of the elements in the library while other data are element dependent.

The first entry on the form is prelabeled ELEM and requires no information from the User. The second and following entries contain the following information.

Element Number - (Cols. 7-10)

- (1) The element number which defines the element being considered is entered in this location.
- (2) Elements can be entered in any sequence desired.
- (3) The element number is entered as a fixed point number.

Plug Number - (Cols. 11-12)

- (1) Each finite element in the Element Library has an identification number as follows:
 - (a) Number 11 - Frame Element
 - (b) Number 25 - Quadrilateral Shear Panel
 - (c) Number 40 - Triangular Cross-Section Ring
 - (d) Number 30 - Toroidal Ring Element
 - (e) Number 21 - Quadrilateral Thin Shell
 - (f) Number 20 - Triangular Thin Shell
- (2) Identification numbers are entered as fixed point numbers.

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR ARE
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

Material Number - (Cols. 13-18)

The material number is the number of the material associated with the element in question. This number is referenced to the material tape. For instance if the User were using material number 138, this material would have had to be on the tape at the time of the run or be a material that the User was adding to the tape for this particular run.

Temperature Interpolate Option - (Col. 19)

The Temperature Interpolate Option is exercised in the following manner:

- (1) If an entry is not made in Column 19, the program will average the node point temperatures of the element in question and use this average temperature when establishing material properties from the material tape.
- (2) If a '1' is entered in Column 19, the program will use the Material Temperature entered in Columns 20-27 when establishing material properties from the material tape.
- (3) If a number n ($n > 1$) is entered in Column 19, then this number is equal to the number of node points which will participate in the averaging process. The first n node points entered in Columns 36-71 (Node Point Section), of the Element Control Data Section will then be used in the averaging process.

Material Temperature - (Cols. 20-27)

If the User exercises the Temperature Interpolate Option by placing a '1' in Column 19, then a temperature associated with the element in question should be entered in Columns 20-27 in a thermal stress analysis. The program will then use this temperature when establishing material properties from the Material Tape.

Repeat Element Matrices - (Col. 28)

Element matrices generated for assembly against a particular finite element specification can also be used for the next element in the calculation sequence. This avoids repeated calculation of identical element matrices. Experience indicates a high frequency of opportunities for exploiting this feature. Input data requirements and execution times can be significantly reduced with use of this feature. The option is exercised by the User by placing an 'X' in Col. 28 opposite the Element Number for which element matrices are to be repeated.

Element Input - (Col. 29)

Certain of the elements contained in the MAGIC System element library require Element Input peculiar to that element. All of the elements available in the MAGIC element library require Element Input with the exception of the Triangular Cross-Section Ring where it depends upon the type of analysis being performed. For elements which require Element Input, an 'X' is placed in Column 29.

A prelabeled input data form is provided especially for Element Input. This form will be discussed in detail immediately following the discussion of the Element Control Data input form.

Interpolated Input Print - (Col. 30)

If the User places an 'X' in Column 30, the following information is obtained:

- (1) Material Number
- (2) Material Identification
- (3) Type of Material, i.e. Isotropic or Orthotropic
- (4) Interpolated Material Properties, which include
 - (a) Temperature
 - (b) Young's Modulus
 - (c) Poisson's Ratio
 - (d) Thermal Expansion Coefficients
 - (e) Rigidity Moduli

Element Matrix Print - (Col. 31)

If the User places an 'X' in Column 31, a print of element matrices associated with the element in question is obtained.

Full Print (Col. 32)

If the User places an 'X' in Column 32 a total print of all element matrices and intermediate computations is obtained for the element in question. In general, this option is exercised when debugging a problem.

Number of Input Nodes - (Cols. 33-34)

The number of input nodes is the number of node points which define an element. The following number of node points are applicable to the elements in the MAGIC Library.

- | | |
|--------------------------------|---------------|
| (1) Frame Element: | 3 Node Points |
| (2) Quadrilateral Shear Panel: | 4 Node Points |
| (3) Toroidal Ring Element: | 2 Node Points |
| (4) Quadrilateral Thin Shell: | 8 Node Points |
| (5) Triangular Thin Shell: | 6 Node Points |

Number of Assembled Nodes - (Col. 35)

This entry is not used in the present MAGIC System. Therefore, an entry should not be made in this location.

Node Points - (Cols. 36-71)

These locations are reserved for the node points which describe the element in question. The User should note that three column fields are set aside for each node point. There are 12 locations set aside for node points. The last four locations (9, 10, 11, and 12) apply only to the quadrilateral and triangular thin shell elements. Their use will be fully described in the section which pertains to the quadrilateral and triangular thin shell elements.

REMEMBER:

The total Number of Elements must be called out on the System Control Information Data Form (Figure II-3).

[illegible]

15. Element Input Section - (Figure II-14)

A labeled input data form is provided for the Element Input Section. This form is used for elements which require Element Input: (Column 29 of the Element Control Data Section).

The first entry on the form is prelabeled EXTERN and requires no information from the User. The second entry on the input data form is the MODAL entry which allows the User to input element input which the program assumes to apply to every element unless otherwise indicated in the Element Number entries which follow the MODAL card. It can be seen from the input data form that the Element Input is labeled A, B, C, D, E, F with each item contained in a ten column field. These are the locations where the element input is entered, if the element being used requires element input. The entries made in locations A through F are entered as floating point numbers. The values which are entered in these locations are functions of the type of element being employed in the analysis. This input, therefore, is element related and will be explained in detail for each element in the following sections.

The third and following entries in the section contain information pertaining to the Element Numbers, Repeat Option and Element Input, i.e.:

Element Number - (Cols. 7-11)

- (1) Element numbers are entered as fixed point numbers.
- (2) Element numbers must be entered consistent with the order in which they were entered in the Element Control Data Section.

Repeat - (Col. 12)

The repeat option provides the User with the opportunity to repeat Element Input from element to element. This is accomplished in the following manner. If the element input for a number of elements is identical, the User enters the element number and associated element input for the first element. For the following elements having the same element input, only the Element Number (Col. 7-11) and an 'X' in the Repeat column need be entered.

REMEMBER:

- (1) For a problem with identical Element Input for every element only the MODAL entry is required.
- (2) The repeat option can be used effectively for sets of elements that have the same Element Input.
- (3) The type of element input required for an element is a function of element type. This element input will be completely described in the following sections.

ELEMENT INPUT

A	B	C	D	E	F
1	2	3	4	5	6
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3		

ELEMENT INPUT
(continued)

Element Number	A	B	C	D	E	F
1	1	3	3	4	5	6
7	2	2	3	4	5	6
8	3	3	3	4	5	6
9	4	4	4	5	6	7
0	5	5	5	6	7	8
1	6	6	6	7	8	9
2	7	7	7	8	9	0
3	8	8	8	9	0	1
4	9	9	9	0	1	2
5	0	0	0	1	2	3
6	1	1	1	2	3	4
7	2	2	2	3	4	5
8	3	3	3	4	5	6
9	4	4	4	5	6	7
0	5	5	5	6	7	8
1	6	6	6	7	8	9
2	7	7	7	8	9	0
3	8	8	8	9	0	1
4	9	9	9	0	1	2
5	0	0	0	1	2	3
6	1	1	1	2	3	4
7	2	2	2	3	4	5
8	3	3	3	4	5	6
9	4	4	4	5	6	7
0	5	5	5	6	7	8
1	6	6	6	7	8	9
2	7	7	7	8	9	0
3	8	8	8	9	0	1
4	9	9	9	0	1	2
5	0	0	0	1	2	3
6	1	1	1	2	3	4
7	2	2	2	3	4	5
8	3	3	3	4	5	6
9	4	4	4	5	6	7
0	5	5	5	6	7	8
1	6	6	6	7	8	9
2	7	7	7	8	9	0
3	8	8	8	9	0	1
4	9	9	9	0	1	2
5	0	0	0	1	2	3
6	1	1	1	2	3	4
7	2	2	2	3	4	5
8	3	3	3	4	5	6
9	4	4	4	5	6	7
0	5	5	5	6	7	8
1	6	6	6	7	8	9
2	7	7	7	8	9	0
3	8	8	8	9	0	1
4	9	9	9	0	1	2
5	0	0	0	1	2	3
6	1	1	1	2	3	4
7	2	2	2	3	4	5
8	3	3	3	4	5	6
9	4	4	4	5	6	7
0	5	5	5	6	7	8
1	6	6	6	7	8	9
2	7	7	7	8	9	0
3	8	8	8	9	0	1
4	9	9	9	0	1	2
5	0	0	0	1	2	3
6	1	1	1	2	3	4
7	2	2	2	3	4	5
8	3	3	3	4	5	6
9	4	4	4	5	6	7
0	5	5	5	6	7	8
1	6	6	6	7	8	9
2	7	7	7	8	9	0
3	8	8	8	9	0	1
4	9	9	9	0	1	2
5	0	0	0	1	2	3
6	1	1	1	2	3	4
7	2	2	2	3	4	5

16. Element Input Description

a. Frame Element (Ident. No. 11)

The frame discrete element is suitable for idealization of all structures which are adequately characterized by "beam theory". The frame element representation is developed in detail in Reference 4, and is shown in Figure II-15.

Geometric specification of the straight slender prismatic frame element is given, in part, by the end point coordinates. A third coordinate point in the element X-Y positive quadrant is required to specify twist θ_g orientation.

The cross-section of the frame element is assumed doubly symmetric with respect to element geometric axes. It is characterized by moments of inertia about the three element axes together with the cross-sectional area.

A linear Hooke's Law is assumed to govern material behavior. Temperature referenced mechanical and physical material properties are selected from the material library.

The frame element representation includes membrane, torsion, and flexure actions. These contributions are uncoupled in consequence of the zero curvature and cross-section symmetry assumptions.

Deformation behavior of the basic frame element is described by the twelve displacement degrees of freedom associated with the two grid points which it connects. Description of stress behavior is accepted as the definition of the twelve forces acting at the two grid point connections.

The following element matrices are provided for the Frame Element in the MAGIC System.

Stiffness

Stress

Distributed Loading

Axial Thermal Load

Incremental Stiffness

Referring to Figure II-15, it is seen that the Frame Element is defined by three node points and that the third point determines the X_g - Y_g plane of the element. This fact is important if distributed loading is present in an analysis. The frame element is provided with a linearly varying pressure load. Provision is made for loading in both the element Y_g and Z_g directions. The Grid Point Pressure Data Form (Figure II-6) is provided for these pressure loadings if they exist. On that form provision is made for three possible input pressures per grid point, P_1 , P_2 , and P_3 .

For the Frame Element, pressure (distributed Loading) values acting in the element Y_g direction correspond to pressures designated, P_1 on the Grid Point Pressure Data Form. These pressure values are input in Columns 13-22. Pressures acting in the element Z_g direction correspond to pressure designated, P_2 on the Grid Point Pressure Data Form. These pressures are input in columns 23-32. Pressures are defined as positive if acting in the direction of positive element Y_g or Z_g directions.

An axial thermal load vector is also provided for the Frame Element. It is based on the assumption of a uniform temperature over the length of the element. The latter being the average of the two grid point temperatures. The Grid Point Temperature Data Form (Figure II-7) is provided for these temperature values if they exist. In that section provision is made for three possible input temperatures, T_1 , T_2 , and T_3 .

For the Frame Element, the node point temperatures correspond to the temperature designated T_1 on the Grid Point Temperature Data Form. These temperature values are input in Columns 13-22 of that form.

The Element Control Data which is required for the Frame Element is as follows. (See Figure II-13)

Element Number - (Cols. 7-10)

Refer to Element Control Section.

Plug Number - (Cols. 11-12)

The Frame Element is identified as Number 11.

Material Number - (Cols. 13-18)

Refer to Element Control Section

Temperature Interpolate Option-(Col. 19)

If the User exercises this option, the program will average the node point temperatures of the element, and use this temperature when establishing material properties from the material tape. The Frame Element is defined by three node points as explained previously with the third node point establishing the twist orientation of the element. Because of this only the first two node points will participate in the temperature averaging process in general. Therefore a '2' is usually entered for the Frame Element in this column when the Interpolate Option is being exercised.

Material Temperature - (Cols. 20-27)

Refer to Element Control Section.

Repeat Element Matrices - (Col. 28)

Refer to Element Control Section.

Element Input - (Col. 29)

The Frame Element always requires Element Input therefore an 'X' is always placed in Column 29 when a Frame Element is being employed.

The following element input is required when using the Frame Element. (Refer to the Element Input Section and the Sample Element Input Data Form, Figure II-14). From the form, it is seen that the Element Input Locations are labeled A, B, C, D, E, F with each item contained in a ten column field.

The Element Input for the Frame Element consists of the following information.

Location A - (Cols. 13-22)

Cross-Section Area, (A)

Location B - (Cols. 23-32)

Area Moment of Inertia, I_{zz} which is defined in the following manner: (See Figure II-15)

$$I_{zz} = \int_A y^2 dA$$

Location C - (Cols. 33-42)

Area moment of inertia, I_{yy} which is defined in the following manner: (See Figure II-15)


$$I_{yy} = \int_A z^2 dA$$

Location D - (Cols. 43-52)

Torsional Moment of Inertia, J , which for a circular cross-section is equal to:

$$J = I_{zz} + I_{yy}$$

and for a rectangular cross-section.

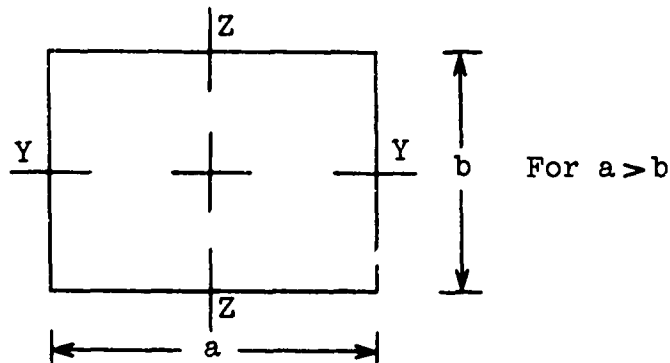

can be approximated by:

$$J = ab^3 \left(1/3 - 0.21 \, b/a \left[1 - (1/12)(b^4/a^4) \right] \right)$$

For $a > b$

Location E - (Cols. 53-62)

Eccentricity, ECC - An eccentric connection of a finite element to adjacent elements is effected by a special type of matrix transformation. Eccentricity of an element is specified through the element data and measured with respect to the element geometric axis.

The eccentricity is defined as the distance from the neutral axis of the eccentrically placed frame element to the connection line. The eccentricity is taken to be positive when the direction specified from the eccentric element to the connection line is in the positive local Y direction. (Figure II-15)

It should be noted by the User that if Eccentric Connections are not pertinent in an analysis then this entry is ignored by the User. It should also be noted that the Frame Element degenerates into an Axial Force Member if the only entry made in the Element Input Section is Location A. (Cross-Section Area).

Returning to the Element Control Data Section, the list of data items continues as follows;

Interpolated Input Print - (Col. 30)

Element Matrix Print - (Col. 31)

Full Print - (Col. 32)

} Refer to
Element Con-
trol Section

Number of Input Nodes - (Col. 33-34)

The Frame Element is always defined by 3 input nodes.

Number of Assembled Nodes - (Col. 35)

Not applicable.

Node Points - (Col. 36-71)

The three node points which define each Frame Element are entered in these locations.

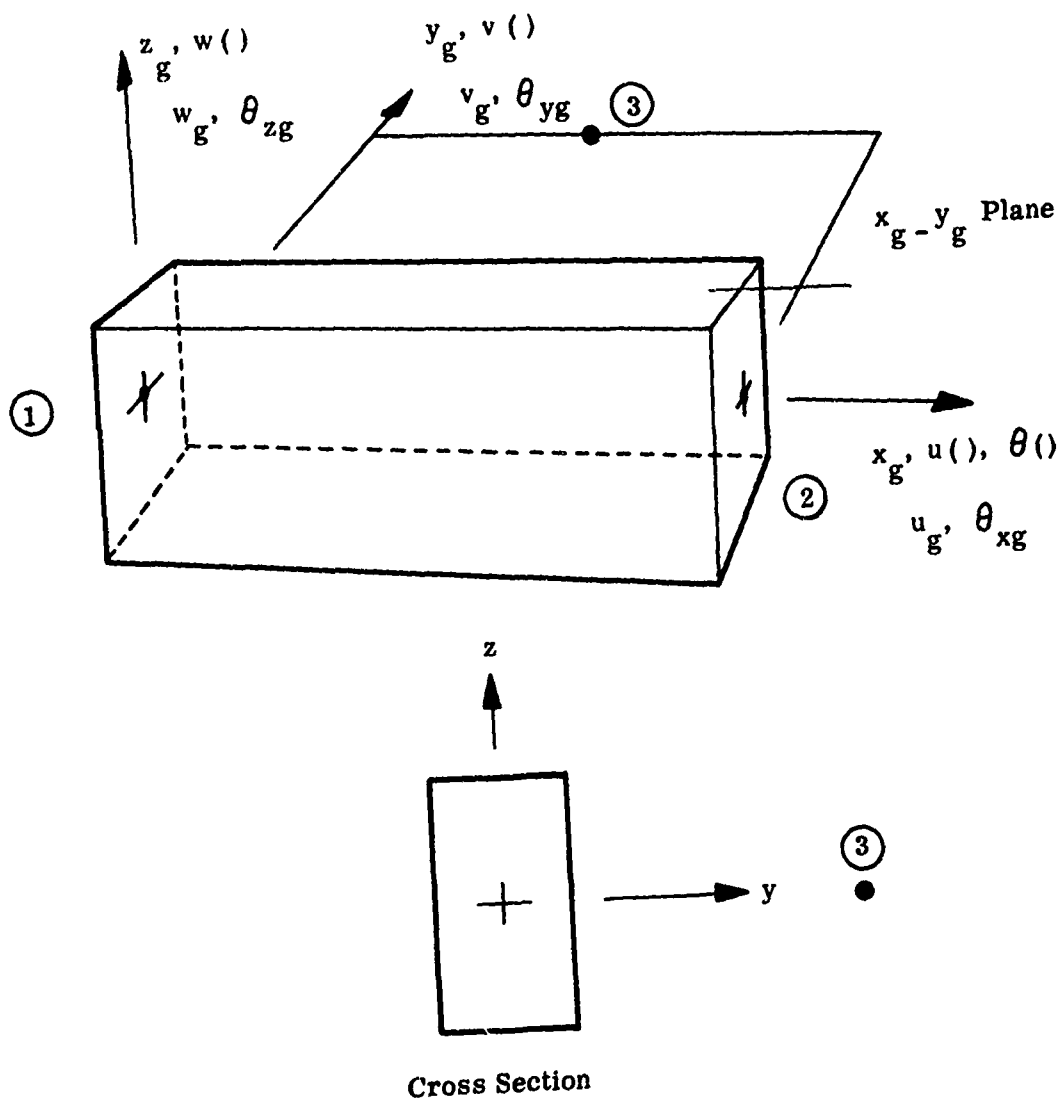


Figure II-15 Frame Element Representation

b. Quadrilateral Shear Panel (Ident. No. 25)

The quadrilateral shear panel is appropriate for representation of thin membranes. In order to transmit direct forces it must be used in combination with a truss specialization of the frame element. The shear panel element representation is developed in detail in Reference 5, and is shown in Figure II-16. The general quadrilateral shape of the shear panel is defined by the coordinates of the four corner points. Geometric definition is completed by specification of an effective uniform thickness.

A pure shear stress state is assumed. Stiffness coefficients are generated for corner point displacements under this pure shear assumption.

A deformation behavior of the shear panel discrete element is described by the eight corner point displacement degrees of freedom associated with the four grid points which it connects. Description of stress behavior is accepted as the constant shear stress value.

The following element matrices are provided for the quadrilateral shear panel in the MAGIC System.

Stiffness

Stress

The Element Control Data which is required for the Quadrilateral Shear Panel is as follows. (See Figure II-13)

Element Number - (Cols. 7-10)

Refer to Element Control Section

Plug Number - (Cols. 11-12)

The Quadrilateral Shear Panel is identified as Number 25.

Material Number - (Cols. 13-18)

Refer to Element Control Section

Temperature Interpolate Option - (Col. 19)

The Quadrilateral Shear Panel is designated by 4 node points. If the User desires to exercise the Temperature Interpolate Option, and average all four (4) of the node point temperatures, an entry is not made in Column 19. If the User only wants to use the first n node points in the averaging process ($n \leq 4$) then this number, n, is entered and the program will take the first n node points entered in Columns 36-71 and use these in the averaging process, when determining material properties. If the User desires to enter a Material Temperature in Columns 20-27 then a '1' is entered in Column 19 which tells the program to use this Material Temperature when establishing material properties from the tape.

<u>Material Temperature - (Cols. 20-27)</u>	} Refer to Element Control Section
<u>Repeat Element Matrices - (Col. 28)</u>	

Element Input - (Col. 29)

The Quadrilateral Shear Panel always requires Element Input. Therefore, an 'X' is always placed in Column 29 when a Quadrilateral Shear Panel is being employed.

The Element Input (Figure II-14) required for the Quadrilateral Shear Panel consists of the following information:

Location A - (Cols. 13-22)

Thickness, (t)

The above is the only Element Input which is required for the Shear Panel.

Returning to the Element Control Data Section, the list of data items continues as follows:

Interpolated Input Print - (Col. 30)

Refer to Element Control Section

Element Matrix Print - (Col. 31)

Full Print - (Col. 32)

} Refer to
Element
Control
Section

Number of Input Nodes (Cols. 33-34)

The Quadrilateral Shear Panel is always defined by 4 input nodes.

Number of Assembled Nodes - (Col. 35)

Not applicable.

Node Points - (Cols. 36-71)

The four node points which define each quadrilateral Shear Panel are entered in the first four entries provided in the Node Point Section of the Element Control Data Form.

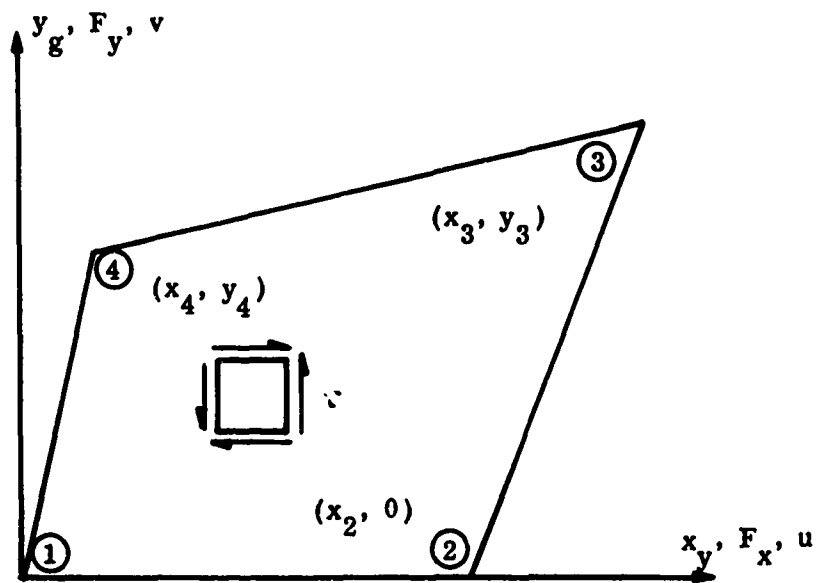


Figure II-16 Quadrilateral Shear Panel Representation

c. Triangular Cross - Section Ring (Ident. No. 40)

The triangular cross-section ring discrete element, shown in Figure II-17, is suitable for idealization of axisymmetric thick walled structures of arbitrary profile. A detailed development of the element representation is presented in Reference 6.

The ring element representation is written with respect to cylindrical coordinate axes. The configuration of the element is completely defined by specifying radial and axial coordinates of the corner points.

Cylindrical anisotropy is provided for in the mechanical and physical material properties of the ring element. Orientation of orthotropic axes in the (r, z) plane is data specified.

The element designation "ring" implies an axisymmetric geometric configuration. It has been further tacitly assumed that the applied loading is axisymmetric; it follows, as a consequence, that the displacement behavior is also.

A three dimensional axisymmetric stress state is assumed. Linear Polynomial functions are employed for displacement mode shapes leading to constant element strain and stress states.

Element field loads are assumed constant over the cross-section. A linearly varying boundary pressure is included.

Deformation behavior of the ring element is described by the six displacement degrees of freedom associated with the three grid points which it connects. The predicted element stress behavior is constant over the triangular cross-section. Radial, circumferential, and axial stresses are predicted.

The Triangular Ring is numbered in the following manner. Referring to Figure II-17, the element is numbered in a counter-clockwise manner when looking in the positive element Y (θ) direction.

The Triangular Cross-Section Ring Element is provided with a linearly varying pressure load. The pressure is defined as positive when acting into the element (Figure II-17). Provision is made for pressure loading on only one side of the element. This side of the element is always defined by the first two node point numbers which are called out in the Node Point locations of the Element Input Section.

The Grid Point Pressure Data Form (Figure II-6) is provided for entering these pressure loadings if they exist. For the Triangular Ring Element, the input pressures correspond to pressures designated, P_1 on the Grid Point Pressure Data Form. These pressure values are input in Columns 13-22 of that Form.

A constant prestrain load vector is included in this element representation to accommodate thermal loading. The Grid Point Temperature Data Form (Figure II-7) is provided to input node point temperatures if thermal loading is present. For the Triangular Ring Element, the node point temperatures correspond to the temperature designated T_1 on the Grid Point Temperature Data Form. These temperature values are input in Columns 13-22 of that Form.

The Element Control Data which is required for the Triangular Ring Element is as follows: (See Figure II-13).

Element Number - (Cols. 7-10)

Refer to Element Control Section

Plug Number - (Cols. 11-12)

The Triangular Cross-Section Ring Element is identified as Number 40.

Material Number - (Cols. 13-18)

Refer to Element Control Section

Temperature Interpolate Option - (Col. 19)

The Triangular Ring Element is designated by 3 node points. If the User desires to exercise the Temperature Interpolate Option and average all three (3) of the node point temperatures, an entry is not made in Column 19. If the User desires to enter a material temperature in Cols. 20-27, a '1' is entered in Column 19.

Material Temperature - (Cols. 20-27)

Refer to Element Control Section

Repeat Element Matrices - (Col. 28)

Refer to Element Control Section

Element Input - (Col. 29)

The Triangular Cross-Section Ring Element only requires Element Input under certain special conditions as follows: Referring to Figure II-17, it is seen that there is a possibility that in some cases the material axis, and element geometric axis of the element will not coincide. If this is the case the Element Input (Figure II-14) required for the Triangular Cross-Section Ring consists of the following.

Location A - (Cols. 13-22)

Material Axes Angle (Gamma - γ_{mg})

Since the Triangular Cross-Section Ring Element is written to accommodate anisotropy of mechanical and physical properties, provision is made in the program for differences in orientation of material and element geometric axes for an element. The User inputs the angle between the element material axis (X_m) and the element geometric axis (X_g). The angle gamma (γ_{mg}) is input in

degrees and is considered positive when measured from the material axes to the element geometric axes, in a counter-clockwise direction (Figure II-17).

Remember

Element Input is not required for the Triangular Ring if the material and geometric axes coincide, i.e., $\gamma_{mg} = 0$.

Returning to the Element Control Data Section,
the list of data items continues as follows:

<u>Interpolated Input Print - (Col. 30)</u>	} Refer to Element Control Section
<u>Element Matrix Print - (Col. 31)</u>	
<u>Full Print (Col. 32)</u>	

Number of Input Nodes (Cols. 33-34)

The Triangular Cross-Section Ring Element
is always defined by 3 input nodes.

Number of Assembled Nodes - (Col. 35)

Not applicable.

Node Points - (Cols. 36-71)

The three node points which define each
Triangular Ring are entered in the first three
entries provided in the Node Point Section of
the Element Control Data Form.

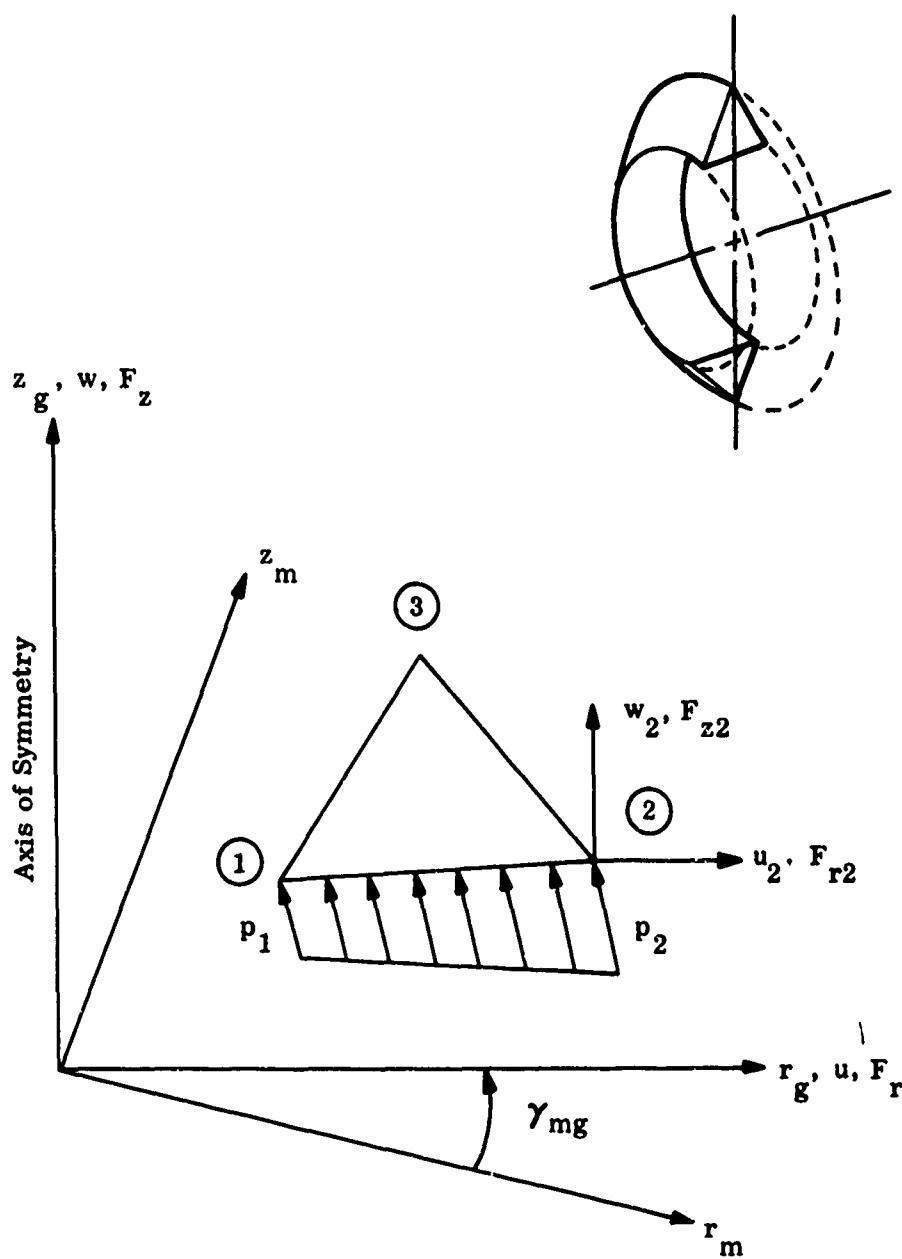


Figure II-17 Triangular Cross Section Ring Element Description

d. Toroidal Thin Shell Ring (Ident. No. 30)

The toroidal thin shell element is recommended for the idealization of axisymmetric structures of arbitrary profile. Performance of the toroidal ring element is outstanding relative to the well known conic ring. The toroidal thin shell ring element representation is developed in detail in Reference 7, and is shown in Figure II-18. The toroidal thin shell ring discrete element is written with respect to a toroidal coordinate system. In general, the cross-section of the toroidal segment is circular. Specialization to conic and cylindrical shapes is automatically accounted for in the MAGIC System. The geometric shape of the element is specified by the coordinates and surface orientation at its edge grid rings. The thickness of the element is assumed constant.

The subject element is written to accommodate orthotropic materials. Axes of orthotropy are assumed to coincide with the principal axes of the element. Material properties are taken to be constant throughout the element. The temperature of reference is the average of the data specified element node point temperatures.

The mathematical model for the toroidal ring embodies coupled representation of membrane and flexure action. A state of plane stress is assumed in formulating the continuum mechanics model. Discretization is effected by the construction of assumed modes for displacement and applied loading functions.

An osculatory axisymmetric polynomial interpolation is taken to represent membrane displacement within the element. Transverse displacement is represented by a hyper-osculatory interpolation function. Applied loadings are assumed to be constant over the element.

Deformation behavior of the toroidal ring element is described by the ten displacement degrees of freedom associated with the two grid rings which it connects. These degrees of freedom provide for a relatively high order of variation within the element. In virtue of this, stress resultants are exhibited at the two boundary rings and at the midspan of the element. The toroidal axes provide the frame of reference.

The following element matrices are provided for the Toroidal Thin Shell Ring in the MAGIC System.

Stiffness

Stress

Distributed Loading (Pressure)

Thermal Loading

The Toroidal Ring Element is provided with a linearly varying pressure load.

Provision is made for pressure acting normal to the element. The Grid Point Pressure Data Form (Figure II-6) is provided to accept pressure loadings if they exist. On that Form provision is made for three possible input pressures per grid point, P_1 , P_2 , and P_3 .

For the Toroidal Ring Element, pressure values correspond to pressures designated P_1 on the Grid Point Pressure Data Form. These pressure P_1 values are input in Columns 13-22. Pressures are defined as positive if acting in the positive local element Z direction (see Figure II-18).

A membrane thermal load matrix is also provided for the Toroidal Ring Element. The Grid Point Temperature Data Form (Figure II-7) is provided for the temperature values if they exist. In that section provision is made for three possible input temperatures, T_1 , T_2 , and T_3 .

For the Toroidal Ring Element, the node point temperatures correspond to the temperatures designated T_1 and T_2 on the Grid Point Temperature Data Form. For each gridpoint, the temperature designated as T_1 corresponds to the inner temperature at node point (1) and is input in columns 13-22. The temperature designated as T_2 corresponds to the outer temperature at node point (1) and is input in columns 23-32 of the Grid Point Temperature Data Form. The program then averages the inner and outer temperatures given for each node point and uses this temperature as the representative node point temperature.

The input procedure for the Boundary Condition Section when using the Toroidal Ring merits special comment at this time. Figure II-19 shows a typical Boundary Condition Input Form. For the Toroidal Ring Element, the Boundary Condition Input requires three extra fields giving a total of nine (9). It is important to note, however, that only five (5) of these degrees of freedom exist as shown in the figure.

The first six degrees of freedom may be considered as the degrees of freedom which are considered in the normal manner. These six degrees of freedom may be based on Global coordinates or on element system coordinates. In the element system, $X(\xi)$ is tangential and positive in the direction from element point (1) to element point (2) and Z is normal to the element, with positive Z being defined as though the Global system were rotated about the $Y(0)$ axis so as to align with the element $X(\xi)$ axis (see Figure II-18). In order to invoke the element axis option for the Toroidal Ring, a special code is employed which is described subsequently.

The remaining degrees of freedom (w' and w'') are always referenced to the element system. Physically w' is difficult to define but can be thought of as the rate of change of arc length (at symmetric boundaries, $w' = 0$, otherwise $w' = 1$); w'' is the curvature defined in the element system at the point in question. Restraint ($w'' = 0$), implies that the curvature is zero. No restraint ($w'' = 1$) implies that the curvature is permitted to change. In general, it is recommended that $w'' = 1$ except at symmetric or rigidly fixed boundaries where $w'' = 0$.

The Element Control Data which is required for the Toroidal Thin Shell Ring Element is as follows (see Figure II-13).

Element Number - (Cols. 7-10)

Refer to Element Control Section

Plug Number - (Cols. 11-12)

The Toroidal Ring is identified as Number 30.

Material Number - (Cols. 13-18)

Refer to Element Control Section

Temperature Interpolate Option - (Col. 19)

The Toroidal Ring is designated by 2 node points. If the User desires to exercise the Temperature Interpolate Option a '1' is entered in Column 19.

Material Temperature - (Cols. 20-27)

Refer to Element Control Section

Repeat Element Matrices - (Col. 28)

Refer to Element Control Section

Element Input - (Col. 29)

The Toroidal Ring Element always requires Element Input, therefore an 'X' is always placed in column 29 when a Toroidal Ring Element is being employed.

The following Element Input is required when using the Toroidal Ring Element (refer to Element Input Section). From the pre-labeled input data form it is seen that the Element Input locations are labeled A, B, C, D, E, F with each item contained in a ten column field.

The Element Input for the Toroidal Ring consists of the following information.

Location A - (Cols. 13-22)

Element Thickness (t)

Location B - (Cols. 23-32)

TCØ - This is a control input which changes the axis of reference from Global to element.

(a) Global - (TCØ = 0.0)

If the User desires to have the displacement behavior referenced to the Global system of reference, then the code 0.0 is entered in this location.


(b) Element - ($TC\emptyset = -1.0$)

If the User desires to have the displacement behavior referenced to the element system (normal and tangential at point in question) then the code -1.0 is entered in this location. If the code -1.0 is used, then External Loads (if any exist) must be entered in the element system of reference. Provision is made for these External Loads on the External Grid Point Loads Data Form (Figure II-12).

It is important to note that all elements must be referenced to the same system, i.e., in any analysis which involves Toroidal Rings either the Global or element system must be used exclusively, as a frame of reference. There can be no mixing of the systems.

Location C - (Cols. 33-42)

Alpha 1 - (α_1) - Referring to the sketch, α_1 is defined as the angle measured in degrees from the axis of symmetry to a line which is perpendicular to the tangent to the surface at node point ①.

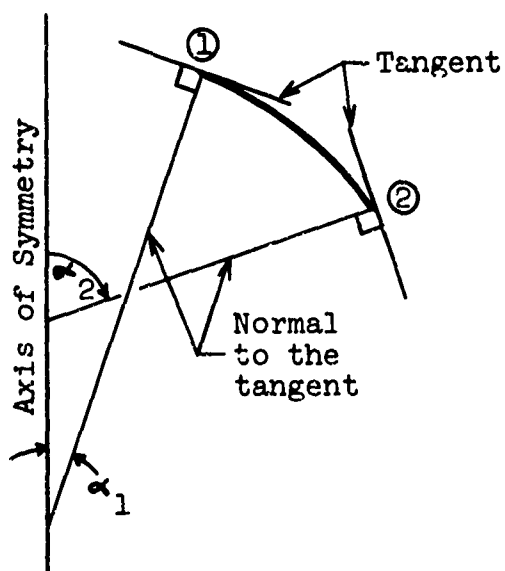

Location D - (Cols. 43-52)

Alpha 2 - (α_2) - Referring to the sketch,
 α_2 is defined as the angle measured in
degrees from the axis of symmetry to a
line which is perpendicular to the tangent
to the surface at node point ② .

Note that for Conic Ring idealizations,
 $\alpha_1 \equiv \alpha_2$

The above is the required Element Input
for the Toroidal Ring.

Returning to the Element Control Data Section, the
list of data items continues as follows:

<u>Interpolated Input Print - (Col. 30)</u>	} Refer to Element Control Section
<u>Element Matrix Print - (Col. 31)</u>	
<u>Full Print - (Col. 32)</u>	
<u>Number of Input Nodes - (Cols. 33-34)</u>	

The Toroidal Thin Shell Element is always
defined by 2 node points.

Number of Assembled Nodes - (Col. 35)

Not applicable.

Node Points - (Cols. 36-71)

The two node points which define each
Toroidal Thin Shell Ring Element are entered
in these locations.

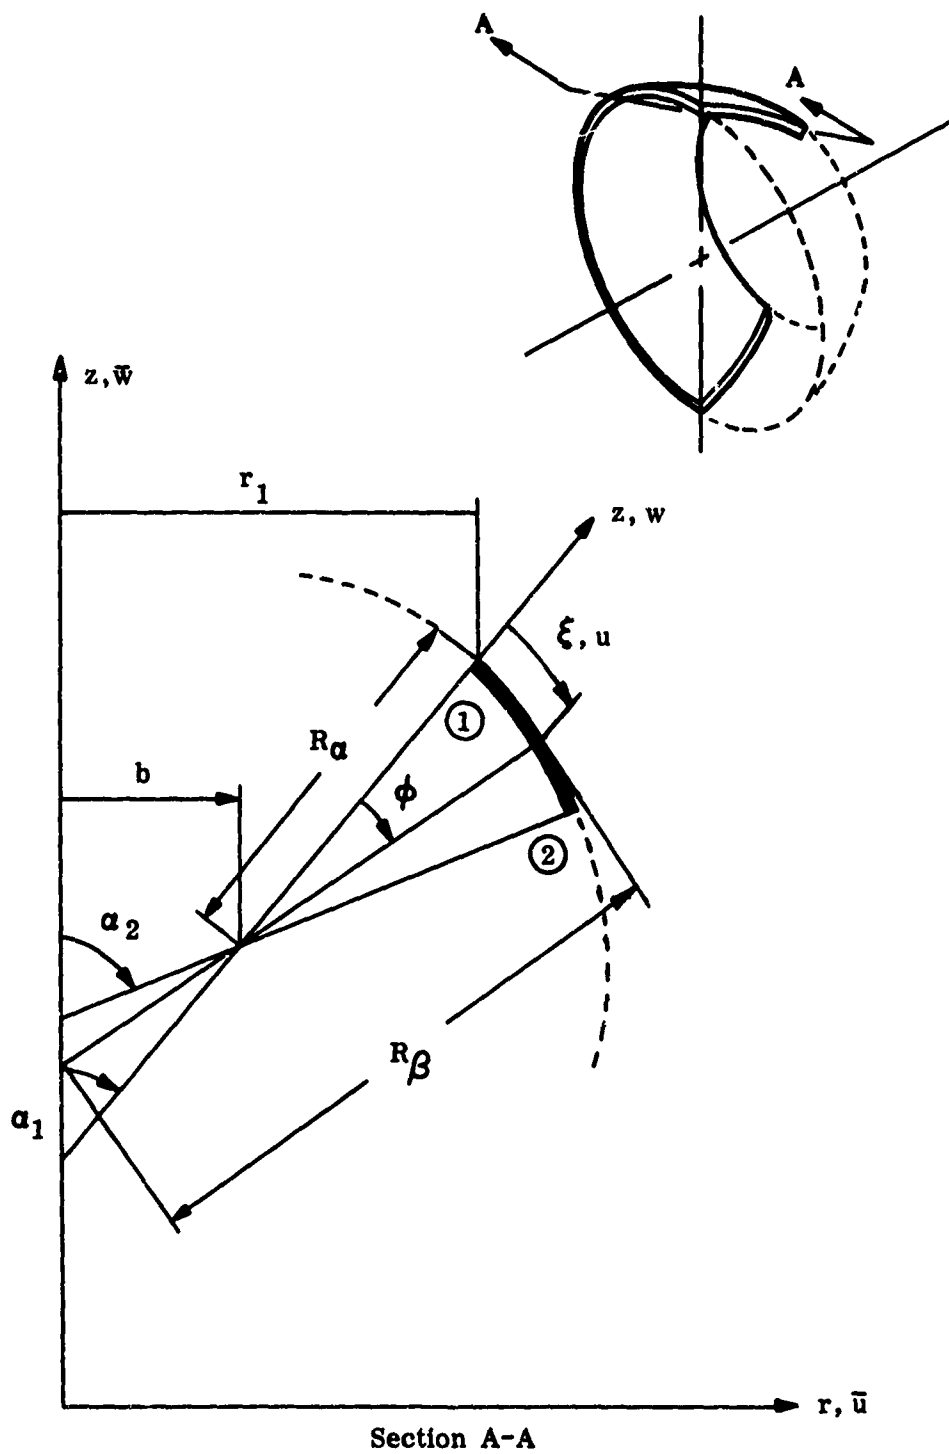


Figure II-18 Toroidal Thin Shell Ring Representation

INPUT CODE - 0 - No Displacement Allowed
1 - Unknown Displacement
2 - Known Displacement

1	2	3	4	5	6
B	O	U	N	D	

PRE-SET MODE

1	2	3	4	5	6
M	O	D	A	L	

TRANSLATIONS			ROTATIONS			GENERALIZED		
U	V	W	Θ_x	Θ_y	Θ_z	1	2	3
13	14	15	16	17	18	19	20	21
U	O	W	O	Θ_y	O	U'	O	W''

LISTED INPUT

[illegible]

97

e. Quadrilateral Thin Shell (Ident. No. 21)

The quadrilateral thin shell element is recommended for use as the basic building block for membranes, plates, and shells. The triangular thin shell element is a compatible companion element useful in regions of irregularity and prominent double curvature. The quadrilateral thin shell element representation is developed in detail in Reference 8, and is shown in Figure II-20.

The shape of the general quadrilateral element is defined by the coordinates of the four corner points. It is a zero curvature element. The plane of the element is determined by its first three corner point coordinates.

The subject element is a thin shell element in that both membrane and flexure action are represented. Referenced to axes in the plane of the element, the membrane and flexure representations are uncoupled. Optional generation of either or both of the representations is controlled by the provision of associated effective thicknesses. The distinct membrane and flexure effective thicknesses are assumed constant over the plane of the element.

Under normal circumstances, four corner points and four midside points participate in establishing continuous connection of the quadrilateral thin shell element with adjacent elements. Used in this way input data volume is reduced and accuracy is enhanced. An option is provided to suppress the midside nodes individually if associated complexities arise in grid refinement or nonstandard connections with adjacent elements. Invoking this suppression option causes linear variation to be imposed on the specified midside variables.

The quadrilateral thin shell element, is written to accommodate anisotropy of mechanical and physical material properties. Orientation of material axes is data specified. Temperature referenced material properties, selected from the materials library, are assumed constant over the element.

A linear generalized Hooke's law is employed for the equations of state. Three options are provided; namely, conventional plane stress, corrected plane stress, and restricted plane strain.

The element formulation is discretized by the construction of mode shapes. Membrane displacements within the subject element are approximated by quadratic polynomials. Transverse displacement is represented by cubic polynomials. A linear variation is provided for midplane and gradient variations in thermal loading. Other element loadings such as pressure are assumed constant over the element. Deformation behavior of the quadrilateral thin shell element is described by the displacement degrees of freedom associated with the gridpoints which it connects.

The variation in strain within the element which is permitted by the assumed displacement functions leads to similar stress variation. Advantage is taken of this by exhibiting predicted stress resultants at the four corners as well as at the center of the element. Inplane and normal direct, shear, and bending stress resultants are included. The display of stresses implies a set of axes of reference. These axes are data specified.

The following element matrices are provided for the Quadrilateral Thin Shell Element in the MAGIC System.

Stiffness

Stress

Thermal Load

Distributed Loading (Pressure)

Referring to Figure II-20, it is seen that in general the Quadrilateral Thin Shell Element is defined by eight node points. There is an option in the program, however, which allows the User to suppress the midside node points individually if desired.

When defining the element, the first four node points determine the corner points of the element. The midside nodes are then numbered with the first entry being that midside node which falls between the first two corner points. Referring to the figure, the element would be numbered as follows:

1, 2, 3, 4, 5, 6, 7, 8

If it were desired to suppress mid-side node #6, the element would be numbered in the following manner (based on Figure II-20).

1, 2, 3, 4, 5, 0, 7, 8

This suppression causes linear variation to be imposed on the specified midside variables.

The element geometric axes (X_g, Y_g , Figure II-20) have their origin at the intersection of the diagonals of the quadrilateral thin shell element. The positive direction of the X_g axis of the element is defined by the line which connects the origin of the (X_g, Y_g) axis to node point ① of the element as shown in the figure. The ($X_g - Y_g$) plane of the element is determined by the first three corner point coordinates. A material axes (X_m, Y_m) is also provided for this element. The angle (γ_{mg}) between the material and element geometric axes is considered positive when measured in a counter-clockwise direction from X_m to X_g .

With respect to the element geometric axes, the corner grid points include the degrees of freedom u, v, w, θ_x and θ_y . A reduced set of degrees of freedom is associated with the midside grid points; namely, u, v and θ_n (normal slope). In general, transformation to global or grid point axes reference systems tends to fill these sets of degrees of freedom to $u, v, w, \theta_x, \theta_y, \theta_z$ for the corner grid points and to $u, v, w, \theta_n, 0, 0$ (θ_n is not transformed) for the midside grid points. It is for the Analyst to decide, of course, whether or not these additional terms lead to bonafide degrees of freedom in the assembled structure. The User should also note that on the Boundary Condition Data Form (Figure II-10). Whenever θ_n (θ_{normal}) is being considered, then the proper input code (either 0, 1, or 2) is always entered in the location which is normally reserved for the θ_x entry (Column 16).

The Grid Point Coordinate Data Form (Figure II-5) is provided for input of the coordinates which define the elements. Grid point coordinates for midside nodes are not necessary input since the program calculates these coordinates automatically.

The Quadrilateral Thin Shell Element is provided with a constant normal pressure load. The Grid Point Pressure Data Form (Figure II-6) is provided for this pressure loading if it exists. On that form provision is made for three possible input pressures per grid point, P_1 , P_2 , and P_3 .

For the Quadrilateral Thin Shell Element the input pressures correspond to pressures designated P_1 on the Grid Point Pressure Data Form. These pressure values are input in Columns 13-22. The pressure is defined as positive when acting in the direction of positive element Z_g direction.

A linear variation is provided for midplane and gradient variations in thermal loading. The Grid Point Temperature Data Form (Figure II-7) is provided to input node point temperatures and/or temperature gradients. For the Quadrilateral Thin Shell Element, the midplane node point temperatures correspond to the temperature designated T_1 on the Grid Point Temperature Data Form. These temperature values are input in Columns 13-22 of that Form.

Provision for a temperature gradient through the thickness of the Quadrilateral Thin Shell is also provided. This gradient is defined as positive when the temperature is increasing through the thickness in the positive element Z_g direction. If temperature gradients through the thickness^g are present, the value of the gradient at each grid point is entered in the location set aside for the quantity, T_2 (Cols. 23-32) on the Grid Point Temperature Data Form. The gradient is entered in the following manner.

$$T_2 = \frac{\Delta T}{t}$$

where

ΔT = Change in temperature through the thickness of the element

t = Thickness of element

Note that the sign of T_2 depends upon the direction of the gradient as pointed out above.

The Element Control Data which is required for the Quadrilateral Thin Shell Element is as follows. (See Figure II-13).

Element Number - (Cols. 7-10)

Refer to Element Control Section

Plug Number - (Col. 11-12)

The Quadrilateral Thin Shell Element is identified as Number 21.

Material Number - (Cols. 13-18)

Refer to Element Control Section

Temperature Interpolate Option - (Col. 19)

If the User exercises this option by not making an entry in Column 19, the program will average the eight node point temperatures of the element and use this average temperature when establishing material properties from the material tape. This means that temperatures for all eight node points (including the mid-side nodes) must be entered on the Grid Point Temperature Data Form (Figure II-7). If the User wishes to employ a specified number of node points, n, in the averaging process ($n < 8$) then this number is entered in Column 19 and the first n node points entered in Columns 36-71 will be used for the averaging process. If a '1' is entered in this location the program will use the Material Temperature entered in Columns 20-27 when establishing material properties from the material tape.

Material Temperature - (Cols. 20-27)

Repeat Element Matrices - (Col. 28)

Element Input - (Col. 29)

} Refer to
Element
Control
Section

The Quadrilateral Thin Shell Element always requires Element Input therefore an 'X' is always placed in Column 29 when a Quadrilateral Thin Shell Element is being employed.

The following Element Input is required when using the Quadrilateral Thin Shell Element (Refer to the Element Input Section). From the Element Input Data Form it is seen that the Element Input Locations are labeled A, B, C, D, E, F, with each item contained in a ten column field.

Location A - (Cols. 13-22)

Membrane Thickness (t_m) -

For the Quadrilateral Thin Shell Element, both membrane and flexural action are represented. Optional generation of either or both representations is controlled by the provision of associated membrane and flexure thickness. If the User desires to do a membrane problem, the membrane thickness is input. If membrane behavior is not to be considered, the associated membrane thickness is not input.

Location B - (Cols. 23-32)

Flexural Thickness - (t_f) -

If the User desires to do a flexure problem, the effective flexure thickness must be entered. Omission of this thickness degenerates the problem into one of pure membrane behavior. Since flexure and membrane behavior are uncoupled both can be run consecutively if desired.

Location C - (Cols. 33-42)

Material Axes Angle - (γ) -

Since the Quadrilateral Thin Shell Element is written to accommodate anisotropy of mechanical and physical properties, provision is made in the program for differences in orientation of material and element geometric axes for an element. The User inputs the angle between the material axis (X_m) and the element geometric axis (X_g) with this angle being measured in a counter-clockwise direction from the material axis (X_m) to the element geometric axis (X_g).

This angle (γ_{mg}) is input in degrees.

Location D - (Cols. 43-52)

Types of Solution:

- (a) Corrected Plane Stress (Code 0.0) -
The corrected plane stress solution is one in which the stress in the out of plane direction (σ_z) is set equal to zero but the full material properties matrix is used. That is, the effect of transverse properties on the in-plane stresses are included. Such effects are negligible for most practical materials.
- (b) Restricted Plane Strain (Code 1.0) -
The restricted plane strain solution is one in which the strain in the out of plane direction (ϵ_z), is set equal to zero.
- (c) Conventional Plane Stress (Code 2.0) -
The conventional plane stress solution is one in which the stress in the out of plane direction (σ_z), is set equal to zero and the effect of transverse properties on the in-plane stresses are not included.

Location E - (Cols. 53-62)

Eccentricity (ECC) -

The eccentricity is defined as the distance measured from the neutral axis of the eccentrically placed element to the midplane of the reference element. The sign of the eccentricity is taken to be positive when the direction specified from the eccentric element to the reference element is in the positive local element direction.

The above is the Element Input required for the Quadrilateral Thin Shell Element. Returning to the Element Control Data Section, the list of data items continues as follows:

<u>Interpolated Input Print - (Col. 30)</u>	} Refer to Element Control Section
<u>Element Matrix Print - (Col. 31)</u>	
<u>Full Print - (Col. 32)</u>	

Number of Input Nodes - (Cols. 33-34)

The Quadrilateral Thin Shell Element is always defined by 8 input nodes.

Number of Assembled Nodes - (Col. 35)

Not applicable.

Node Points - (Cols. 36-71)

In general the Quadrilateral Thin Shell Element is defined by 8 node points. The User, however, has the option to suppress the mid-side nodes individually if desired. Referring to Figure II-13, it is seen that 12 locations are set aside for node point entries. The first 8 locations are set aside for the four corner points and four mid-side nodes respectively.

Locations 9 and 10 .. (Cols. 60-65)

Most finite elements accommodate anisotropic materials. Axes of reference must be specified for material properties. This is accomplished through specification as element data, of coordinate points defining the material axes. These axes are defined by inputting the applicable set of coordinates in these locations. These coordinates define the X axis for material property definition. This device may also be used effectively to define stress output direction and the same two points used for the reference element can be used for each following element so that the output has a common reference.

Locations 11 and 12-(Cols. 66-71)

A specification of stress values implies a set of reference axes. The axes of reference, are determined with the provision of an element stress matrix. Frequently axes of reference convenient for formulation are not convenient for interpretation of stresses. The problem is resolved by data specification of stress axes. This is accomplished

through specification as element data, of coordinate points which define the direction of the (X) stress axis. With this definition the stresses in the other directions retain their proper orientation with respect to this axis.

The stress axis determination is element related and therefore if locations 11 and 12 are used for stress directions, then each element must be considered separately and node points related to that particular element are used in determining stress direction.

REMEMBER:

- (a) If all four mid-side nodes were suppressed only the first four locations would be needed. If mid-side nodes are suppressed individually then zeros are input in the location pertaining to that particular point.
- (b) The stress axis determination is element related and therefore if locations 11 and 12 are used for stress directions, then each element must be considered separately and node points related to that particular element are used in determining stress direction.

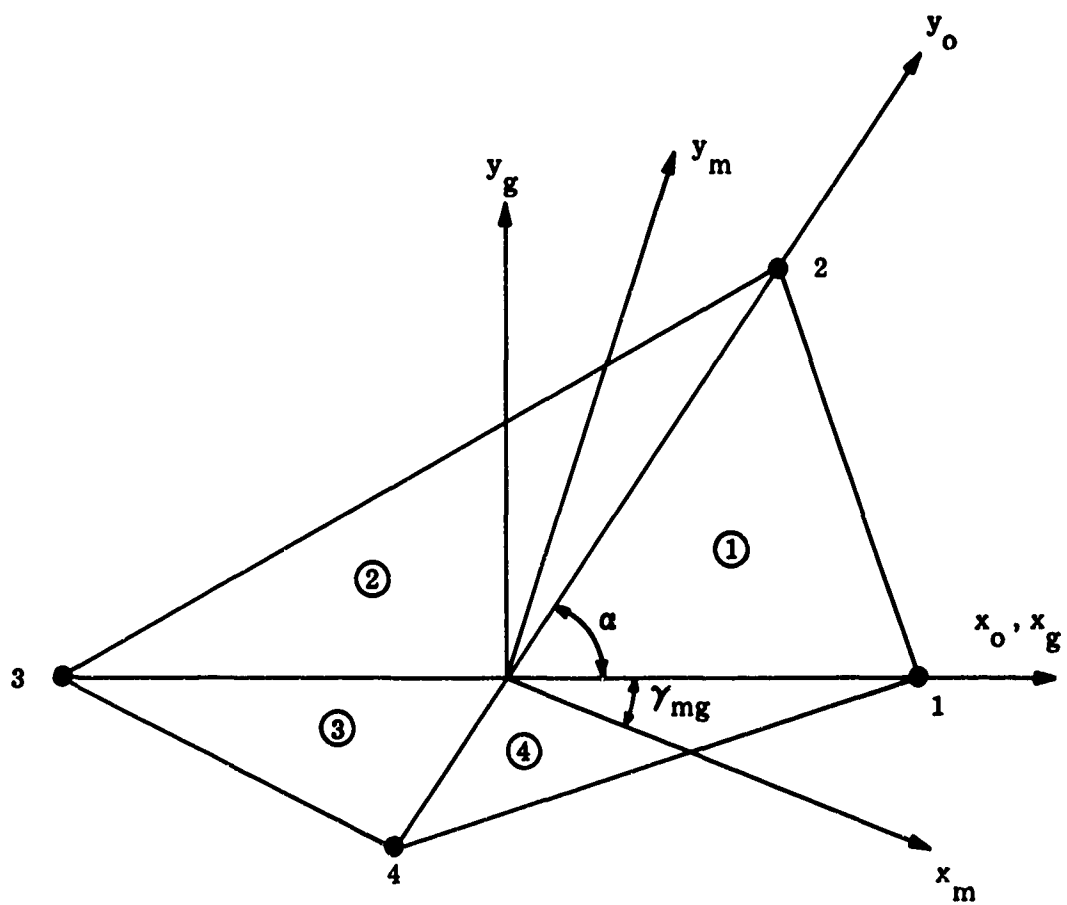


Figure II-20 Quadrilateral Thin Shell Element Representation

f. Triangular Thin Shell (Ident. No. 20)

The Triangular thin shell element is recommended for use as the basic building block for most doubly curved shells. Additionally, it is useful in combination with the quadrilateral thin shell element for dealing with irregular geometries of all membrane, plate, and shell structures. The triangular thin shell element representation is developed in detail in Reference 9, and is shown in Figure II-21.

The shape of the general triangular element is defined by the coordinates of the three corner points. It is a zero curvature element. The plane of the element is determined by the three cornerpoint coordinates.

The subject element is a thin shell element in that both membrane and flexure action are represented. Referenced to axes in the plane of the element, the membrane and flexure representations are uncoupled. Optional generation of either or both of the representations is controlled by the provision of associated effective thicknesses. The distinct membrane and flexure effective thicknesses are assumed constant over the plane of the element.

Under normal circumstances, three corner points and three midside points participate in establishing continuous connection of the triangular thin shell element with adjacent elements. Used in this way input data volume is reduced and accuracy is enhanced. An option is provided to suppress the midside nodes individually if associated complexities arise in grid refinement or nonstandard connections with adjacent elements. Invoking this suppression option causes linear variation to be imposed on the specified midside variables.

The triangular thin shell element is written to accommodate anisotropy of mechanical and physical material properties. Orientation of material axes is data specified. Temperature referenced material properties, selected from the materials library, are assumed constant over the element.

A linear generalized Hooke's Law is employed for the equations of state. Three options are provided; namely, conventional plane stress, corrected plane stress, and restricted plane strain.

The element formulation is discretized by the construction of mode shapes. Membrane displacements within the subject element are approximated by quadratic polynomials. Transverse displacement is represented by cubic polynomials. A linear variation is provided for midplane and gradient variations in thermal loading. Other element loadings such as pressure are assumed constant over the element.

Deformation behavior of the triangular thin shell element is described by the displacement degrees of freedom associated with the grid points which it connects.

The variation in strain within the element which is permitted by the assumed displacement functions leads to similar stress variation. Advantage is taken of this by exhibiting predicted stress resultants at the three corners as well as at the center of the element. Inplane and normal; direct, shear, and bending stress resultants are included. The display of stresses implies a set of axes of reference. These axes are data specified.

The following element matrices are provided for the Triangular Thin Shell Element in the MAGIC System.

Stiffness

Stress

Thermal Load

Distributed Loading (Pressure)

Referring to Figure II-21, it is seen that in general the Triangular Thin Shell Element is defined by six node points. There is an option in the program, however, which allows the User to suppress the midside node points individually if desired.

When defining the element, the first three node points determine the corner points of the element. The midside nodes are then numbered with the first entry being that midside node which falls between the first two corner points. Referring to the figure, the element would be numbered as follows

1, 2, 3, 4, 5, 6

If it were desired to suppress mid-side node #4, the element would be numbered in the following manner (based on Figure II-21)

1, 2, 3, 0, 5, 6

This suppression causes linear variation to be imposed on the specified midside variables.

The element geometric axes (X_g, Y_g , Figure II-21) have their origin at the intersection of the lines which connect the centroid to the vertices. The positive direction of the X_g axis is defined by the line which connects the origin G of the (X_g, Y_g) axis to node point ① of the element as shown in the figure. The (X_g - Y_g) plane of the element is determined by the three corner point coordinates. A material axis (X_m, Y_m) is also provided for this element. The angle (γ_{mg}) between the material and element geometric axis is considered positive when measured in a counter-clockwise direction from X_m to X_g .

With respect to the element geometric axes, the corner grid points include the degrees of freedom u, v, w, θ_x and θ_y . A reduced set of degrees of freedom is associated with the midside grid points; namely, u, v and θ_n (normal slope). In general, transformation to global or grid point axes reference systems tends to fill these sets of degrees of freedom to $u, v, w, \theta_x, \theta_y, \theta_z$ for the corner grid points and to $u, v, w, \theta_n, 0, 0$ (θ_n is not transformed) for the midside grid points. It is for the Analyst to decide, of course, whether or not these additional terms lead to bona-fide degrees of freedom in the assembled structure. The User should also note that on the Boundary Condition Data Form (Figure II-10). Whenever θ_n (θ_{normal}) is being considered, then the proper input code (either 0, 1, or 2) is always entered in the location which is normally reserved for the θ_x entry (Column 16).

The Grid Point Coordinate Data Form (Figure II-5) is provided for input of the coordinates which define the elements. Grid point coordinates for mid-side nodes are not necessary input since the program calculates these coordinates automatically.

The Triangular Thin Shell Element is provided with a constant normal pressure load. The Grid Point Pressure Data Form (Figure II-6) is provided for this pressure loading if it exists. On that form provision is made for three possible input pressures per grid point P_1 , P_2 , and P_3 .

For the Trinagular Thin Shell Element the input pressures correspond to pressures designated P_1 on the Grid Point Pressure Data Form. These pressure values are input in Columns 13-22. The pressure is defined as positive when acting in the direction of positive element Z_g direction.

A linear variation is provided for midplane and gradient variations in thermal loading. The Grid Point Temperature Data Form (Figure II-7) is provided to input node point temperatures and/or temperature gradients. For the Triangular Thin Shell Element, the midplane node point temperatures correspond to the temperature designated T_1 on the Grid Point Temperature Data Form. These temperature values are input in Columns 13-22 of that Form.

Provision for a temperature gradient through the thickness of the Triangular Thin Shell is also provided. This gradient is defined as positive when the temperature is increasing through the thickness in the positive element Z_g direction. If temperature gradients through the thickness are present, the value of the gradient at each grid point is entered in the location set aside for the quantity, T_2 (Cols. 23-32) on the Grid Point Temperature Data Form. The gradient is entered in the following manner.

$$T_2 = \frac{\Delta T}{t}$$

where

ΔT = Change in temperature through the thickness of the element

t = Thickness of element

Note that the sign of T_2 depends upon the direction of the gradient as pointed out above.

The Element Control Data which is required for the Triangular Thin Shell Element is as follows. (See Figure II-13).

Element Number - (Cols. 7-10)

Refer to Element Control Section

Plug Number - (Col. 11-12)

The Triangular Thin Shell Element is identified as Number 20.

Material Number - (Cols. 13-18)

Refer to Element Control Section

Temperature Interpolate Option - (Col. 19)

If the User exercises this option by not making an entry in Column 19, the program will average the six node point temperatures of the element and use this average temperature when establishing material properties from the material tape. This means that temperatures for all six node points (including the mid-side nodes) must be entered on the Grid Point Temperature Data Form (Figure II-7). If the User wishes to employ a specified number of node points, n , in the averaging process ($n < 6$) then this number is entered in Column 19 and the first n node points entered in Columns 36-71 will be used for the averaging process. If a '1' is entered in this location the program will use the Material Temperature entered in Columns 20-27 when establishing material properties from the material tape.

Material Temperature - (Cols. 20-27)

Refer to Element Control Section

Repeat Element Matrices - (Col. 28)

Refer to Element Control Section

Element Input - (Col. 29)

The Triangular Thin Shell Element always requires Element Input therefore an 'X' is always placed in Column 29 when a Triangular Thin Shell Element is being employed.

The following Element Input is required when using the Triangular Thin Shell Element (Refer to the Element Input Section). From the Element Input Data Form it is seen that the Element Input Locations are labeled A, B, C, D, E, F with each item contained in a ten column field.

Location A - (Cols. 13-22)

Membrane Thickness (t_m) -

For the Triangular Thin Shell Element, both membrane and flexural action are represented. Optional generation of either or both representations is controlled by the provision of associated membrane and flexure thickness. If the User desires to do a membrane problem, the membrane thickness is input. If membrane behavior is not to be considered, the associated membrane thickness is not input.

Location B - (Cols. 23-32)

Flexural Thickness (t_f) -

If the User desires to do a flexure problem, the effective flexure thickness must be entered. Omission of this thickness degenerates the problem into one of pure membrane behavior. Since flexure and membrane behavior are uncoupled both can be run consecutively if desired.

Location C - (Cols. 33-42)

Material Axes Angle - (Γ) -

Since the Triangular Thin Shell Element is written to accommodate anisotropy of mechanical and physical properties provision is made in the program for differences in orientation of material and element geometric axes for an element. The User inputs the angle between the material axis (X_m) and the element geometric axis (X_g) with this angle being measured in a counter-clockwise direction from the material axis (X_m) to the element geometric axes (X_g).

This angle (γ_{mg}) is input in degrees.

Location D - (Cols. 43-52)

Types of Solution:

- (a) Corrected Plane Stress (Code 0.0) -
The corrected plane stress solution is one in which the stress in the out of plane direction (σ_z) is set equal to zero but the full material properties matrix is used. That is, the effect of transverse properties on the in-plane stresses are included. Such effects are negligible for most practical materials.
- (b) Restricted Plane Strain (Code 1.0) -
The restricted plane strain solution is one in which the strain in the out of plane direction (ϵ_z) is set equal to zero.
- (c) Conventional Plane Stress (Code 2.0) -
The conventional plane stress solution is one in which the stress in the out of plane direction, (σ_z) is set equal to zero and the effect of transverse properties on the in-plane stresses are not included.

Location E - (Cols. 53-62)

Eccentricity (ECC) -

The eccentricity is defined as the distance measured from the neutral axis of the eccentrically placed element to the midplane of the reference element. The sign of the eccentricity is taken to be positive when the direction specified from the eccentric element to the reference element in the positive local element direction.

The above is the Element Input required for the Triangular Thin Shell Element. Returning to the Element Control Data Section, the list of data items continues as follows.

<u>Interpolated Input Print - (Col. 30)</u>	} Refer to Element Control Section
<u>Element Matrix Print - (Col. 31)</u>	
<u>Full Print - (Col. 32)</u>	

Number of Input Nodes - (Cols. 33-34)

The Triangular Thin Shell Element is always defined by 6 Input Nodes.

Number of Assembled Nodes (Col. 35)

Not applicable.

Node Points - (Cols. 36-71)

In general the Triangular Thin Shell Element is defined by six node points. The User, however, has the option to suppress the mid-side nodes individually if desired. Referring to Figure II-13, it is seen that 12 locations are set aside for node point entries. The first 6 locations are set aside for the three corner points and three-mid-side nodes respectively.

Locations 9 and 10 - (Cols. 60-65)

Most finite elements accommodate anisotropic materials. Axes of reference must be specified for material properties. This is accomplished through specification as element data, of co-ordinate points defining the material axes. These axes are defined by inputting the applicable set of coordinates in these locations. These coordinates define the X axis for material property definition. This device may also be used effectively to define stress output direction and the same two points used for the reference element can be used for each following element so that the output has a common reference.

Locations 11 and 12 - (Cols. 66-71)

A specification of stress values implies a set of reference axes. The axes of reference are determined with the provision of an element stress matrix. Frequently axes of reference convenient for formulation are not convenient for interpretation of stresses. The problem is resolved by data specification of stress axes. This is accomplished through specification as element data, of coordinate points which define the stress axes. The node points entered in these locations define the direction of the (X) stress axis. With this definition, the stresses in the other directions retain their proper orientation with respect to this axis.

REMEMBER:

- (a) If all three mid-side nodes were suppressed only the first three locations would be needed. If mid-side nodes are suppressed individually then zeros are input in the location pertaining to that particular point.
- (b) The stress axis determination is element related and therefore if locations 11 and 12 are used for stress directions, then each element must be considered separately and node points related to that particular element are used in determining stress direction.

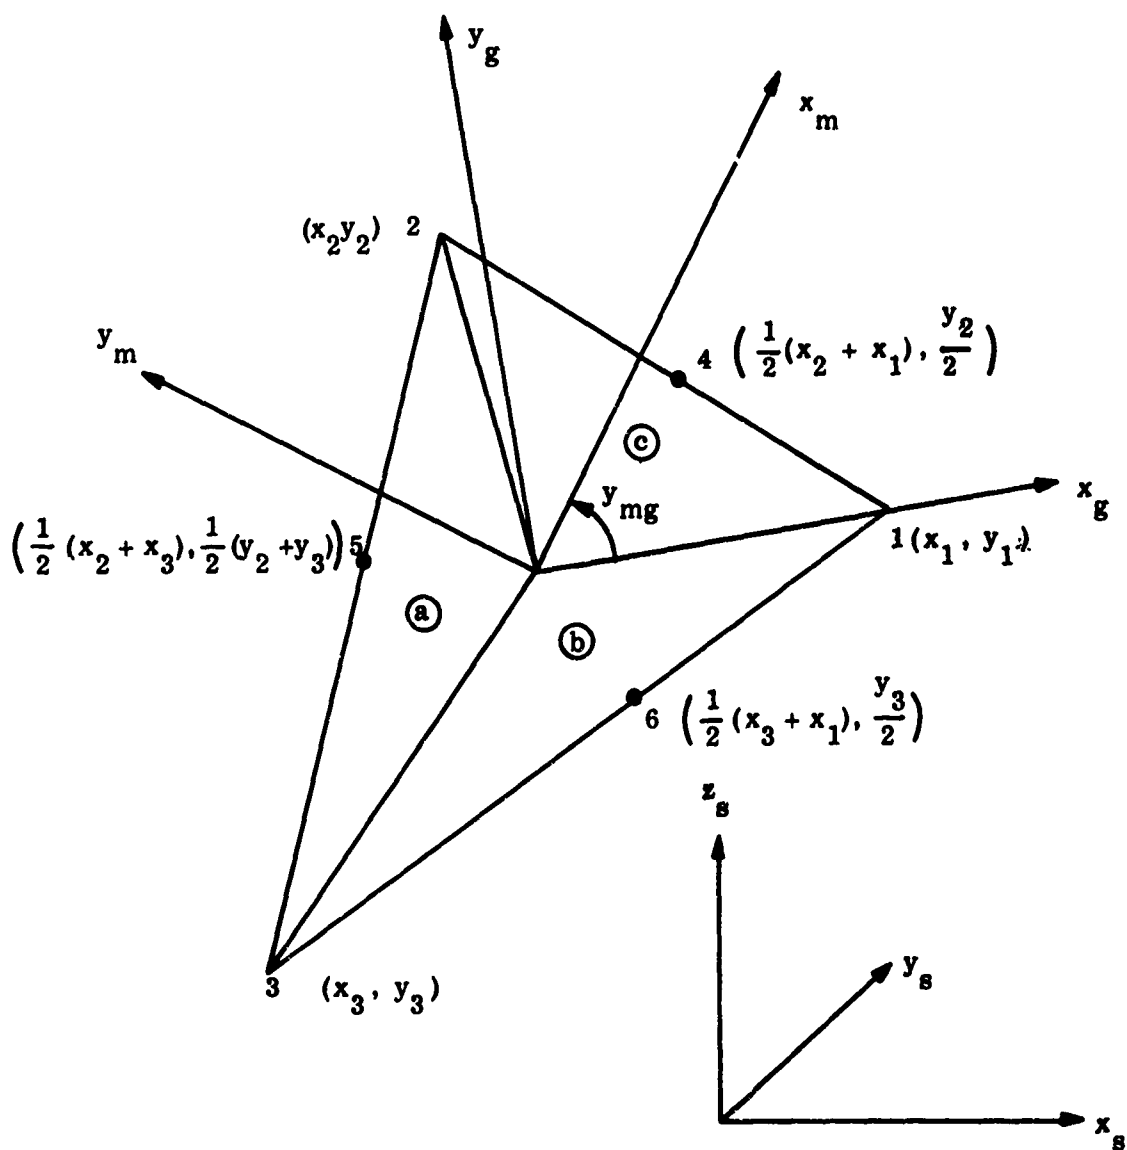


Figure II-21 Triangular Thin Shell Element Representation

17. Check Or End Section (Figure II-22)

The labeled input data form provided for the Check or End Section is shown in Figure II-22.

A program option is provided to conduct a read and write of input data with execution suppressed. Output from the data read and write option includes the material properties derived from the materials library as well as tables completed by MODAL specification of data. It is recommended that this feature be used routinely to minimize execution against incorrect problem specifications. If the User desires to use the CHECK option, he simply scratches out the END designation which appears on the input data form. The keypunch operator will then punch the word CHECK in columns 1-5.

If the User does not want to exercise the CHECK option but wishes to execute the problem, he simply scratches out the CHECK designation which appears on the form. The keypunch operator will then punch the word END in columns 1-3.

MAGIC STRUCTURAL ANALYSIS SYSTEM
INPUT DATA FORMAT

CHECK OR END CARD

C	H	E	C	K
---	---	---	---	---

1 2 3 4 5 (/)

E	N	D
---	---	---

1 2 3 (/)

FIGURE 11-22 CHECK OR END DATA FORM

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR ARE
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

SECTION III

INPUT AND OUTPUT OF THE MAGIC SYSTEM

A. GENERAL DESCRIPTION

In this section, the proper interpretation of the input supplied to the MAGIC System and the output supplied by the MAGIC System will be provided by reference to specific example problems. These examples will utilize each of the finite elements which make up the library of the MAGIC System.

It is to be noted that output from the Structural Monitor records the input data problem description as well as optional intermediate results. System level matrix output of final results is handled by the FORMAT standard matrix print capability.

B. THREE ELEMENT PORTAL FRAME

A three element portal frame is shown in Figure III-B.1, along with its loading, dimensions and pertinent material properties. The preprinted input data forms associated with this frame are displayed in Figures III-B.2 thru III-B.10.


In Figure III-B.6 (Boundary Condition Section) it is instructive to note the use of the MODAL and Repeat options. There are 2 exceptions to the MODAL Card (Grid points 2 and 3). Grid point 3 has exactly the same boundary conditions as Grid point 2, therefore the Repeat Option is employed by placing an 'X' in Column 1 opposite the entry for Grid Point Number 3. Note that the 2 exceptions to the MODAL card are called out on the System Control Information Data Form (Figure III-B.4).

In Figure III-B.7 (External Loads Section) the following information is evident.

- (1) One load condition is input.
- (2) The External Applied Load Scalar equals 0.0.
- (3) Grid point number 2 is loaded with a load in the X direction equal to 550.0. It should be noted that the entry corresponding to External Moments is also filled in even though there are no external moments applied to the system. This is done because the Frame Element requires two external load cards per grid point.

In Figure III-B.9 (Element Input) it is noted that only the MODAL entry is used. This means that all of the Frame Elements used in this analysis have identical Element Input as follows:

- Location A - Cross Sectional Area (A) = 18.0 in^2
Location B - Area Moment of Inertia (I_{zz}) = 13.5 in^4
Location C - Area Moment of Inertia (I_{yy}) = 13.5 in^4
Location D - Torsional Moment of Inertia (J) = 27.0 in^4

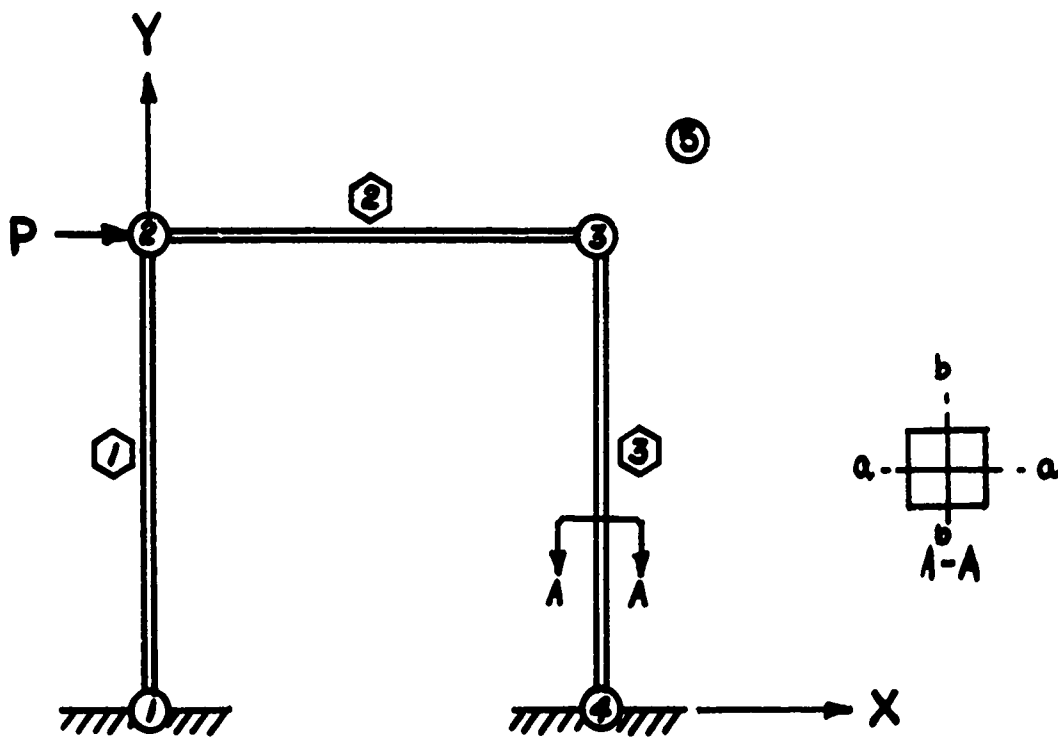

$$P = 550 \text{ LBS}$$

$$L = 48 \text{ IN}$$

$$A = 18 \text{ IN}^2$$

$$E = 10^7 \text{ PSI}$$

$$\mu = .30$$

$$I_a = I_b = 13.5 \text{ IN}^4$$

FIGURE III-B.1 - Idealized Three Element Portal Frame

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1 2 3 4 5 6

T	I	T	L	E		(1)
---	---	---	---	---	--	-----

THIS IS THE FIRST ENTRY ON ALL REPORT FORM INPUT RUNS AND IT IS REQUIRED FOR ALL RUNS.

789 3

NUMBER OF TITLE CARDS

[illegible]

FIGURE III-B.2 TITLE INFORMATION, THREE ELEMENT PORTAL FRAME

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

7 8 9
No. of Requests
(1)

MATERIAL TAPE INPUT

Request Number	MATERIAL NUMBER	Lock Code	MATERIAL IDENTIFICATION																Isotropic	Orthotropic	Plastic Isotropic	Plastic Orthotropic	Add Plastic	Delete Material	Print Tape	Print Mat'l. Table	Print Mat'l. Summary	Number of Mat'l. Pcs.	Number of Plastic Pcs.	MASS DENSITY								
1	1	2	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4		
7	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4
8	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	
9	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4		
0	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4			
1	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4				
2	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4					
3	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4						
4	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4							
5	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4								
6	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4									
7	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4										
8	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4											
9	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4												
0	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4			
1	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4				
2	2	3	4	5	6	7																																

MATERIAL PROPERTIES TABLE

TEMPERATURE						
1						2
3	4	5	6	7	8	9
						0
						0.0

[illegible][illegible][illegible][illegible]

FIGURE III-B.3 MATERIAL TAPE INPUT, THREE ELEMENT PORTAL FRAME

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

SYSTEM CONTROL INFORMATION

ENTER APPROPRIATE NUMBER, RIGHT
ADJUSTED, IN BOX OPPOSITE
APPLICABLE REQUESTS

	S	Y	S	T	E	M	(/)
	1	2	3	4	5	6	
1. Number of System Grid Points						5	
	1	2	3	4	5	6	
2. Number of Input Grid Points						5	
	7	8	9	10	11	12	
3. Number of Degrees of Freedom/Grid Point						6	
						13 14	
4. Number of Load Conditions						1	
						15 16	
5. Number of Initially Displaced Grid Points							
	17	18	19	20	21	22	
6. Number of Prescribed Displaced Grid Points							
	23	24	25	26	27	28	
7. Number of Grid Point Axes Transformation Systems							
						29 30	
8. Number of Elements						3	
	31	32	33	34	35	36	
9. Number of Requests and/or Revisions of Material Tape.						1	
						37 38	
10. Number of Input Boundary Condition Points						2	
	39	40	41	42	43	44	
11. T_0 For Structure (With Decimal Point)	0	.	0				(/)
	45	46	47	48	49	50 51 52	

FIGURE III-B.4 SYSTEM CONTROL INFORMATION, THREE ELEMENT PORTAL FRAME

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1 2 3 4 5 6

C	O	O	R	D
---	---	---	---	---

(/)

GRIDPOINT COORDINATE

[illegible]

FIGURE III-B.5 GRIDPOINT COORDINATES, THREE ELEMENT PORTAL FRAME

MAGIC STRUCTURAL ANALYSIS SYSTEM
INPUT DATA FORMAT

BOUNDARY CONDITIONS

INPUT CODE - 0 - No Displacement Allowed
1 - Unknown Displacement
2 - Known Displacement

1	2	3	4	5	6
B	O	U	N	D	

(/)

PRE-SET MODE

1	2	3	4	5	6
M	O	D	A	L	

TRANSLATIONS			ROTATIONS			GENERALIZED		
U	V	W	Θ_x	Θ_y	Θ_z	1	2	3
13	14	15	16	17	18	19	20	21
0	0	0	0	0	0			

(/)

LISTED INPUT

Grid Point Number					Report										
7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	
			2			1	1	0	0	0	1				(/)
			3X												(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

EXTERNAL LOADS

		MOMENT VALUES															GENERALIZED VALUES																																		
		M _x					M _y					M _z					1					2					3																								
z																																																			

[illegible]

AME

(5)

FIGURE III-B.8 ELEMENT CONTROL DATA, THREE ELEMENT PORTAL FRAME

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR ARE
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

ELEMENT INPUT

A		B		C		D		E		F	
1	2	3	4	5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6	7	8	9	0
0	1	2	3	4	5	6	7	8	9	0	1
1	2	3	4	5	6	7	8	9	0	1	2
2	3	4	5	6	7	8	9	0	1	2	3
3	4	5	6	7	8	9	0	1	2	3	4
4	5	6	7	8	9	0	1	2	3	4	5
5	6	7	8	9	0	1	2	3	4	5	6
6	7	8	9	0	1	2	3	4	5	6	7
7	8	9	0	1	2	3	4	5	6	7	8
8	9	0	1	2	3	4	5	6	7	8	9
9	0	1	2	3	4	5	6	7	8	9	0
0	1	2	3	4	5	6	7	8	9	0	1
1	2	3	4	5	6	7	8	9	0	1	2
2	3	4	5	6	7	8	9	0	1	2	3
3	4	5	6	7	8	9	0	1	2	3	4
4	5	6	7	8	9	0	1	2	3	4	5
5	6	7	8	9	0	1	2	3	4	5	6
6	7	8	9	0	1	2	3	4	5	6	7
7	8	9	0	1	2	3	4	5	6	7	8
8	9	0	1	2	3	4	5	6	7	8	9
9	0	1	2	3	4	5	6	7	8	9	0
0	1	2	3	4	5	6	7	8	9	0	1
1	2	3	4	5	6	7	8	9	0	1	2
2	3	4	5	6	7	8	9	0	1	2	3
3	4	5	6	7	8	9	0	1	2	3	4
4	5	6	7	8	9	0	1	2	3	4	5
5	6	7	8	9	0	1	2	3	4	5	6
6	7	8	9	0	1	2	3	4	5	6	7
7	8	9	0	1	2	3	4	5	6	7	8
8	9	0	1	2	3	4	5	6	7	8	9
9	0	1	2	3	4	5	6	7	8	9	0
0	1	2	3	4	5	6	7	8	9	0	1
1	2	3	4	5	6	7	8	9	0	1	2
2	3	4	5	6	7	8	9	0	1	2	3
3	4	5	6	7	8	9	0	1	2	3	4
4	5	6	7	8	9	0	1	2	3	4	5
5	6	7	8	9	0	1	2	3	4	5	6
6	7	8	9	0	1	2	3	4	5	6	7
7	8	9	0	1	2	3	4	5	6	7	8
8	9	0	1	2	3	4	5	6	7	8	9
9											

Element Number	Repeat
7	1
9	2
0	3
1	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
</	

FIGURE III-B.9 ELEMENT INPUT, THREE ELEMENT PORTAL FRAME

MAGIC STRUCTURAL ANALYSIS SYSTEM

INPUT DATA FORMAT

CHECK OR END CARD

C	H	E	C	K
1	2	3	4	5

 (/)

E	N	D
1	2	3

 (/)

Figure III-B.10 End Card, Three Element Portal Frame

The output supplied by the MAGIC System for the three element portal frame is as follows.

Figure III-B.11 shows the matrix abstraction instructions associated with this particular problem. A complete discussion of these abstraction instructions is provided in Section II of this report. Figures III-B.12 thru III-B.14 display the output from the Structural System Monitor. These figures record the input data pertinent to the problem being solved.

Figure III-B.13 displays the coordinate and boundary condition information for this problem. In the Boundary Condition Information Section of the figure, zeros ('0') represent degrees of freedom that are fixed and ones ('1') represent degrees of freedom that have unknown values of displacement. The last column in the section represents the cumulative degree of freedom total.

The finite element information is also shown in Figure III-B.13. Under the section titled External Input, the first entry printed is the cross-sectional area of Element Number 1 which is equal to 18.0. The second and third entries printed are equal to the moments of inertia Izz and Iyy respectively with numerical values equalling 13.50. The fourth value printed is the Torsional Moment of Inertia, J, which in this case equals 27.00.

Figure III-B.14 displays the External Load Column for this problem. The 30 x 1 vector shown in the figure is the total unreduced transformed external load column which is read row-wise. The ordering is consistent with that of the boundary condition information shown in Figure III-B.13. Note that the external load of 550.0 is applied at node point Number 2 in the positive Global X direction.

System level matrix output of final results is handled by the FORMAT standard matrix print capability. These results are shown in Figures III-B.15 thru III-B.17. Figure III-B.15 shows the reduced stiffness matrix for this problem. It is to be noted that only non-zero terms of the stiffness matrix are displayed. The stiffness matrix is presented row-wise and its ordering is consistent with that of the boundary conditions shown in Figure III-B.13. For this case, the ordering of the displacement vector is as follows:

$$\{ q \}^T = [u_2, v_2, \theta_{z2}, u_3, v_3, \theta_{z3}]$$

The Reduced Externally Applied Load Vector (LOADR) is presented in Figure III-B.16. The size of this vector is 6 x 1. This is true because there are 6 degrees of freedom in the reduced stiffness matrix. There is one non-zero value shown in this vector. The

other eight values of force which make up the vector are equal to zero. From the figure it is seen that the force value presented corresponds to reduced degree of freedom (REDDOF) 1. From the Boundary Condition Information (Figure III-B.13) it is seen that this corresponds to a force in the Global X direction at node point 2 numerically equal to 550.0.

The vector of displacements (DISPR) is again of the order 6 x 1, since there are 6 degrees of freedom remaining after assembly and reduction. The ordering of the displacement vector is consistent with that of the boundary conditions shown in Figure III-B.13. The ordering of the displacement vector is as follows:

$$\{ q \}^T = [u_2, v_2, \theta_{z2}, u_3, v_3, \theta_{z3}]$$

It is to be noted that the displacements are referenced to the global axis of reference unless otherwise indicated. MATRIX DISPR is interpreted as follows.

MATRIX DISPR

REDDOF	NODE POINT	D.O.F.	DISP VALUE
1	2	u	0.0269096
2	2	v	0.0000627872
3	2	θ_z	-0.000338244
4	3	u	0.0268363
5	3	v	-0.0000627872
6	3	θ_z	-0.000336718

The stress matrix is also shown in Figure III-B.16 and is of the order 36 x 1. This is true because each frame element is defined by six forces at each end of the element, giving a total of 12 forces per element. Since 3 frame elements were used in this analysis, the size of the stress vector is 36 x 1. The stress vector is related to element coordinates and for the frame element, description of stress behavior is accepted as the definition of the twelve forces acting at the two grid point connections. The ordering for the stress matrix is as follows: (See Figure III-B.1 for Element Numbering).

MATRIX STRESS

NRSEL	ELEMENT	STRESS(FORCE)	NODE POINT
1	1	Fx = -235.452	1
2	1	Fy = -275.269	1
3	1	Fz = 0.0	1
4	1	Mx = 0.0	1
5	1	My = 0.0	1
6	1	Mz = -7557.77	1
7	1	Fx = 235.452	2
8	1	Fy = 275.269	2
9	1	Fz = 0.0	2
10	1	Mx = 0.0	2
11	1	My = 0.0	2
12	1	Mz = -5655.14	2
13	2	Fx = 274.729	2
14	2	Fy = -235.452	2
15	2	Fz = 0.0	2
16	2	Mx = 0.0	2
17	2	My = 0.0	2
18	2	Mz = -5655.14	2
19	2	Fx = -274.729	3
20	2	Fy = 235.452	3
21	2	Fz = 0.0	3
22	2	Mx = 0.0	3
23	2	My = 0.0	3
24	2	Mz = -5646.56	3
25 (etc.)	3 (etc.)	Fx = 235.452 (etc.)	3 (etc.)

. The vector is read row-wise and note that only non-zero values are printed.

The MATRIX FORCES are presented in Figure III-B.17. These forces are defined with respect to the Global Coordinate System. The Matrix Force vector is a 54×1 vector for the following reason. Each frame element is defined by three node points with the third point defining the element Xg-Yg plane. Since there are six forces per point, each element is defined by 18 forces with the last six related to the third node point always being equal to zero. The ordering of the Matrix Forces is as follows:

(See Figure III-B.1 for Element Numbering.)

MATRIX FORCES

D.O.F.	ELEMENT NO.	FORCE	NODE POINT
1	1	Fx = -275.269	1
2	1	Fy = -235.452	1
3	1	Fz = 0.0	1
4	1	Mx = 0.0	1
5	1	My = 0.0	1
6	1	Mz = 7557.77	1
7	1	Fx = 275.269	2
8	1	Fy = 235.452	2
9	1	Fz = 0.0	2
10	1	Mx = 0.0	2
11	1	My = 0.0	2
12	1	Mz = 5755.14	2
13	1	Fx = 0	5
14	1	Fy = 0	5
15	1	Fz = 0	5
16	1	Mx = 0	5
17	1	My = 0	5
18	1	Mz = 0	5
19	2	Fx = 274.729	2
20	2	Fy = -235.452	2
21	2	Fz = 0.0	2
22	2	Mx = 0.0	2
23	2	My = 0.0	2
24	2	Mz = -5655.14	2
25	2	Fx = -274.729	3
26	2	Fy = 235.452	3
27	2	Fz = 0.0	3
28	2	Mx = 0.0	3
29	2	My = 0.0	3
30	2	Mz = -5646.56	3
31	2	Fx = 0	5
32	2	Fy = 0	5
33	2	Fz = 0	5
34	2	Mx = 0	5
35	2	My = 0	5
36	2	Mz = 0	5
37	3	Fx = 274.732	3
38	3	Fy = -235.452	3
(etc.)	(etc.)	(etc.)	(etc.)

The matrix force vector is read row-wise and only non-zero values of force are printed. Note again that the Element Forces are referenced to the Global Axis unless otherwise indicated.

The final item of information contained in Figure III-B. 17 is the vector of reactions (MATRIX REACT). This vector is a 30 x 1 since there are five node points associated with this problem and six associated degrees of freedom per node-point. The reactions are read row-wise and are interpreted as follows.

MATRIX REACT

D.O.F.	REACTION	NODE POINT
1	P _{RX} = -275.269	1
2	P _{RY} = -235.452	1
3	P _{RZ} = 0	1
4	M _{RX} = 0	1
5	M _{RY} = 0	1
6	M _{RZ} = 7557.77	1
7	_____	2
8	_____	2
9	_____	2
10	_____	2
11	_____	2
12	_____	2
13	_____	3
14	_____	3
15	_____	3
16	_____	3
17	_____	3
18	_____	3
19	P _{RX} = -274.732	4
20	P _{RY} = 235.452	4
21	P _{RZ} = 0	4
22	M _{RX} = 0	4
23	M _{RY} = 0	4
24	M _{RZ} = 7540.60	4
25	_____	5
26	_____	5
27	_____	5
28	_____	5
29	_____	5
30	_____	5

THREE ELEMENT PORTAL FRAME SUBJECTED TO A HORIZONTAL LOAD
 THREE FRAME ELEMENTS USED IN THE IDEALIZATION
 REFERENCE- H.C.MARTIN MATRIX METHODS OF STR. ANALYSIS PAGE 309

REVISIONS OF MATERIAL TAPE

ASTERISK (*) PRECEDING MATERIAL
 IDENTIFICATION INDICATES THAT INPUT
 ERROR RETURNS WILL NOT RESULT IN
 TERMINATION OF EXECUTION

REVISION NUMBER 12
 MATERIAL IDENTIFICATION ALUMINUM
 NUMBER OF MATERIAL PROPERTY POINTS 1
 NUMBER OF PLASTIC PROPERTY POINTS -0
 MASS DENSITY -0.

MATERIAL PROPERTIES

YOUNG'S MODULI

DIRECTIONS

TEMPERATURE XX 0.10000E 08

YY 0.10000E 08

ZZ 0.10000E 08

THERMAL EXPANSION COEFFICIENTS

DIRECTIONS

TEMPERATURE XX 0.12500E-04

YY 0.12500E-04

ZZ 0.12500E-04

POISSON'S RATIOS

DIRECTIONS

XY 0.30000E 00

YZ 0.30000E 00

ZX 0.30000E 00

RIGIDITY MODULI

DIRECTIONS

XY 0.304615E 07

YZ 0.304615E 07

ZX 0.304615E 07

FIGURE III-B.12 TITLE AND MATERIAL DATA OUTPUT, THREE ELEMENT PORTAL FRAME

NO. SPECimens • 3 NO. DEGREE OF PURCHASER • 2

POINT	X	Y	Z	TEMPERATURES	PRESSURES
1	0.	0.	0.	0.	0.
2	0.	0.0000000E 02	0.	0.	0.
3	0.0000000E 02	0.0000000E 02	0.	0.	0.
4	0.0000000E 02	0.	0.	0.	0.
5	0.0000000E 02	0.0000000E 02	0.	0.	0.

SECURITY CONDITION INFORMATION

[illegible]

TOTAL NO. ELEMENTS = 3

SOLVER TYPE	PAT.MD.	CASE	TEMP.	PRINT NO.		-----GRID POINTS-----	EXTRA GRID PTS	-----SECTION PROPERTIES-----
1	11	12	6 -6.	2	3	1	2	3
MATERIAL NUMBER.....	12							
MATERIAL IDENTIFICATION.....	ALUMINUM							
ANALYSIS CAPABILITY.....								
INPUT PRINT CODE.....	1							
ELEMENT PRINT CODE.....	-1							
 INTERPOLATED MATERIAL PROPERTIES THERMAL EXPANSION COEFFICIENTS								
						0.1200000E+00	0.1200000E+00	0.1200000E+00
						0.3004150E-07	0.3004150E-07	0.3004150E-07
 THERMAL EXPANSION COEFFICIENTS								
						0.1200000E+00	0.1200000E+00	0.1200000E+00
						0.3004150E-07	0.3004150E-07	0.3004150E-07
 RIGIDITY MODEL I								
 INTERPOLATED PLASTIC PROPERTIES								
 NONE								
 PDE-STRAIN INPUT								
 NONE								
 PDE-STRESS INPUT								
 NONE								
 EXTERNAL INPUT								

GLASS TYPE	WAT. ARG.	CASE TEMP.	POW. MB.	-----GAIN POINTS-----	EXTRA GAIN PTS	-----SECTION PROPERTIES-----
2 11	12 0 0.	0 3	2 3 5		0.15000 02	0.15000 02
					0.27000 02	0.27000 02
3 11	12 0 0.	0 3	3 4 5		0.15000 02	0.15000 02
					0.27000 02	0.27000 02

FIGURE III-B.13 GRIDPOINT DATA, BOUNDARY CONDITION AND FINITE ELEMENT DESCRIPTION OUTPUT, THREE ELEMENT PORTAL FRAME

EXTERNAL LOAD CONDITIONS 1

LOAD NO. 1

NUMBER OF LOADED NODES 1
2 0.550000E 03 0.0

ELEMENT LOAD SCALAR = 0.0
0.0 0.0

TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN

30 X 1

0.0	0.0	0.0	0.0	0.0
0.55000000E 03	0.0	0.0	0.0	0.0
0.0	0.0	0.0	0.0	0.0
0.0	0.0	0.0	0.0	0.0
0.0	0.0	0.0	0.0	0.0

1-ZERO FOR STRUCTURE = 0.0

FIGURE III-B.14 TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN OUTPUT, THREE ELEMENT PORTAL FRAME

MATRIX STIFF

CUTOFF = 0.

SIZE 6 BY 6

ROW	COL.	K ₁₁		K ₁₁		K ₁₁		K ₁₁		K ₁₁		K ₁₁	
		FORCE	Col.	FORCE	Col.	FORCE	Col.	FORCE	Col.	FORCE	Col.	FORCE	Col.
012P.	1	0.376405E 07	3	0.351962E 06	4	-0.375000E 07							
012P.	2	0.376405E 07	3	0.351962E 06	5	-0.140404E 05	6	0.351962E 06					
012P.	3	0.351962E 06	2	0.351962E 06	3	0.225000E 00	5	-0.351962E 06	6	0.562500E 07			
012P.	4	-0.375000E 07	4	0.376405E 07	6	0.351962E 06							
012P.	5	-0.140404E 05	3	-0.351962E 06	5	0.376405E 07	6	-0.351962E 06					
012P.	6	0.351962E 06	3	0.562500E 07	4	0.351962E 06	5	-0.351962E 06	6	0.225000E 00			

FIGURE III-B.15 REDUCED STIFFNESS MATRIX OUTPUT, THREE ELEMENT PORTAL FRAME

MATRIX LOAD				PAGE 1
CUTOFF = 0.		SIZE 6 BY 1		
REDOOF	REDOOF	REDOOF		
COND.	1 1 0.550000E 03			

MATRIX DISPL				PAGE 1
CUTOFF = 0.		SIZE 6 BY 1		
REDOOF	REDOOF	REDOOF		
COND.	1 1 0.26904E-01 2 0.627072E-04 3 -0.330244E-03 4 0.260363E-01 5 -0.627072E-04			

MATRIX STRESS				PAGE 1
CUTOFF = 0.		SIZE 36 BY 1		
MRSEL	MRSEL	MRSEL	MRSEL	
COND.	1 1 -0.235452E 03 2 -0.275209E 03 3 -0.755777E 04 4 -0.235452E 03 5 -0.275209E 03 6 -0.235452E 03 7 0.235452E 03 8 0.275209E 03 9 -0.275209E 03 10 -0.235452E 03 11 -0.235452E 03 12 -0.235452E 03 13 0.275209E 03 14 -0.235452E 03 15 -0.235452E 03 16 -0.235452E 03 17 0.235452E 03 18 -0.235452E 03 19 -0.275209E 03 20 0.235452E 03 21 -0.235452E 03 22 -0.235452E 03 23 -0.235452E 03 24 -0.235452E 03 25 -0.235452E 03 26 0.235452E 03 27 0.235452E 03 28 -0.235452E 03 29 -0.235452E 03 30 0.235452E 03 31 -0.235452E 03 32 -0.235452E 03 33 -0.235452E 03 34 -0.235452E 03 35 -0.235452E 03 36 0.235452E 03			

FIGURE III-B.16 LOAD, DISPLACEMENT AND STRESS OUTPUT, THREE ELEMENT PORTAL FRAME

```

PAGE 1
MATRIX FORCES
CUTOFF = 0.
D.O.F 1 12 26 43
1 -0.275269E 03 2 -0.235452E 03 6 0.755777E 04 7 0.275269E 03 8 0.235452E 03
12 0.565514E 04 19 0.274729E 03 20 -0.235452E 03 24 -0.565514E 04 25 -0.274729E 03
26 0.235452E 03 30 -0.564656E 04 37 0.274732E 03 38 -0.235452E 03 42 0.564656E 04
43 -0.274732E 03 44 0.235452E 03 48 0.754060E 04

```

```

PAGE 1
MATRIX REACT
CUTOFF = 0.
D.O.F 1 13 24
1 -0.275269E 03 2 -0.235452E 03 6 0.755777E 04 7 -0.135640E-02 12 -0.244161E-03
13 0.286773E-02 14 -0.190735E-03 18 -0.305176E-03 19 -0.274732E 03 20 0.235452E 03
24 0.754060E 04

```

```

SEND
SIBSYS
REMOVE SYSLS2

```

FIGURE III-B.17 FORCE AND REACTION OUTPUT, THREE ELEMENT PORTAL FRAME


C. CANTILEVER BEAM

A cantilever beam is shown in Figure III-C.1 along with its loading, dimensions and pertinent material properties. The beam is idealized using axial force members and a quadrilateral shear panel. The preprinted input data forms associated with this beam are displayed in Figures III-C.2 through III-C.10.

In Figure III-C.6 (Boundary Condition Section) it is interesting to note the use of the MODAL and Repeat options. There are two exceptions to the MODAL card (Grid Points 2 and 3). Grid Point 3 has exactly the same boundary conditions as Grid Point 2, therefore the Repeat option is employed by placing an 'X' in Column 12 opposite the entry for Grid Point 3. Note that the 2 exceptions to the MODAL card are called out on the System Control Information Data Form (Figure III-C.4).

In Figure III-C.7 (External Loads Section) Grid Points 3 and 4 have applied external loading. Note that there are 2 external load cards per grid point.

In Figure III-C.9 (Element Input) the MODAL card is used for Element Numbers 2 and 3. These are the Axial Force Members parallel to the X Axis. For Element Number 1, the Quadrilateral Shear Panel, the thickness of 0.0787 inches is entered in Location A. Finally for Element No. 4 the cross-sectional area of 0.10 sq. inches is entered. The area for Element No. 5 is repeated by simply placing an "X" in the repeat column opposite the entry for Element No. 5.

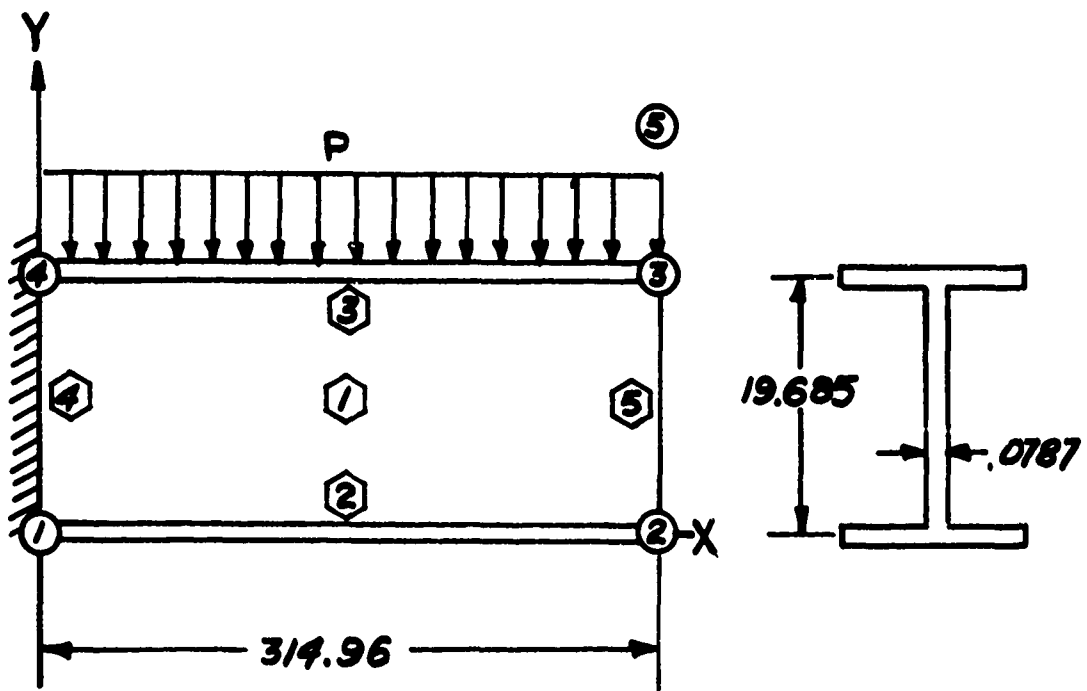

$$E = 31.284 \times 10^6 \text{ PSI}$$

$$\nu = .30$$

$$P = 112014 \text{ LB/IN}$$

FIGURE III-C.I - Idealized Cantilever Beam

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

111

No. of Requests	789
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

MATERIAL TAPE INPUT

[illegible]

MATERIAL PROPERTIES TABLE

[illegible]

FIGURE III-C.3 MATERIAL TAPE INPUT, CANTILEVER BEAM

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

SYSTEM CONTROL INFORMATION

ENTER APPROPRIATE NUMBER, RIGHT
ADJUSTED, IN BOX OPPOSITE
APPLICABLE REQUESTS

	S	Y	S	T	E	M	(/)		
	1	2	3	4	5	6			
1. Number of System Grid Points						5			
	1	2	3	4	5	6			
2. Number of Input Grid Points						5			
	7	8	9	10	11	12			
3. Number of Degrees of Freedom/Grid Point						6			
						13	14		
4. Number of Load Conditions						1			
						15	16		
5. Number of Initially Displaced Grid Points									
	17	18	19	20	21	22			
6. Number of Prescribed Displaced Grid Points									
	23	24	25	26	27	28			
7. Number of Grid Point Axes Transformation Systems									
						29	30		
8. Number of Elements						5			
	31	32	33	34	35	36			
9. Number of Requests and/or Revisions of Material Tape.						1			
						37	38		
10. Number of Input Boundary Condition Points						2			
	39	40	41	42	43	44			
11. T_0 For Structure (With Decimal Point)						0	.	0	()
	45	46	47	48	49	50	51	52	

FIGURE III-C.4 SYSTEM CONTROL INFORMATION, CANTILEVER BEAM

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1	2	3	4	5	6
C	O	O	R	D	

{ / }

GRIDPOINT COORDINATE

[illegible]

FIGURE III-C.5 GRIDPOINT COORDINATES, CANTILEVER BEAM

151

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

EXTERNAL LOADS

[illegible]

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR ARE
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

ELEMENT INPUT

A	B	C	D	E	F
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8	9	0	1	2
8	9	0	1	2	3
9	0	1	2	3	4
0	1	2	3	4	5
1	2	3	4	5	6
2	3	4	5	6	7
3	4	5	6	7	8
4	5	6	7	8	9
5	6	7	8	9	0
6	7	8	9	0	1
7	8				

Element Number	Repeat					
	1	2	3	4	5	6
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						
3						
4						
5						
6						
7						
8						
9						
0						
1						
2						

FIGURE III-C.9 ELEMENT INPUT, CANTILEVER BEAM

MAGIC STRUCTURAL ANALYSIS SYSTEM

INPUT DATA FORMAT

CHECK OR END CARD

C	H	E	C	K
1	2	3	4	5

 (/)

E	N	D
1	2	3

 (/)

FIGURE III-C.10 END CARD, CANTILEVER BEAM

The output supplied by the MAGIC System for the cantilever beam is as follows:

Figures III-C.11 thru III-C.14 display the output from the Structural Systems Monitor. These figures display the input data pertinent to the particular problem being solved.

Referring to Figure III-C.1 it is seen that one shear panel and four axial force members are used in this idealization. Element Number 1 represents the shear panel while elements 2, 3, 4, and 5 represent the axial force members. In Figure III-C.13, the external input for element number 1 is equal to 0.07870. This value represents the thickness of the quadrilateral shear panel being employed. For elements 2 and 3 the values of the external input are equal to 1.55 while for elements 4 and 5 the values are equal to 0.10. These values represent the cross-sectional area of the respective axial force members.

Figure III-C.14 displays the transformed external assembled (unreduced) load column for this problem. This vector is read row-wise and is consistent with the ordering of the displacements displayed in the Boundary Condition Section shown in Figure III-C.12. It is seen from this vector that an externally applied load of -176.40 is acting at node point 3 in the negative Y direction and a force of -176.40 is acting at node point 4 also in the negative Y direction.

Figure III-C.15 shows the assembled and reduced stiffness matrix for this problem. The stiffness matrix is presented row-wise and its ordering is consistent with that of the boundary conditions shown in Figure III-C.12. For this case, the ordering of the displacement vector is as follows:

$$\{ q \}^T = [u_2, v_2, u_3, v_3]$$

Figure III-C.16 shows the reduced Externally Applied Load Vector (LOADR). This is a 4 x 1 vector with one non-zero value of force displayed. This value corresponds to reduced degree of freedom (REDDOF) 4. From the Boundary Condition Information (Figure III-C.12) it is seen that this corresponds to a force of -176.40 in the negative Y direction at node point 3.

The vector of displacements (DISPR) also shown in Figure III-C.16, is again of the order 4 x 1, since there are 4 degrees of freedom remaining after assembly and reduction. The ordering of the displacement vector is consistent with that of the boundary conditions shown in Figure III-C.12 and is as follows:

MATRIX DISPR

REDDOF	NODE POINT	D.O.F.	DISP. VALUE
1	2	u	-0.00920315
2	2	v	-0.150560
3	3	u	0.009230315
4	3	v	-0.15113

Note that the displacements are referenced to the global system axis unless otherwise indicated.

The stress matrix is the last item of information shown in Figure III-C.16. This matrix is of the order 49×1 . This is true for the following reason. The quadrilateral shear panel is described by one constant shear stress value. The axial force members are defined by six forces at each end of the element giving a total of 12 forces per element. Since four axial force members were used in this analysis, their total contribution to the stress vector is 48. Adding the stress contributed by the shear panel the final size of the stress vector is 49×1 .

The stress vector is related to element coordinates and the value of stress given for the shear panel has units of (force/length). Description of stress behavior for the axial force members is accepted as the definition of the twelve forces acting at the two grid point connections. The ordering of the Stress matrix is as follows: (See Figures III-C.1 for Element Numbering.) Note that only non-zero values of stress are printed.

MATRIX STRESS

NRSEL	ELEMENT	STRESS	FORCE	NODE POINT
1	1	$T_{xy} = 144.323$	_____	_____
2	2		$F_x = 1416.89$	1
3	2		$F_x = -1416.89$	2
14	3		$F_x = -1416.89$	3
20	3		$F_x = 1416.89$	4
38	5		$F_x = 88.2002$	2
44	5		$F_x = -88.2002$	3

Note again that stress values are referenced to the element coordinate system.

In Figure III-C.17, the vector of MATRIX FORCES is presented. These forces are defined with respect to the Global Coordinate System. The Matrix Force Vector is a 96 x 1 vector for the following reason. Element Number 1 (Quadrilateral Shear Panel) is defined by 4 node points with six forces per node point. Each axial force member is defined by three node points with the third point defining the element Xg-Yg plane. Since these are six forces per point, each element is defined by 18 forces with the last six for each element related to the third node point always being equal to zero. Since four axial force members were used in this analysis their total contribution is 72 forces. Adding the contribution of the shear panel, the final size of the Matrix Force vector is 96 x 1. The ordering of the Matrix Force vector is as follows: (See Figure III-C.1 for element numbering and note again that only non-zero values of force are printed.)

MATRIX FORCES

D.O.F.	ELEMENT NO.	FORCE	NODE POINT
1	1	$F_X = 1417.89$	1
2	1	$F_Y = 88.200$	1
7	1	$F_X = 1416.89$	2
8	1	$F_Y = -88.200$	2
13	1	$F_X = -1416.89$	3
14	1	$F_Y = -88.200$	3
19	1	$F_X = -1416.89$	4
20	1	$F_Y = 88.200$	4
25	2	$F_X = 1416.89$	1
31	2	$F_X = -1416.89$	2
43	3	$F_X = 1416.89$	3
49	3	$F_X = -1416.89$	4
80	5	$F_Y = 88.2002$	2
86	5	$F_Y = -88.2002$	3

The final item of information contained in Figure II-C.17 is the vector of reactions (MATRIX REACT). This vector is a 30 x 1 since there are five node points associated with this problem and six associated degrees of freedom per node point.

Only non-zero terms are printed for this vector. The reactions are read row-wise and are interpreted as follows:

MATRIX REACT

D.O.F.	REACTION	NODE POINT
1	$P_{RX} = 2833.77$	1
2	$P_{RY} = 88.200$	1
7	$-0.0002746 = 0$	2
8	$0.0002136 = 0$	2
13	$0.0003509 = 0$	3
14	$-0.0001469 = 0$	3
19	$P_{RX} = -2833.77$	4
20	$P_{RY} = 264.60$	4

ONE ELEMENT CANTILEVER BEAM IDEALIZED USING FOUR AXIAL FORCE
MEMBERS AND ONE QUADRILATERAL SHEAR PANEL REFERENCE: UPPER AND
LOWER BOUNDS TO STRUCTURAL DEFORMATIONS BY DUAL ANALYSIS IN
FINITE ELEMENTS G.SANDER AND B.FRAEIJIS DE VEEBEKE AFFOL TR 66 199
PAGES 112-119

REVISIONS OF MATERIAL TAPE

ASTERISK (*) PRECEDING MATERIAL
IDENTIFICATION INDICATES THAT INPUT
ERROR RETURNS WILL NOT RESULT IN
TERMINATION OF EXECUTION

REVISION
MATERIAL NUMBER 95358
MATERIAL IDENTIFICATION E=3.13E7 MV=0.30
NUMBER OF MATERIAL PROPERTY POINTS 1
NUMBER OF PLASTIC PROPERTY POINTS -0
MASS DENSITY -0.

MATERIAL PROPERTIES

YOUNG'S MODULI

DIRECTIONS

TEMPERATURE	XX	YY	ZZ	XV	YZ	ZX
0.	0.312840E C8	0.312840E C8	0.312840E C8	0.300000E 00	0.300000E 00	0.300000E 00

THERMAL EXPANSION COEFFICIENTS

DIRECTIONS

TEMPERATURE	XX	YY	ZZ	XV	YZ	ZX
0.	0.125000E-C4	0.125000E-C4	0.125000E-C4	0.120323E 08	0.120323E 08	0.120323E 08

POISSON'S RATIOS

DIRECTIONS

RIGIDITY MODULI

DIRECTIONS

FIGURE III-C.11 TITLE AND MATERIAL DATA OUTPUT, CANTILEVER BEAM

5 REF. PCINTS

NO. DIRECTIONS = 3 NO. DEGREES OF FREEDOM = 2

POINT	GRIDPOINT DATA			TEMPERATURES	PRESSURES
	X	Y	Z		
1	C.	0.	0.	0.	0.
2	0.31496000E 03	0.	0.	0.	0.
3	0.31496000E 03	0.19606000E 02	0.	0.	0.
4	C.	C.15606000E 02	0.	0.	0.
5	0.31496000E 03	C.25600000E 02	0.	0.	0.

BOUNDARY CONDITION INFORMATION

NCODES	DEGREES OF FREEDOM				
1	0	C	0	C	0
2	1	1	0	C	0
3	1	1	0	C	0
4	0	0	0	C	0
5	0	0	0	C	0

FIGURE III-C.12 GRID POINT DATA AND BOUNDARY CONDITION REPORT, "ARTILLERY HEA"

EXTERNAL LOAD CONDITIONS 1

LOAD NO. 1		NUMBER OF LOADED NODES 2		ELEMENT LOAD SCALAR = 0.	
3	0.	-0.17640E C3	0.	0.	0.
4	0.	-0.17640E C3	0.	0.	0.
TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN					
30 x 1					
0.	0.	0.	0.	0.	0.
0.	0.	0.	0.	0.	0.
0.	-0.17640CCCE C3	0.	0.	0.	0.
0.	-0.17640CCCE C3	0.	0.	0.	0.
0.	0.	0.	0.	0.	0.
T-ZERO FOR STRUCTURE = 0.					

FIGURE III-C.14 TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN OUTPUT, CANTILEVER BEAM

CUTOFF = C.										MATRIX STIFF		SIZE		BY		PAGE		1
FORCE		FORCE		FORCE		FORCE		FORCE		FORCE		FORCE		FORCE		FORCE		
DISP.	1	1	0.395699E 07	2	-0.236736E 06	3	-0.380303E 07	4	-0.236736E 06									
DISP.	2	1	-0.236736E 06	2	0.174300E 05	3	0.236736E 06	4	-0.144827E 06									
DISP.	3	1	-0.380303E 07	2	0.236736E 06	3	0.395699E 07	4	0.236736E 06									
DISP.	4	1	-0.236736E 06	2	-0.144827E 06	3	0.236736E 06	4	0.174300E 06									

FIGURE III-C.15 REDUCED STIFFNESS MATRIX OUTPUT, CANTILEVER BEAM

MATRIX LOAD PAGE 1
 CUTOFF = 0.
 REDDOF REDDOF REDDOF REDDOF
 1 4 -0.176400E 03

MATRIX DISPR PAGE 1
 CUTOFF = 0.
 REDDOF REDDOF REDDOF REDDOF
 1 1 -0.920319E-02 2 -0.190560E 00 3 0.920319E-02 4 -0.191113E 00

MATRIX STRESS PAGE 1
 CUTOFF = 0.
 MRSEL MRSEL MRSEL MRSEL MRSEL
 1 1 -0.114323E 03 2 0.141689E 04 8 -0.141689E 04 14 -0.141689E 04 20 0.141689E 04
 38 0.882002E 02 44 -0.882002E 02

FIGURE III-C.16 LOAD, DISPLACEMENT AND STRESS OUTPUT, CANTILEVER BEAM

		CUTOFF = C.				MATRIX FORCES				PAGE 1	
		D.O.F		D.O.F		D.O.F		D.O.F			
		0.0.F		0.0.F		0.0.F		0.0.F			
COND.	1	1	0.141689E 04	2	0.882000E 02	7	0.141689E 04	8	-0.882000E 02	13	-0.141689E 04
	14	14	-0.882000E 02	19	-0.141689E 04	20	0.882000E 02	25	0.141689E 04	31	-0.141689E 04
	43	43	0.141689E 04	49	-0.141689E 04	80	0.882002E 02	86	-0.882002E 02		

		CUTOFF = 0.				MATRIX REACT				PAGE 1	
		D.O.F		D.O.F		D.O.F		D.O.F			
		D.O.F		D.O.F		D.O.F		D.O.F			
COND.	1	1	0.283377E 04	2	0.882000E 02	7	-0.274658E-03	8	0.213623E-03	13	0.350952E-03
	14	14	-0.146866E-03	19	-0.283377E 04	20	0.284600E 03				

SIBSYS
 SREMOVE SYSLB2

FIGURE III-C.17 FORCE AND REACTION OUTPUT, CANTILEVER BEAM

D. THICK WALLED DISK

A thick walled disk under the influence of a radially varying thermal loading is shown in Figure III-D.1 along with its dimensions and pertinent material properties. This disk is idealized using triangular cross-section ring elements. The preprinted input data forms associated with this problem are shown in Figures III-D.2 through III-D.10.


In Figure III-D.3 (Material Tape Input Section) note that 2 material (temperature) points are entered for the material in question. A linear interpolation for material properties is performed for temperatures which fall between these two temperature points.

In Figure III-D.6 (Grid Point Temperature Section) it is instructive to note the use of the Repeat Option. Grid point 5 has the same temperature as grid point 1, therefore the Repeat option is employed by placing an 'X' in column 12 opposite the entry for Grid Point Number 5. This same procedure is also used for Grid Points 2 and 3. Note that the Grid Points are not entered sequentially allowing the use of the Repeat option. It should also be noted that the temperature values are entered in Columns 13-22.

In Figure III-D.7 (Boundary Condition Section) it is instructive to note the use of the MODAL option. There is only 1 exception to the MODAL card and this is Grid Point Number 5. This exception must be called out on the System Control Information Data Form (Figure III-D.4).

In Figure III-D.8 (External Loads Section) the following information is evident.

- (1) One load condition is input
- (2) The External Applied Load Scalar equals 1.0
- (3) The MODAL option is employed, and loads of 0.0 are entered in the locations corresponding to F_x , F_y , and F_z . Note that this is the only entry required (the Moment and Generalized Values are ignored) since the Triangular Cross-Section ring has three degrees of freedom per point thus requiring only one external load card per grid point.

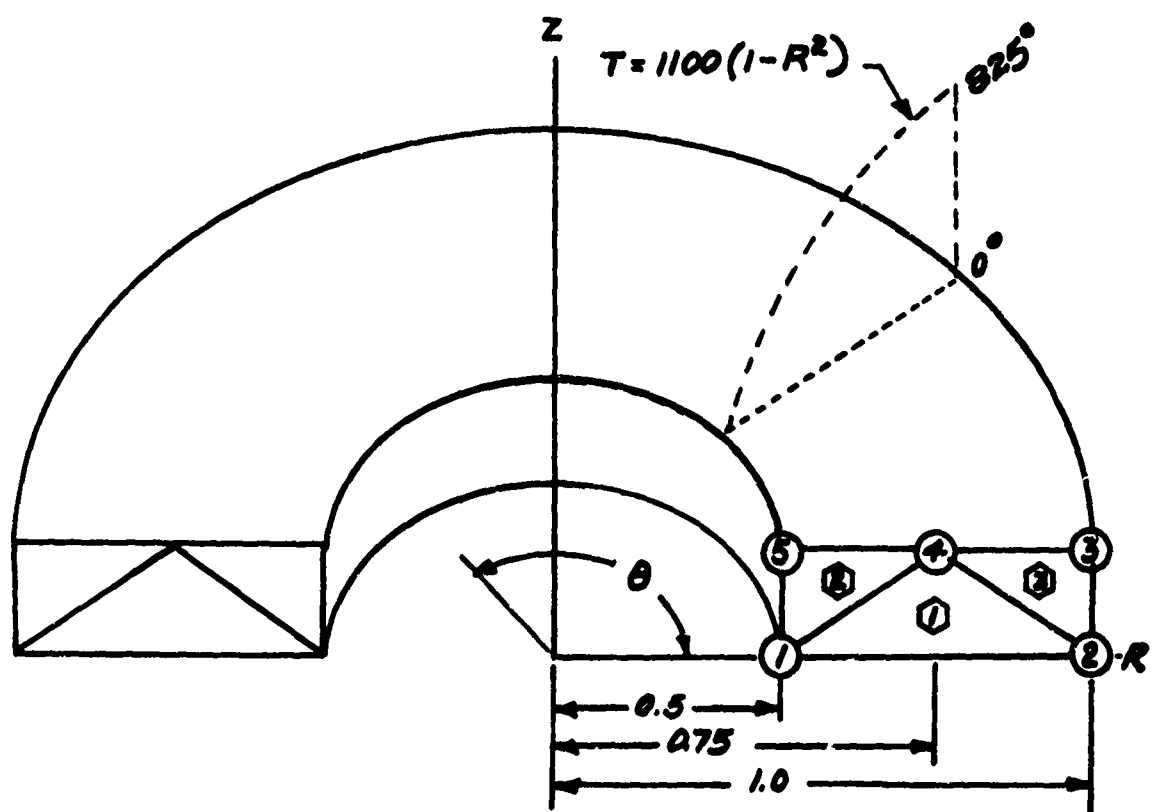

$$E = 1.8 \times 10^7 \text{ PSI}$$

$$\mu = 0.3$$

FIGURE III - D.1 - Idealized Thick Walled Disc

(S)

2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20

FIGURE III-D.9 ELEMENT CONTROL DATA, THICK WALLED DISK

MAGIC STRUCTURAL ANALYSIS SYSTEM

INPUT DATA FORMAT

CHECK OR END CARD

C	H	E	C	K
1	2	3	4	5

 (/)

E	N	D
1	2	3

 (/)

FIGURE III-D.10 END CARD, THICK WALLED DISK

The output supplied by the MAGIC System for the thick walled disk is as follows:

Figures III-D.11 thru III-D.14 display the output from the Structural Systems Monitor. These figures display the input data pertinent to the particular problem being solved.

Figure III-D.12 displays the coordinate and boundary condition information for this problem.

In the Gridpoint Data Section note that node points 1 and 5 have temperature values input of 825.00 while node point 4 has a temperature of 481.25.

In the Boundary Condition Section note that there are three allowable degrees of freedom per point for the triangular ring element as follows:

(u, o, w). The ordering of the reduced displacement vector is as follows:

$$\{q\}^T = [u_1, w_1, u_2, w_2, u_3, w_3, u_4, w_4, u_5]$$

Figure III-D.14 displays the Transformed External Assembled Load Column. Note that these loads are all equal to zero since this is a thermal stress problem and thermal loads are element applied loads.

System level output of final results is handled by the FORMAT standard matrix print capability. These results are shown in Figure III-D.15 thru III-D.17.

Figure III-D.15 shows the assembled and reduced stiffness matrix. The stiffness matrix is presented row-wise and only non-zero terms are displayed. The ordering of the stiffness matrix is consistent with that of the boundary conditions shown in Figure III-D.12. For this case the order of the displacement vector is as follows:

$$\{q\}^T = [u_1, w_1, u_2, w_2, u_3, w_3, u_4, w_4, u_5]$$

Figure III-D.16 displays the thermal stress correction vector SZAEL. This vector is of the order 12×1 , since four stresses are evaluated at the centroid of each element and three elements were used in this analysis. The stress correction vector is of the following form:

$$\{ \text{SZAEL} \} = \Delta T \quad [E] \quad \{ \bar{\alpha} \}$$

where $[E]$ is the material property matrix which has the following form

$$E = \frac{1}{\Delta} \begin{bmatrix} E_r(1 - \nu_{ez} \nu_{ze}), & E_r(\nu_{er} + \nu_{zr} \nu_{ez}), & E_r(\nu_{zr} + \nu_{ze} \nu_{er}), & 0 \\ & E_e(1 - \nu_{rz} \nu_{zr}) & , & E_e(\nu_{ze} + \nu_{re} \nu_{zr}), & 0 \\ & & & E_z(1 - \nu_{re} \nu_{er}) & , & 0 \\ \text{Symmetric} & & & & & \Delta G_{rz} \end{bmatrix}$$

where

$$\Delta = (1 - \nu_{re} \nu_{er} - \nu_{ez} \nu_{ze} - \nu_{zr} \nu_{rz} - \nu_{re} \nu_{ez} \nu_{zr} - \nu_{rz} \nu_{er} \nu_{ze})$$

$$\{ \bar{\alpha} \}^T = [\alpha_r, \alpha_e, \alpha_z, 0]$$

where α_r , α_e , and α_z are the coefficients of thermal expansion in the r, e, and z directions respectively. ΔT is the difference between the centroidal temperature of the element and the equilibrium temperature.

Rewrite the material properties matrix as follows:

$$[E] = \begin{bmatrix} E_{11} & E_{12} & E_{13} & 0 \\ & E_{22} & E_{23} & 0 \\ & & E_{33} & 0 \\ \text{SYMM.} & & & E_{44} \end{bmatrix}$$

Using the above notation the SZAEI vector is read row-wise as follows:

MATRIX SZAEI

ROW	ELEMENT NUMBER	ALGEBRAIC VALUE	NUMERICAL VALUE
1	1	$(E_{11} \alpha_r + E_{12} \alpha_e + E_{13} \alpha_z)$	1959.37
2	1	$(E_{12} \alpha_r + E_{22} \alpha_e + E_{23} \alpha_z)$	1959.37
3	1	$(E_{13} \alpha_r + E_{23} \alpha_e + E_{33} \alpha_z)$	1959.37
5	2	$(E_{11} \alpha_r + E_{12} \alpha_e + E_{13} \alpha_z)$	3196.87
6	2	$(E_{12} \alpha_r + E_{22} \alpha_e + E_{23} \alpha_z)$	3196.87
7	2	$(E_{13} \alpha_r + E_{23} \alpha_e + E_{33} \alpha_z)$	3196.87
9	3	$(E_{11} \alpha_r + E_{12} \alpha_e + E_{13} \alpha_z)$	721.875
10	3	$(E_{12} \alpha_r + E_{22} \alpha_e + E_{23} \alpha_z)$	721.875
11	3	$(E_{13} \alpha_r + E_{23} \alpha_e + E_{33} \alpha_z)$	721.875

The following item of information in the figure is the vector FTELAR (Reduced Element Applied Loads). The size of this vector is 9 x 1. The vector appears as follows and is read row-wise.

MATRIX FTELAR

REDDOF	NODE NUMBER	ELEMENT APPLIED LOAD VALUE
1	1	$P_R = -275.380$
2	1	$P_Z = -2618.81$
3	2	$P_R = 583.158$
4	2	$P_Z = -1673.88$
5	3	$P_R = 226.784$
6	3	$P_Z = 519.713$
7	4	$P_R = 583.158$
8	4	$P_Z = 2308.33$
9	5	$P_R = -502.164$

The last item of information appearing in the figure is the displacement vector (DISPR). This vector is of the order 9 x 1 since there are 9 degrees of freedom remaining after assembly and reduction. The displacement vector is read row-wise and is interpreted as follows:

MATRIX DISPR

REDDOF	NODE POINT	D.O.F.	DISP. VALUE
1	1	u	0.00002468
2	1	w	-0.000008658
3	2	u	0.00004296
4	2	w	-0.000004524
5	3	u	0.00004147
6	3	w	-0.000004173
7	4	u	0.00003550
8	4	w	-0.000002076
9	5	u	0.00002274

The stress matrix is shown in Figure III-D.17. This matrix is defined as follows:

$$\sigma = [E] \{ \epsilon \} - \{ \text{SZAEL} \}$$

where the thermal stress correction vector SZAEL has been discussed previously. The size of the final stress vector is a 12 x 1. Four stresses are evaluated at the centroid of each element

$$\{ \sigma_{\text{ELEM}} \} = [\sigma_r, \sigma_\theta, \sigma_z, \tau_{rz}]$$

Since there were 3 elements used in this problem the final stress vector is a 12 x 1. The ordering of the stress matrix is as follows: (See Figure III-D.1 for Element Position and Numbering Sequence.)

MATRIX STRESS

NRSEL	ELEMENT	STRESS	NODE POINT
1	1	$\sigma_r = -128.397$	Centroid
2	1	$\sigma_\theta = 0.004486$	Centroid
3	1	$\sigma_z = -9.52805$	Centroid
4	1	$\tau_{rz} = 173.245$	Centroid
5	2	$\sigma_r = -568.817$	Centroid
6	2	$\sigma_\theta = -619.640$	Centroid
7	2	$\sigma_z = -76.8477$	Centroid
8	2	$\tau_{rz} = -192.119$	Centroid
9	3	$\sigma_r = 346.753$	Centroid
10	3	$\sigma_\theta = 619.645$	Centroid
11	3	$\sigma_z = 64.4932$	Centroid
12	3	$\tau_{rz} = -161.234$	Centroid

The second item of information shown in Figure III-D.17 is the element forces (MATRIX FORCES). These forces are defined with respect to the Global Coordinate System. The Matrix Force Vector is a 27 x 1 vector since each triangle has three element forces defined per point (F_R , F_θ , F_z) with three points per element. Since three triangular ring elements were used in this analysis, the size of the vector is 27 x 1. The ordering of the Matrix Forces is as follows:

MATRIX FORCES

D.O.F.	ELEMENT NO.	FORCE	NODE POINT
1	1	$F_R = -71.7969$	1
3	1	$F_Z = -35.2073$	1
4	1	$F_R = -132.303$	2
6	1	$F_Z = 46.4323$	2
7	1	$F_R = 204.099$	4
9	1	$F_Z = -11.2250$	4
10	2	$F_R = 71.7968$	1
12	2	$F_Z = 35.2077$	1
13	2	$F_R = -120.463$	4
15	2	$F_Z = -35.2076$	4
16	2	$F_R = 0.000069 = 0$	5
18	2	$F_Z = -0.0001068 = 0$	5
19	3	$F_R = -83.6355$	4
21	3	$F_Z = 46.4321$	4
22	3	$F_R = 132.302$	2
24	3	$F_Z = -46.4318$	2
25	3	$F_R = -0.0000248 = 0$	3
27	3	$F_Z = -0.000259 = 0$	3

The final item of information contained in Figure III-D.17 is the vector of reactions (MATRIX REACT). This vector is a 15×1 since there are 5 node points associated with this problem and three associated degrees of freedom per node point. From the figure it is seen that all of the reactions are effectively equal to zero which is mandatory for this type of loading.

THICK WALLED DISK SUBJECTED TO A RADIAL THERMAL GRADIENT 1100(1-R002)

THREE TRIANGULAR RING ELEMENTS USED IN THE IDEALIZATION

REFERENCE- WANG APPLIED ELASTICITY-PAGE 201PLANE STRESS FORMULATION)

REVISIONS OF MATERIAL TAPE

ASTERISK (*) PRECEDING MATERIAL
IDENTIFICATION INDICATES THAT INPUT
ERROR RETURNS WILL NOT RESULT IN
TERMINATION OF EXECUTION

REVISION

MATERIAL NUMBER 12
MATERIAL IDENTIFICATION E=1.0E6,NU=0.30
NUMBER OF MATERIAL PROPERTY POINTS. . . . 2
NUMBER OF PLASTIC PROPERTY POINTS -0
MASS DENSITY.-0.

INPUT CODE 1

MATERIAL PROPERTIES

YOUNG'S MODULI

DIRECTIONS

TEMPERATURE	XX	YY	ZZ
0.	0.180000E 08	0.180000E 08	0.180000E 08
1000.00	0.180000E 08	0.180000E 08	0.180000E 08

THERMAL EXPANSION COEFFICIENTS

DIRECTIONS

TEMPERATURE	XX	YY	ZZ
0.	0.100000E-06	0.100000E-06	0.100000E-06
1000.00	0.100000E-06	0.100000E-06	0.100000E-06

POISSON'S RATIOS

DIRECTIONS

	XY	YZ	ZX
	0.300000E 00	0.300000E 00	0.300000E 00
	0.300000E 00	0.300000E 00	0.300000E 00

RIGIDITY MODULI

DIRECTIONS

	XY	YZ	ZX
	0.692308E 07	0.692308E 07	0.692308E 07
	0.692308E 07	0.692308E 07	0.692308E 07

FIGURE III-D.11 TITLE AND MATERIAL DATA OUTPUT, THICK WALLED DISK

4 REF. PCINTS

NO. DIRECTIONS = 3 NO. DEGREES OF FREEDOM = 1

POINT	GRIDPOINT DATA			TEMPERATURES	PRESSURES
	X	Y	Z		
1	0.5000000E 00	0.	0.	0.8250000E 03	0.
2	0.1000000E 01	0.	0.	-0.	0.
3	0.1000000E 01	0.	0.0999999E 00	-0.	0.
4	0.7500000E 00	0.	0.0999999E 00	0.4812500E 03	0.
5	0.5000000E 00	0.	0.0999999E 00	-0.8250000E 03	0.

NUMERARY CONDITION INFORMATION

NODES	DEGREES OF FREEDOM		
	1	2	3
1	1	1	2
2	1	1	4
3	1	0	1
4	1	1	1
5	1	0	0

FIGURE III-D.12 GRID POINT DATA AND BOUNDARY CONDITION OUTPUT, THICK WALLED DISK

TOTAL NO. ELEMENTS = 3

ELEM TYPE	PAT.NO.	CODE	TEMP.	PANT NO.	1	2	3	4	EXTRA GRID PTS	SECTION PROPERTIES
1 40	12	0	-0.	2						
MATERIAL NUMBER 12 MATERIAL IDENTIFICATION E=1.8E6,MU=0.30 ANALYSIS CAPABILITY ISOTROPIC INPUT PRINT CODE 1 ELEMENT PRINT CODE -1										
INTERPOLATED MATERIAL PROPERTIES TEMPERATURE - 0.43541667E 03 YOUNG'S MODULI 0.18000000E 08 POISSON'S RATIOS 0.30000000E 00										
THERMAL EXPANSION COEFFICIENTS 0.10000000E-06 RIGIDITY MODULI 0.69230769E 07										
INTERPOLATED PLASTIC PROPERTIES ACME PRE-STRAIN INPUT NONE PRE-STRESS INPUT NONE EXTERNAL INPUT NONE										
2 40	12	0	0.7104E 03	0	3	1	4	5	0.	0.
3 40	12	0	0.1804E C3	0	3	4	2	3	0.	0.

FIGURE III-D.13 FINITE ELEMENT DESCRIPTION OUTPUT, THICK WALLED DISK

EXTERNAL LOAD CONDITIONS 1

LOAD NO. 1
 NUMBER OF LOADED NODES 1
 ELEMENT LOAD SCALAR = 0.1000000E 01

TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN

15 x 1		
0.	0.	0.
0.	0.	0.
0.	0.	0.

1-ZERO FOR STRUCTURE = 0.

FIGURE III-D.14 TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN OUTPUT, THICK WALLED DISK


```

PAGE 1
      . . . . . STRESS
      CUTOFF = 0.
      MRSEL      MRSEL      SIZE      12 BY 1      MRSEL
      1 1 -0.128397E 03 2 -0.448608E-02 3 -0.952805E 01 4 0.173240E 03 5 -0.588817E 03
      6 -0.619640E 03 7 -0.768477E 02 8 -0.192119E 03 9 0.346753E 03 10 0.619649E 03
      11 0.644932E 02 12 -0.181234E 03
      COND.

```

```

PAGE 1
      . . . . . FORCES
      CUTOFF = 0.
      D.O.F      D.O.F      D.O.F      27 BY 1      D.O.F
      1 1 -0.717969E 02 3 -0.352073E 02 4 -0.132303E 03 6 0.464323E 02 7 0.204099E 03
      9 -0.112250E 02 10 0.717968E 02 12 0.352077E 02 13 -0.120463E 03 15 -0.352076E 02
      16 0.686648E-04 18 -0.108812E-03 19 -0.836359E 02 21 0.464321E 02 22 0.132302E 03
      24 -0.464318E 02 25 -0.247955E-04 27 -0.259399E-03
      COND.

```

```

PAGE 1
      . . . . . REACT
      CUTOFF = 0.
      D.O.F      D.O.F      D.O.F      15 BY 1      D.O.F
      1 1 -0.534050E-04 3 0.335693E-03 4 -0.217638E-03 6 0.511169E-03 7 -0.247955E-04
      9 -0.259399E-03 10 -0.190735E-04 12 -0.50924E-03 13 0.686648E-04 15 -0.108812E-03
      SEND
      $IBSYS
      $REMOVE
      $IBSYS
      $STOP

```

FIGURE III-D.17 STRESS, FORCE AND REACTION OUTPUT, THICK WALLED DISK

E. THIN WALLED CYLINDER, EDGE LOADING

A thin walled cylinder is shown in Figure III-E.1, along with its loading, dimensions, and pertinent material properties. This cylinder is idealized using two toroidal thin shell ring elements. The preprinted input data forms associated with this cylinder are shown in Figures III-E.2 through III-E.10.

In Figure III-E.6 (Boundary Condition Section) the User should note that all nine degrees of freedom are required for the Toroidal Ring Element ($u, 0, w, 0, u', 0, w', 0, w''$).

In Figure III-E.7 (External Loads Section) the following items are evident.

- (1) One load condition is entered.
- (2) The External Applied Load Scalar is equal to zero.
- (3) Grid point number 2 is loaded by the following load in the $X(R)$ direction.

$F_R = 188495.4$ lbs. This load was determined as follows (From Figure III-E.1).

$$F_R = (1500 \text{ lbs./in.})(2\pi r)$$

$$F_R = (1500)(2)(3.14)(20) = 188,495.4 \text{ lbs.}$$

The value which is entered for the applied moment was determined as follows: (From Figure III-E.1).

$$M_{y(0)} = (1000 \text{ in.-lb./in.})(2\pi r) = 125,663.6 \text{ in.-lb.}$$

- (4) All three entries are filled in for the Toroidal Ring because this element requires three external load cards per grid point.

In Figure III-E.9 (Element Input Section) only the MODAL entry is employed. This means that the two Toroidal Ring elements employed in this analysis have identical Element Input as follows:

Location A - Thickness = 3.0 inches

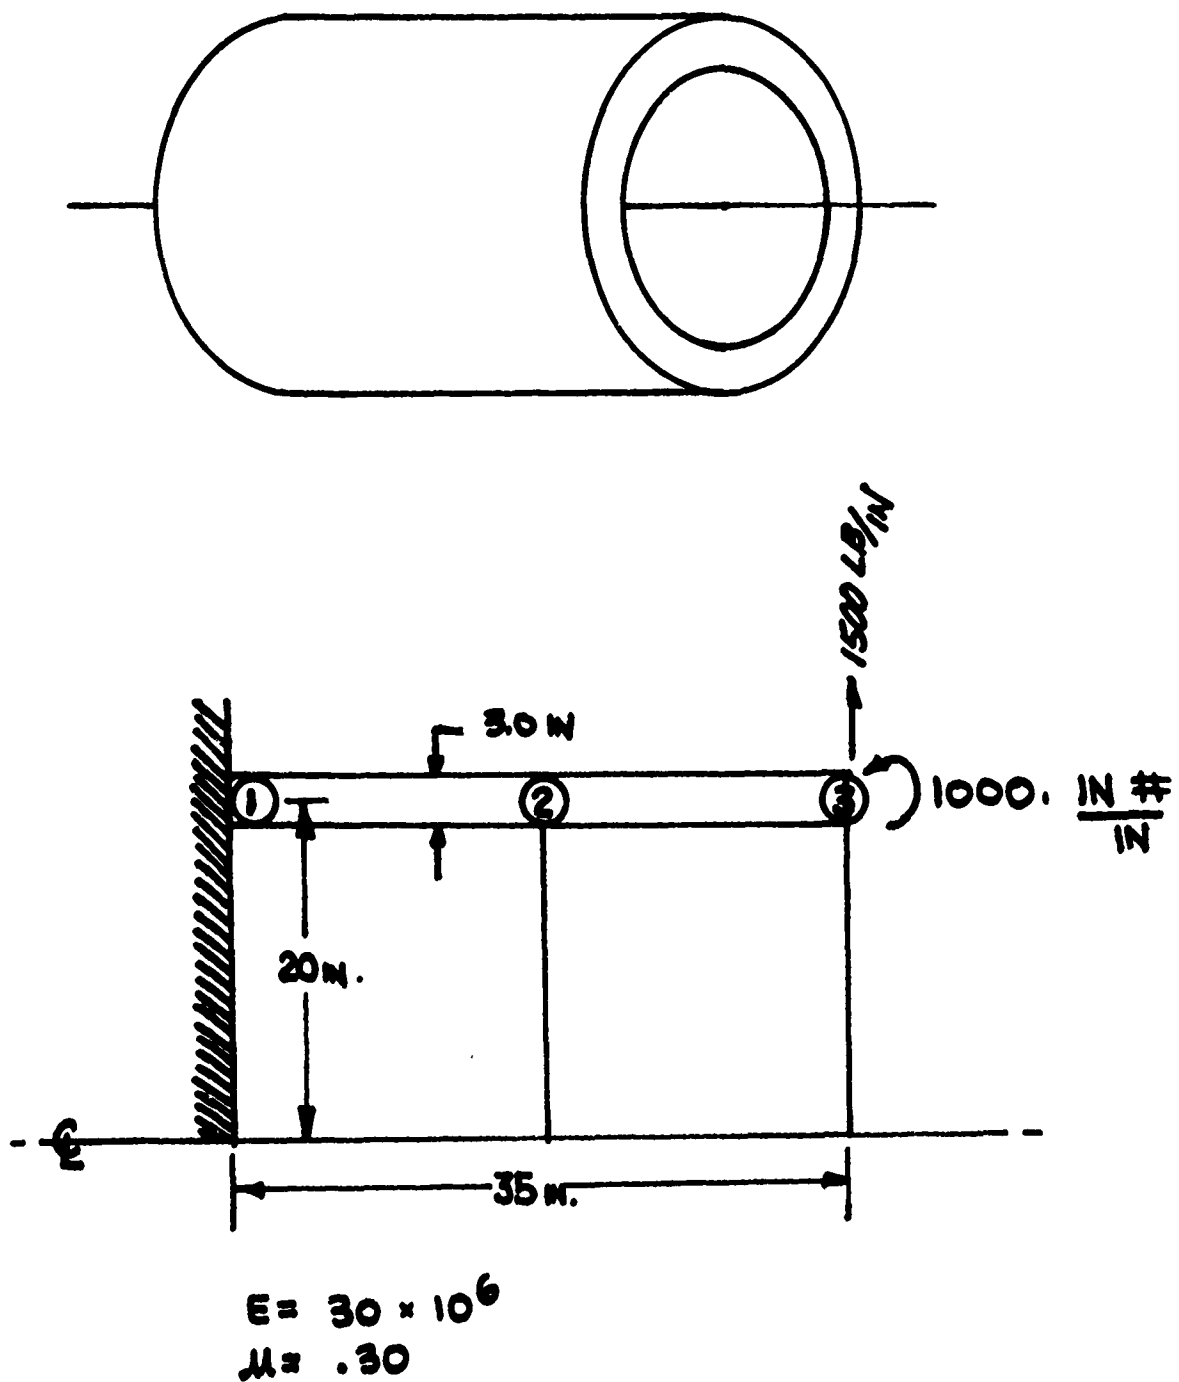


FIGURE III - E.1 - Idealized Thin Walled Cylinder with Edge Load

Location B - TCØ = 0.0 (This code determines the axis of reference for the display of displacement behavior, in this case the axis of reference is global).

Location C - Alpha 1 = 90.0 Degrees

Location D - Alpha 2 = 90.0 Degrees

For a review of the required Element Input for the Toroidal Ring the reader is referred to Section II-C.16.d.

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

TITLE INFORMATION

THIS IS THE FIRST ENTRY ON ALL REPORT FORM INPUT RUNS AND IT IS REQUIRED FOR ALL RUNS.

788

NUMBER OF TITLE CARDS

[illegible]

FIGURE III-E.2 TITLE INFORMATION, THIN WALLED CYLINDER

789
No. of Requests
(1)

MATERIAL TAPE INPUT

[illegible]

MATERIAL PROPERTIES TABLE

TEMPERATURE	
1	2
3	0
4	1
5	2
6	0
7	0
8	0
9	0
0	0

[illegible][illegible]

COEF. OF THERMAL EXPANSION	
4	5
3	9
2	0
1	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0

[illegible]

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

SYSTEM CONTROL INFORMATION

ENTER APPROPRIATE NUMBER, RIGHT
ADJUSTED, IN BOX OPPOSITE
APPLICABLE REQUESTS

1. Number of System Grid Points

S	Y	S	T	E	M
1	2	3	4	5	6

(/)

2. Number of Input Grid Points

					3
1	2	3	4	5	6

					3
7	8	9	10	11	12

3. Number of Degrees of Freedom/Grid Point

	9
13	14

4. Number of Load Conditions

	1
15	16

5. Number of Initially Displaced Grid Points

17	18	19	20	21	22

6. Number of Prescribed Displaced Grid Points

23	24	25	26	27	28

7. Number of Grid Point Axes Transformation
Systems

29	30

8. Number of Elements

					2
31	32	33	34	35	36

9. Number of Requests and/or Revisions of
Material Tape.

	1
37	38

10. Number of Input Boundary
Condition Points

					1
39	40	41	42	43	44

11. T_0 For Structure (With Decimal Point)

0	.	0				
45	46	47	48	49	50	51

(/)

FIGURE III-E.4 SYSTEM CONTROL INFORMATION, THIN WALLED CYLINDER

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1	2	3	4	5	6
C	O	O	R	D	

(/)

GRIDPOINT COORDINATE

D I R E C T I O N S																																				
Grid Point Number	X - R												Y - θ												Z - Z											
7 8 9 0 1 2	1 3 4 5 6 7 8 9 0 1 2	2 3 4 5 6 7 8 9 0 1 2	3 3 4 5 6 7 8 9 0 1 2	4 3 4 5 6 7 8 9 0 1 2																																
	1	2	0.0			0.0			0.0																											
	2	2	0.0			0.0			17.5																											
	3	2	0.0			0.0			35.0																											

FIGURE III-E.5 GRIDPOINT COORDINATES, THIN WALLED CYLINDER

1	2	3	4	5	6
LOADS					

(11)

1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2
L	C	O	N	D						/			1	.	0						

(/)

Condition
Number

Scalar

MAGIC STRUCT INPUT

E)

FORCE VALUES

MON

$$F_x$$

F_v

 F_z M_x

1	2	3	4	5	6
M	O	D	A	L	

[illegible]

1								2
3	4	5	6	7	8	9	0	

Grid Pt.
Number

Number		1		2		2		3		3		4			
7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2
			3		1	8	4	5		4			0	0	

	1								2	
	3	4	5	6	7	8	9	0	1	
)	0.	0								

201

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

EXTERNAL LOADS

[illegible]

⑤

S S S S S S S S S S S S S S S S

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR are
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

ELEMENT INPUT

A										B										C										D										E										F									
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
3	0									0	0									7	0	0								7	0	0																											

Element Number	Repeat
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

FIGURE III-E.9 ELEMENT INPUT, THIN WALLED CYLINDER

MAGIC STRUCTURAL ANALYSIS SYSTEM

INPUT DATA FORMAT

CHECK OR END CARD

C	H	E	C	K
1	2	3	4	5

 (/)

E	N	D
1	2	3

 (/)

FIGURE III-E.10 END CARD, THIN WALLED CYLINDER

The output supplied by the MAGIC System for the cylindrical shell subjected to edge loading is as follows:

Figures III-E.11 through III-E.15 display the output from the Structural System Monitor. These figures display the input data pertinent to the particular problem being solved.

Figure III-E.12 displays the coordinate and boundary condition information for this problem. In the Boundary Condition Section, note that there are 9 degrees of freedom per point for the toroidal ring element as follows:

$$u, \phi, w, \phi, u', \phi, w', \phi, w''$$

The reader is referred to Section II.C-16.d of this report for a complete description of the meaning and significance of the above degrees of freedom.

In Figure III-E.13 the finite element information is displayed. Under the section External Input for Elements 1 and 2 the first entry printed is the element thickness of 3.00. The next entry printed is the control input, $TC\emptyset$, which defines the axis of reference. In this case $TC\emptyset = 0.0$ which causes the displacement behavior to be referenced to the Global System Axis. The next two entries printed are the quantities α_1 and α_2 respectively. These are defined as the angles measured in degrees from the axis of symmetry to a line which is perpendicular to the tangent to the surface at node points 1 and 2 respectively. Since this particular problem is a cylinder, $\alpha_1 = \alpha_2 = 90.0$ degrees.

System level matrix output of final results is handled by the FORMAT standard matrix print capability. These results are shown in Figures III-E.15 through III-E.17.

Figure III-E.15 shows the assembled and reduced stiffness matrix. The stiffness matrix is presented row-wise and only non-zero terms are displayed. The ordering of the stiffness matrix is consistent with that of the boundary conditions shown in Figure III-E.12. For this case the order of the displacement vector is as follows:

$$\{q\}^T = [u_2, w_2, u_2', w_2', w_2'', u_3, w_3, u_3', w_3', w_3'']$$

The first item of information presented in Figure III-E.16 is the reduced Externally Applied Load Vector (LOADR). The size of this vector is 10 x 1. This is true because there are 10 degrees of freedom in the reduced stiffness matrix. There are two non-zero values of force shown in this vector. These values correspond to reduced degrees of freedom (REDDOF) 6 and 8. From the Boundary Condition Section (Figure III-E.13) it is seen that the first force corresponds to an applied force of 188490.0 acting in the R direction of node point 3 while the second is the applied moment of 125660.0 causing bending about the Y(0) axis. The vector of displacements (DISPR) is also presented in Figure III-E.16. This vector is also a 10 x 1 due to the reasons which were previously cited. The ordering of the displacement vector is consistent with that of the boundary conditions shown in Figure III-E.13. The ordering of the displacement vector is as follows:

MATRIX DISPR

REDDOF	NODE POINT	D.O.F.	DISPL. VALUE
1	2	u	-0.00134100
2	2	w	0.000058635
3	2	u'	-0.000164288
4	2	w'	0.000007016
5	2	w''	0.000030511
6	3	u	0.0245307
7	3	w	-0.000983503
8	3	u'	0.00447184
9	3	w'	-0.000345566
10	3	w''	0.000202298

The next item of information shown in the figure is the vector of element stresses (STRESS). The size of the element stress matrix is 30 x 1. In the toroidal ring element, stresses are evaluated at the two ends of the element as well as at the midspan of the element.

Five values of stress are displayed per point on each element, giving a total of 15 stresses per element. Since there were two elements used in this evaluation, the size of the stress matrix is 30 x 1.

The stress resultants for the toroidal ring are referenced to the element axes. The following are the stress resultants displayed for the toroidal ring element. (See sketches.)

$$T_{\xi} = \int_z \sigma_{\xi\xi} dz ; \quad \text{units, } \frac{\text{force}}{\text{length}}$$

$$T_{\rho} = \int_z \sigma_{\rho\rho} dz ; \quad \text{units, } \frac{\text{force}}{\text{length}}$$


$$M_{\rho} = \int_z z \sigma_{\xi\xi} dz ; \quad \text{units, } \frac{(\text{force}) \times (\text{length})}{(\text{length})}$$

$$M_{\xi} = - \int_z z \sigma_{\rho\rho} dz ; \quad \text{units, } \frac{(\text{force}) \times (\text{length})}{(\text{length})}$$



$$Q_{\xi} = \lambda_2 [M_{\rho} + M_{\xi}] + \frac{\partial M_{\rho}}{\partial \xi} \quad \text{units, } \frac{\text{force}}{\text{length}}$$

$$\text{where } \lambda_2 = \frac{1}{B} \frac{\partial B}{\partial \xi}$$

and B is a metric parameter which is explicitly defined in Volume I, Section 7, Equation 180.

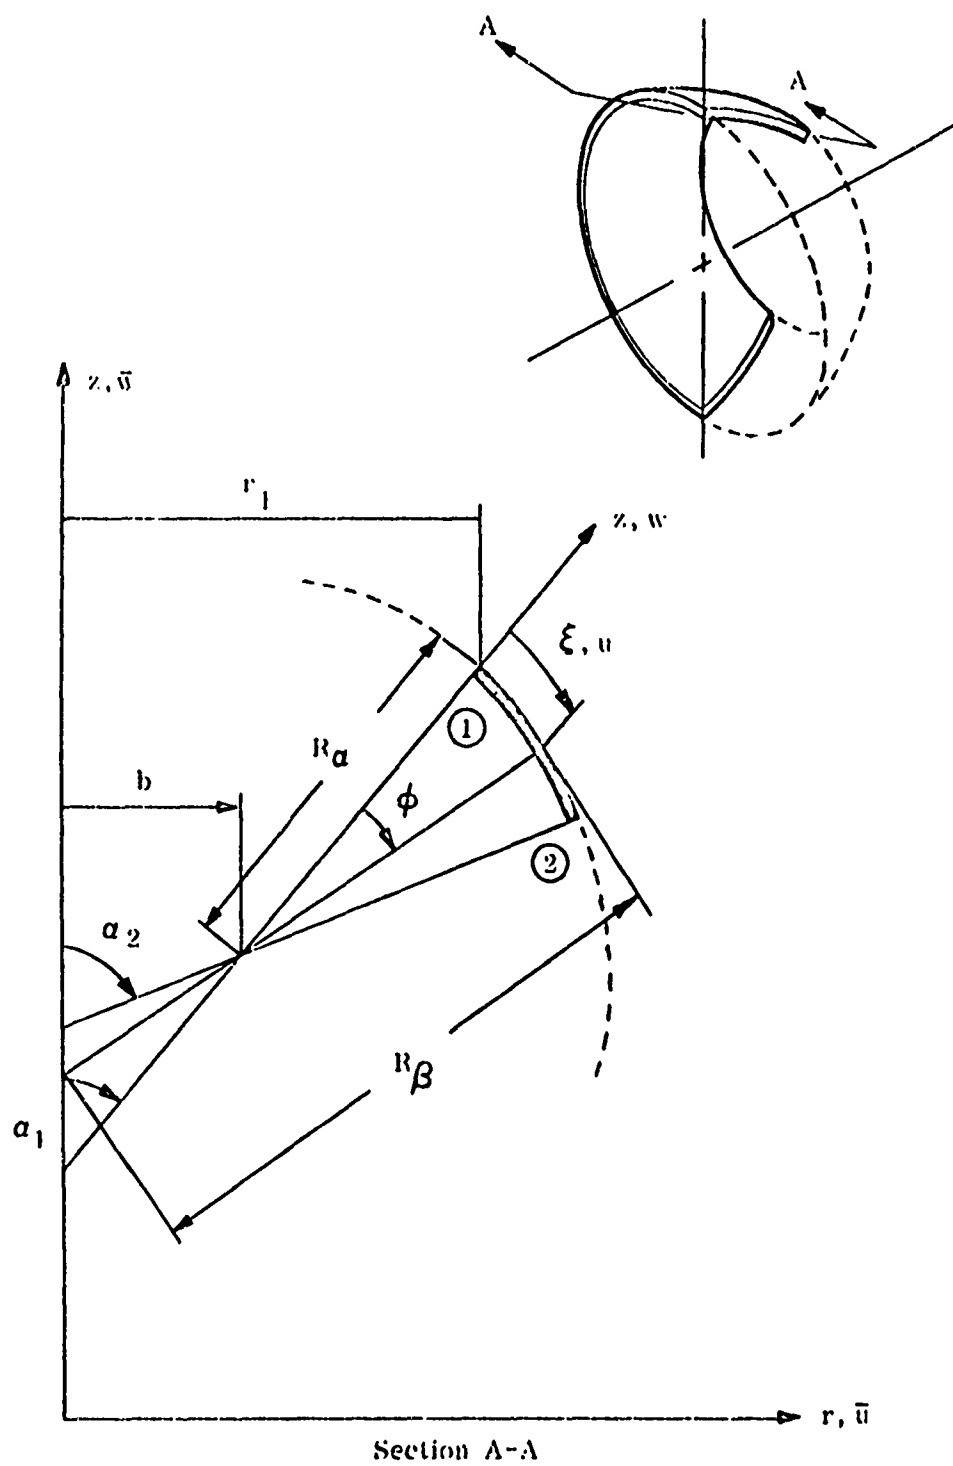

Toroidal Thin Shell Ring Representation

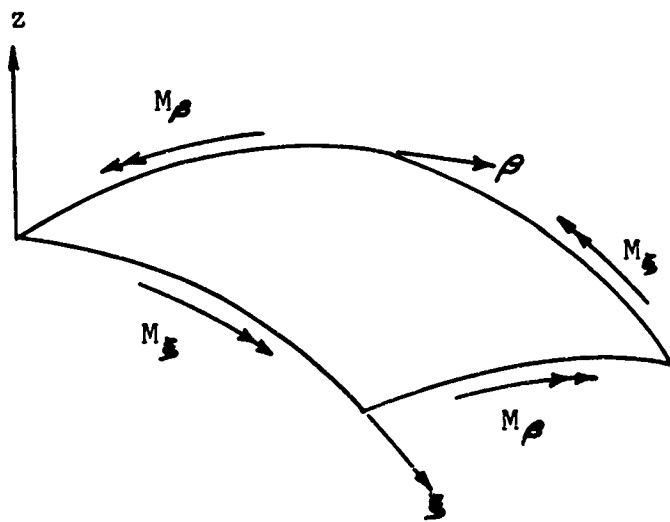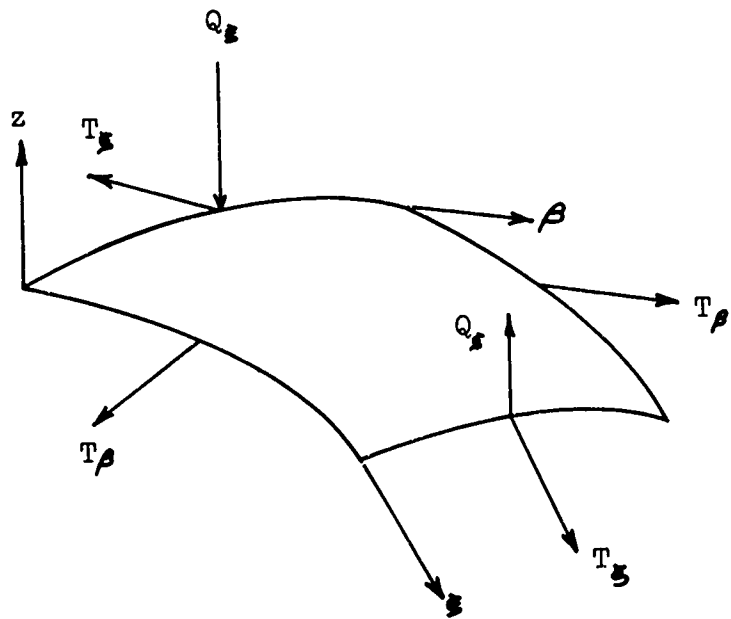

The ordering of the stress matrix is as follows: (Note that only non-zero terms are displayed.)

MATRIX STRESS

NRSEL	ELEMENT	STRESS	NODE POINT
1	1	$T_{\xi} = -129.553$	2
2	1	$T_{\beta} = -642.314$	2
3	1	$M_{\beta} = -226.319$	2
4	1	$M_{\xi} = 67.8958$	2
5	1	$Q_{\xi} = 148.283$	2
6	1	$T_{\xi} = 21.1932$	midspan
7	1	$T_{\beta} = -27.5149$	midspan
8	1	$M_{\beta} = 161.033$	midspan
9	1	$M_{\xi} = -48.3098$	midspan
10	1	$Q_{\xi} = -23.9065$	midspan
11	1	$T_{\xi} = 0.0000039 = 0$	1
12	1	$T_{\beta} = -0.000062 = 0$	1
13	1	$M_{\beta} = -0.0001029 = 0$	1
14	1	$M_{\xi} = -0.00000264 = 0$	1
15	1	$Q_{\xi} = 22.9380$	1

MATRIX STRESS (CONTD)

NRSEL	ELEMENT	STRESS	NODE POINT
16	2	$T_{\xi} = 221.507$	3
17	2	$T_{\beta} = 11105.3$	3
18	2	$M_{\beta} = -1500.56$	3
19	2	$M_{\xi} = 450.168$	3
20	2	$Q_{\xi} = -922.321$	3
21	2	$T_{\xi} = -41.6175$	midspan
22	2	$T_{\beta} = 1.93298$	midspan
23	2	$M_{\beta} = -2515.90$	midspan
24	2	$M_{\xi} = 754.770$	midspan
25	2	$Q_{\xi} = 381.529$	midspan
26	2	$T_{\xi} = -129.552$	2
27	2	$T_{\beta} = -642.311$	2
28	2	$M_{\beta} = -226.319$	2
29	2	$M_{\xi} = 67.8961$	2
30	2	$Q_{\xi} = -166.911$	2

The element forces are presented in Figure III-E.17. The Matrix Force vector is a 36 x 1 vector for the following reason. Each toroidal ring element is defined by two node points. There are nine forces per node point which correspond to the nine displacement degrees of freedom per point., i.e.

$$\{\text{Disp}\}^T = [u, o, w, o, u', o, w', o, w'']$$

The interpretation of the forces is dependent upon the code TCØ which was used in the element input section. A code of TCØ = -1.0 references the displacement behavior and the force behavior to the element axes. A code of TCØ = 0.0 (which was used in this particular problem) references the displacement and force behavior to the Global System Axis. The ordering of the force output is as follows:

$$\{\text{Force}\}^T = [F_R, 0, F_Z, 0, M_{\beta}, 0, F_1, 0, F_3]$$

where F_R is the force in the system radial direction
 F_Z is the force in the system axial direction
 M_β is the meridional moment
 F_1 and F_3 are the generalized forces corresponding
to the w' and w'' respectively

There are a total of 18 forces given per element (9 at each end).
Since there are two elements used in this analysis, the vector
of Matrix Forces is of the order 36×1 . The ordering of these
MATRIX FORCES is as follows:

MATRIX FORCES

D.O.F.	ELEMENT NO.	FORCE	NODE POINT
1	1	$F_R = -13691.7$	2
2	1	_____	2
3	1	$F_Z = 0.0711212$	2
4	1	_____	2
5	1	$M_\beta = -9446.86$	2
6	1	_____	2
7	1	$F_1 = -34514.0$	2
8	1	_____	2
9	1	$F_3 = 26589.6$	2
10	1	$F_R = -1806.08$	1
11	1	_____	1
12	1	$F_Z = -0.0694885$	1
13	1	_____	1
14	1	$M_\beta = -964.453$	1
15	1	_____	1
16	1	$F_1 = 7841.03$	1
17	1	_____	1
18	1	$F_3 = 8589.15$	1

MATRIX FORCES (CONTD)

D.O.F.	ELEMENT NO.	FORCE	NODE POINT
19	2	$F_R = 188500.0$	3
20	2	_____	3
21	2	$F_Z = -0.00402832$	3
22	2	_____	3
23	2	$M_\beta = 125660.0$	3
24	2	_____	3
25	2	$F_1 = 0.0185547$	3
26	2	_____	3
27	2	$F_3 = -0.140625$	3
28	2	$F_R = 13691.7$	2
29	2	_____	2
30	2	$F_Z = -0.0653076$	2
31	2	_____	2
32	2	$M_\beta = -9446.86$	2
33	2	_____	2
34	2	$F_1 = 34514.0$	2
35	2	_____	2
36	2	$F_3 = -26589.6$	2

Note again that for this particular problem, the forces are referenced to the Global System Axes. If the Code TCØ = -1.0 would have been used the force behavior would have been referenced to the element axis and would have had the following form:

$$\{\text{Force}\}^T = [F_m, 0, F_n, 0, M_\beta, 0, F_1, 0, F_3]$$

where F_m is the membrane force
 F_n is the normal force
 M_β is the meridional moment

F_1 and F_3 are the generalized forces corresponding to the w' and w'' respectively.

The final item of information contained in Figure III-E.17 is the vector of reactions (MATRIX REACT). This vector is of the size 27 x 1 since there are three node points associated with this problem and provision for nine associated degrees of freedom per point. The reactions are read row-wise and are interpreted as follows:

MATRIX REACT

D.O.F.	REACTION	NODE POINT
1	$P_{RR} = -1806.08$	1
2		1
3	$P_{RZ} = -0.0694885$	1
4		1
5	$M_{R\beta} = -964.453$	1
6		1
7	$F_{R1} = 7841.03$	1
8		1
9	$F_{R3} = 8589.15$	1
(10-27)		(2 and 3)

CYLINDRICAL SHELL SUBJECTED TO END LOADINGS
TWO TOROIDAL RING ELEMENTS USED IN THE IDEALIZATION
REFERENCE- KLEIN, S. STUDY OF THE MATRIX DISPLACEMENT METHOD APPLIED
TO SHELLS OF REVOLUTION, CONFERENCE ON MATRIX METHODS IN STR. MECH.
WRIGHT-PATTERSON AFB, 1965

REVISIONS OF MATERIAL TAPE

ASTERISK (*) PRECEDING MATERIAL
IDENTIFICATION INDICATES THAT INPUT
ERROR RETURNS WILL NOT RESULT IN
TERMINATION OF EXECUTION

REVISION 12 INPUT CODE 1
MATERIAL IDENTIFICATION E= 3.0E6, MU=0.30
NUMBER OF PLASTIC PROPERTY POINTS 1
MASS DENSITY-0.

MATERIAL PROPERTIES

YOUNG'S MODULI

DIRECTIONS

TEMPERATURE	XX	YY	ZZ	XY	YZ	ZX
0.	0.30000E 07	0.30000E 07	0.30000E 07	0.30000E 00	0.30000E 00	0.30000E 00

THERMAL EXPANSION COEFFICIENTS

DIRECTIONS

TEMPERATURE	XX	YY	ZZ	XY	YZ	ZX
0.	0.12500E-04	0.12500E-04	0.12500E-04	0.11500E 07	0.11500E 07	0.11500E 07

FIGURE III-E.11 TITLE AND MATERIAL DATA OUTPUT, THIN WALLED CYLINDER

3 DEF. POINTS

NO. DIRECTIONS = 3 NO. DEGREES OF FREEDOM = 3

POINT	GRIDPOINT DATA			TEMPERATURES	PRESSURES
	X	Y	Z		
1	0.2000000E 02	0.	0.	0.	0.
2	0.2000000E 02	0.	0.1750000E 02	0.	0.
3	0.2000000E 02	0.	0.3500000E 02	0.	0.

BOUNDARY CONDITION INFORMATION

NODES	DEGREES OF FREEDOM					
1	0	0	0	C	0	0
2	1	0	1	0	1	0
3	1	0	1	0	1	10

FIGURE III-E.12 GRIDPOINT DATA AND BOUNDARY CONDITION OUTPUT, THIN WALLED CYLINDER

EXTERNAL LOAD CONDITIONS 1

LOAD NO.	1	NUMBER OF LOADED NODES	1	ELEMENT LOAD SCALAR = 0.					
3	0.18250E 06	0.	0.	0.	0.12566E 06	0.	0.	0.	0.
TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN									
27 x 1									
0.	0.	0.	0.	0.	0.	0.	0.	0.	0.
0.	0.	0.	0.	0.	0.	0.	0.	0.	0.
0.	0.	0.	0.	0.	0.	0.	0.	0.	0.
0.12850000E 06	0.	0.	0.	0.	0.	0.12566E 06	0.	0.	0.
0.	0.	0.	0.	0.	0.	0.	0.	0.	0.

T-ZERO FOR STRUCTURE = -0.

FIGURE III-E.14 TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN OUTPUT, THIN WALLED CYLINDER

MATRIX LOAD

CUTOFF = 0.

SIZE 10 BY 1
REDOOF REDOOF

REDOOF

REDOOF

0.18E+00E 06 0.125660E 06

COMO. 1 6

MATRIX DISPR

CUTOFF = 0.

SIZE 10 BY 1
REDOOF REDOOF

REDOOF

REDOOF

0.134100E-02 2 0.586353E-04 3 -0.164288E-03 4 0.701571E-05 5
0.245309E-01 7 -0.583503E-03 8 0.447184E-02 9 -0.345566E-03 10 0.305112E-04
0.202298E-03

COMO. 1 6

MATRIX STRESS

CUTOFF = 0.

SIZE 30 BY 1
MRSEL MRSEL

MRSEL

MRSEL

-0.129553E 03 2 -C.642314E 03 3 -C.226319E 03 4 0.678958E 02 5 0.148283E 03
0.211932E 02 7 -0.275149E 02 8 0.161033E 03 9 -0.483098E 02 10 -0.234065E 02
0.391237E-05 12 -0.621504E-04 13 -0.102929E-03 14 -0.264018E-05 15 0.229380E 02
0.221907E 03 17 0.111053E 05 18 -0.150056E 04 19 0.450168E 03 20 -0.922321E 03
-0.416175E 02 22 0.193298E 01 23 -0.251590E 04 24 0.754770E 03 25 0.381529E 03
-0.120952E 03 27 -0.642311E 03 28 -0.226319E 03 29 0.678961E 02 30 -0.166911E 03

COMO. 1 6

FIGURE III-E.16 LOAD, DISPLACEMENT AND STRESS OUTPUT, THIN WALLED CYLINDER

MATRIX FORCES										PAGE 1
CUTOFF = 0.										
	D.O.F		D.O.F		D.O.F		D.O.F	SIZE	BY	
CCMD.	1	1	-0.136917E 05	3	0.711212E-01	5	C.944686E 04	7	-0.345140E 05	9
	10	12	-0.18608E 04	12	-0.654885E-01	14	-C.964453E 03	16	0.784103E 04	18
	19	21	0.188500E 06	21	-0.402832E-02	23	C.125660E 06	25	0.185547E-01	27
	28	30	0.136917E 05	30	-0.653076E-01	32	-0.944686E 04	34	0.345140E 05	36
										0.265896E 05
										0.858915E 04
										-0.140625E 00
										-0.265896E 05

MATRIX REACT										PAGE 1
CUTOFF = 0.										
	D.O.F		D.O.F		D.O.F		D.O.F	SIZE	BY	
CCMD.	1	1	-0.18608E 04	3	-0.654885E-01	5	-C.964453E 03	7	0.784103E 04	9
	10	12	0.402832E-02	12	0.581360E-02	14	0.610352E-02	16	0.346680E-01	18
	19	21	-0.214644E-01	21	-C.402832E-02	23	-C.390625E-01	25	0.185547E-01	27
										0.858915E 04
										0.249023E-01
										-0.140625E 00


```

SEND
SIESYS
$REMOVE
SIESYS
$STOP
SYSL02

```

FIGURE III-E.17 FORCE AND REACTION OUTPUT, THIN WALL, WITH PL

P. SQUARE PLATE - PARABOLIC MEMBRANE LOADING (Quadrilateral Thin Shell Idealization)

An isotropic, square plate under the action of a parabolic membrane loading is shown in Figure III-F.1, along with its dimensions and pertinent material properties. The plate is idealized utilizing one quadrilateral thin shell element.

The preprinted input data forms associated with this example are shown in Figures III-F.2 through III-F.10.


In Figure III-F.5 (Grid Point Coordinate Section) it can be seen that only the grid point coordinates for the four corner points of the element are entered. The coordinates associated with mid-point nodes are calculated internally by the MAGIC System.

In Figure III-F.6 (Boundary Condition Section) It is instructive to note the extensive use of the Repeat option. Grid point 5 has identical boundary conditions as grid point 2, therefore the Repeat option is exercised by placing an 'X' in column 12 opposite the entry for Grid Point Number 5. The same procedure is also used for Grid Points 3, and 7 as well as for Grid Points 4 and 8. (MODAL entry pertains to Grid Point 1 and to Grid Point 6 which is suppressed).

In Figure III-F.7 (External Loads Section) Grid Points 2 and 3 have applied external loading. Note that there are 2 external load cards per grid point.

In Figure III-F.8 (Element Control Data Section) the following information is of importance.

- (1) Mid-point node number 6 is suppressed. The element is therefore numbered 1, 2, 3, 4, 5, 0, 7, 8. These entries are made in the first eight locations of the node point section as shown in Figure III-F.8.
- (2) The numbers '1' and '2' are entered in locations 9 and 10 of the node point portion of the Element Control Section. These two points define the X direction for the material properties axes. This allows the User to effectively define stress output direction. The same two points used for the reference element can also be used for each following element (if they exist) so that the output has a common reference.

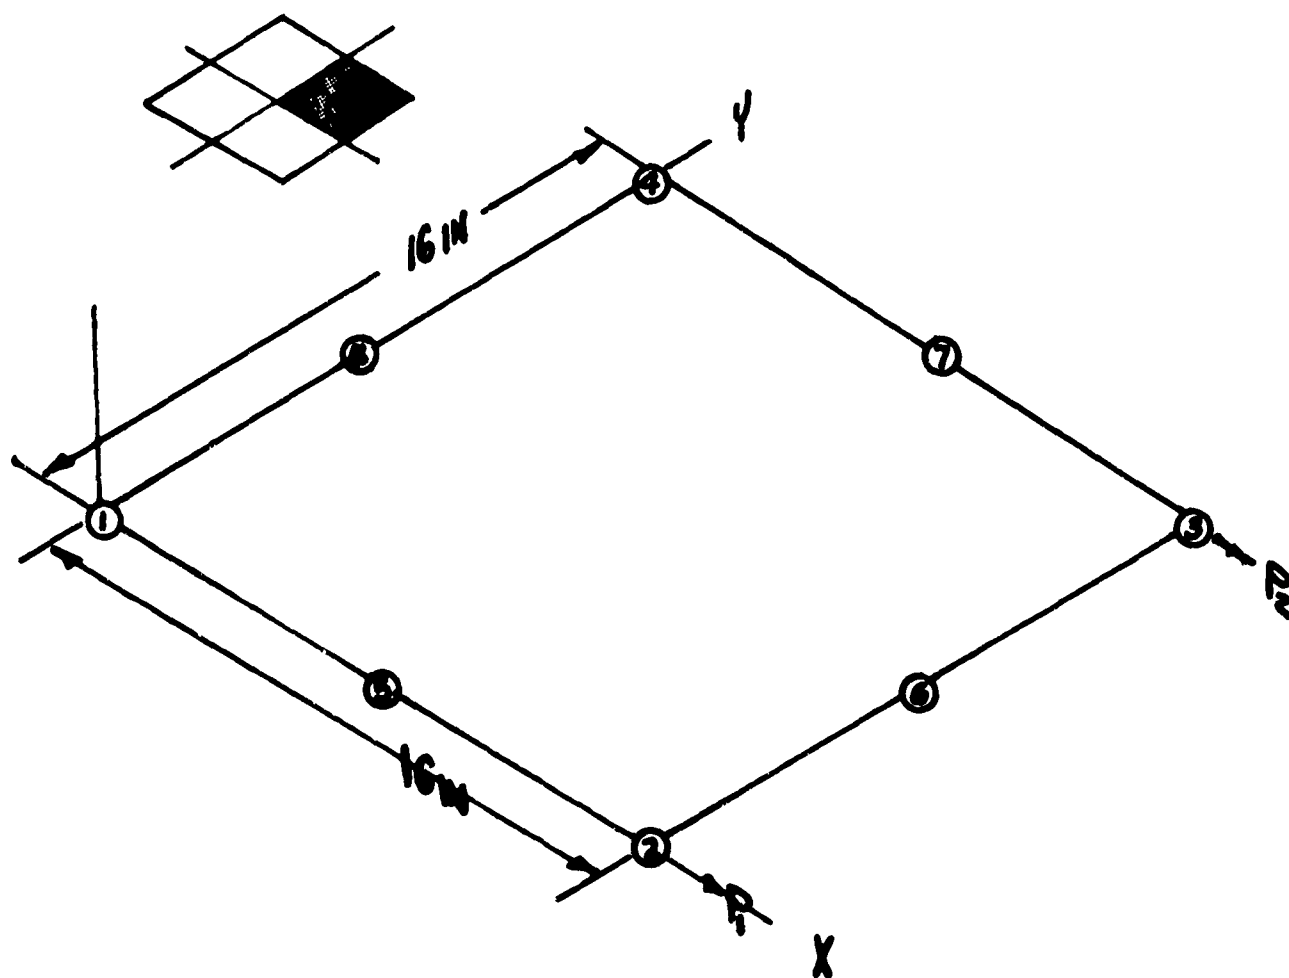

$t = 0.10$ INCH $R = 666.67$
 $E = 30. \times 10^6$ PSI $P_2 = 400.$
 $\mu = .30$

FIGURE 111 - P.1 - Idealized Square Plate With Parabolic Membrane Loading (Quadrilateral Thin Shell Idealization)

In Figure III-F.9 (Element Input Section) only one item of information is entered in Location A as follows:

Location A - Membrane Thickness - (t_m) = 0.10

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

TITLE INFORMATION

REPORT (1)

1 2 3 4 5 6

TITLE	(1)
-------	-----

789

6

NUMBER OF TITLE CARDS

(1)[illegible]

FIGURE III-F.2 TITLE INFORMATION, SQUARE PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

SYSTEM CONTROL INFORMATION

ENTER APPROPRIATE NUMBER, RIGHT
ADJUSTED, IN BOX OPPOSITE
APPLICABLE REQUESTS

1. Number of System Grid Points

S	Y	S	T	E	M
1	2	3	4	5	6

(/)

					8
1	2	3	4	5	6

2. Number of Input Grid Points

					4
7	8	9	10	11	12

3. Number of Degrees of Freedom/Grid Point

	6
13	14

4. Number of Load Conditions

	/
15	16

5. Number of Initially Displaced Grid Points

17	18	19	20	21	22

6. Number of Prescribed Displaced Grid Points

23	24	25	26	27	28

7. Number of Grid Point Axes Transformation
Systems

29	30

8. Number of Elements

					/
31	32	33	34	35	36

9. Number of Requests and/or Revisions of
Material Tape.

	/
37	38

10. Number of Input Boundary
Condition Points

					6
39	40	41	42	43	44

11. T_0 For Structure (With Decimal Point)

0	.	0					
45	46	47	48	49	50	51	52

(/)

FIGURE III-F.4 SYSTEM CONTROL INFORMATION, SQUARE PLATE
(QUADRILATERAL THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1	2	3	4	5	6
C	O	O	R	D	

(/)

GRIDPOINT COORDINATE

[illegible]

FIGURE III-F.5 GRIDPOINT COORDINATES, SQUARE PLATE
(QUADRILATERAL THIN SHELL IDEALIZATION)

BAC 1627

1	2	3	4	5	6
LOADS					

(/)

1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2
LC	LD																				

Condition Number

Scalar

MAGIC STRUCT
INPUT

1	2	3	4	5	6
MODAL					

Grid Pt.
Number

1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2
2																					
3																					

																								EX																							
FORCE VALUES																								MOM																							
F _x												F _y												F _z												M _x											
1 2												2 3												3 4												1 2											
3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2								

FIGURE III-F.7 EXTERNAL LOADS, SQUARE PLATE
(QUADRILATERAL THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

EXTERNAL LOADS

MOMENT VALUES

 M_z

GENERALIZED VALUES

3

[illegible]

1	2	2	3	3	4
3	4	5	6	7	8
9	0	1	2	3	4
5	6	7	8	9	0
1	2	3	4	5	6
7	8	9	0	1	2
3	4	5	6	7	8
9	0	1	2	3	4
5	6	7	8	9	0
1	2	3	4	5	6
7	8	9	0	1	2

[illegible][illegible]

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR are
Blank pgs.
that have
been removed

**BEST
AVAILABLE COPY**

(5)

S S S S S S S S S S S S S S S S S

231

ELEMENT INPUT

A		B		C		D		E		F	
1	2	2	3	3	4	4	5	5	6	6	7
3	4	5	6	7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2	3	4	5	6
6	7	8	9	0	1	2	3	4	5	6	7
7	8	9	0	1	2	3	4	5	6	7	8
8	9	0	1	2	3	4	5	6	7	8	9
9	0	1	2	3	4	5	6	7	8	9	0
0	1	2	3	4	5	6	7	8	9	0	1
1	2	3	4	5	6	7	8	9	0	1	2
2	3	4	5	6	7	8	9	0	1	2	3
3	4	5	6	7	8	9	0	1	2	3	4
4	5	6	7	8	9	0	1	2	3	4	5
5	6	7	8	9	0	1	2	3	4	5	6
6	7	8	9	0	1	2	3	4	5	6	7
7	8	9	0	1	2	3	4	5	6	7	8
8	9	0	1	2	3	4	5	6	7	8	9
9	0	1	2	3	4	5	6	7	8	9	0
0	1	2	3	4	5	6	7	8	9	0	1
1	2	3	4	5	6	7	8	9	0	1	2
2	3	4	5	6	7	8	9	0	1	2	3
3	4	5	6	7	8	9	0	1	2	3	4
4	5	6	7	8	9	0	1	2	3	4	5
5	6	7	8	9	0	1	2	3	4	5	6
6	7	8	9	0	1	2	3	4	5	6	7
7	8	9	0	1	2	3	4	5	6	7	8
8	9	0	1	2	3	4	5	6	7	8	9
9	0	1	2	3	4	5	6	7	8	9	0
0	1	2	3	4	5	6	7	8	9	0	1
1	2	3	4	5	6	7	8	9	0	1	2
2	3	4	5	6	7	8	9	0	1	2	3
3	4	5	6	7	8	9	0	1	2	3	4
4	5	6	7	8	9	0	1	2	3	4	5
5	6	7	8	9	0	1	2	3	4	5	6
6	7	8	9	0	1	2	3	4	5	6	7
7	8	9	0	1	2	3	4	5	6	7	8
8	9	0	1	2	3	4	5	6	7	8	9
9	0	1	2	3	4	5	6	7	8	9	0
0	1	2	3	4	5	6	7	8	9	0	1
1	2	3	4	5	6	7	8	9	0	1	2
2	3	4	5	6	7	8	9	0	1	2	3
3	4	5	6	7	8	9	0	1	2	3	4
4	5	6	7	8	9	0	1	2	3	4	5
5	6	7	8	9	0	1	2	3	4	5	6
6	7	8	9	0	1	2	3	4	5	6	7
7											

[illegible]

FIGURE III-F.9 ELEMENT INPUT, SQUARE PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM

INPUT DATA FORMAT

CHECK OR END CARD

C	H	E	C	K
1	2	3	4	5

 (/)

E	N	D
1	2	3

 (/)

FIGURE III-F.10 END CARD, SQUARE PLATE
(QUADRILATERAL THIN SHELL IDEALIZATION)

The output supplied by the MAGIC System for the thin square plate subjected to parabolic loading and idealized with one quadrilateral thin shell element is as follows:

Figures III-F.11 thru III-F.13 display the output from the Structural Systems Monitor. These figures record the input data pertinent to the problem being solved.

In Figure III-F.12, the finite element information is shown. Under the section titled External Input, the first entry printed has a numerical value of 0.0999999. This value is equal to the membrane thickness of the plate being analyzed.

Figure III-F.13 displays the External Load Column for this problem. The 48 x 1 vector shown in the figure is the total unreduced transformed external load column which is read row-wise. The ordering is consistent with that of the boundary condition information shown in Figure III-F.12. An external load of 667.67 is applied at node point 2 and also a load of 400.0 is applied at node point 3 both in the positive Global X direction.

System level matrix output of final results is handled by the FORMAT standard matrix print capability. These results are shown in Figures III-F.14 thru III-F.16. Figure III-F.14 shows the reduced stiffness matrix for this problem. Only non-zero terms in the stiffness matrix are displayed. The stiffness matrix is presented row-wise and its ordering is consistent with that of the boundary conditions shown in Figure III-F.12. For this case, the ordering of the displacement vector is as follows:

$$\{q\}^T = [u_2, u_3, v_3, v_4, u_5, u_7, v_7, v_8]$$

The reduced externally applied load vector (LOADR) is presented in Figure III-F.15. The size of this vector is 8 x 1. This is true because there are 8 degrees of freedom in the reduced stiffness matrix. There are 2 non-zero values of force shown in this vector. From the figure it is seen that the force values presented correspond to reduced degrees of freedom (REDDOF) 1 and 2. From the Boundary Condition Information (Figure III-F.12) it is seen that these correspond to forces in the global X direction at node points 2 and 3 having numerical values of 667.67 and 400.0 respectively. The vector of displacements (DISPR) is the next item of information presented in Figure III-F.15. This vector is an 8 x 1 since there are 8 degrees of freedom remaining after assembly and reduction. The ordering of the displacement vector is consistent with that of the boundary conditions shown in Figure III-F.12 and is shown as follows:

$$\{q\}^T = [u_2, u_3, v_3, v_4, u_5, v_7, v_7, v_8]$$

Displacements are referenced to the global axis of reference unless otherwise indicated. The Matrix DISPR is interpreted as follows:

MATRIX DISPR

REDDOF	NODE POINT	D.O.F.	DISP. VALUE
1	2	u	0.000510389
2	3	u	0.000201391
3	3	v	-0.000021236
4	4	v	-0.000140178
5	5	u	0.000252377
6	7	u	0.000112433
7	7	v	-0.000119797
8	8	v	-0.000091029

The final item of information shown in Figure III-F.15 is the stress matrix (MATRIX STRESS). The stress matrix is of the order 40 x 1 due to the following. Eight Stress resultants are evaluated at each corner point of the element and also at the intersection of the diagonals which connect the opposite corner points of the element. The stress resultants are defined as follows:

$$N_x = \int_x \sigma_x \, d z \quad ; \text{ units } \frac{\text{force}}{\text{length}}$$

$$N_y = \int_z \sigma_y \, d z \quad ; \text{ units } \frac{\text{force}}{\text{length}}$$

$$N_{xy} = \int_z \tau_{xy} \, d z \quad ; \text{ units } \frac{\text{force}}{\text{length}}$$

$$M_x = \int_z z \sigma_x \, d z \quad ; \text{ units } \frac{\text{force} \times \text{length}}{\text{length}}$$


$$M_y = \int_z z \sigma_y \, d z \quad ; \text{ units } \frac{\text{force} \times \text{length}}{\text{length}}$$

$$M_{xy} = \int_z z \tau_{xy} \, d z \quad ; \text{ units } \frac{\text{force} \times \text{length}}{\text{length}}$$


$$Q_x = \int_z z \left(\frac{\partial \sigma_x}{\partial x} \right) \, d z + \int_z z \left(\frac{\partial \tau_{xy}}{\partial y} \right) \, dz ; \text{ units } \frac{\text{force}}{\text{length}}$$

$$Q_y = \int_z z \left(\frac{\partial \sigma_y}{\partial y} \right) \, d z + \int_z z \left(\frac{\partial \tau_{xy}}{\partial x} \right) \, dz ; \text{ units } \frac{\text{force}}{\text{length}}$$

The following sketches show the proper manner in which to interpret the stress resultants.

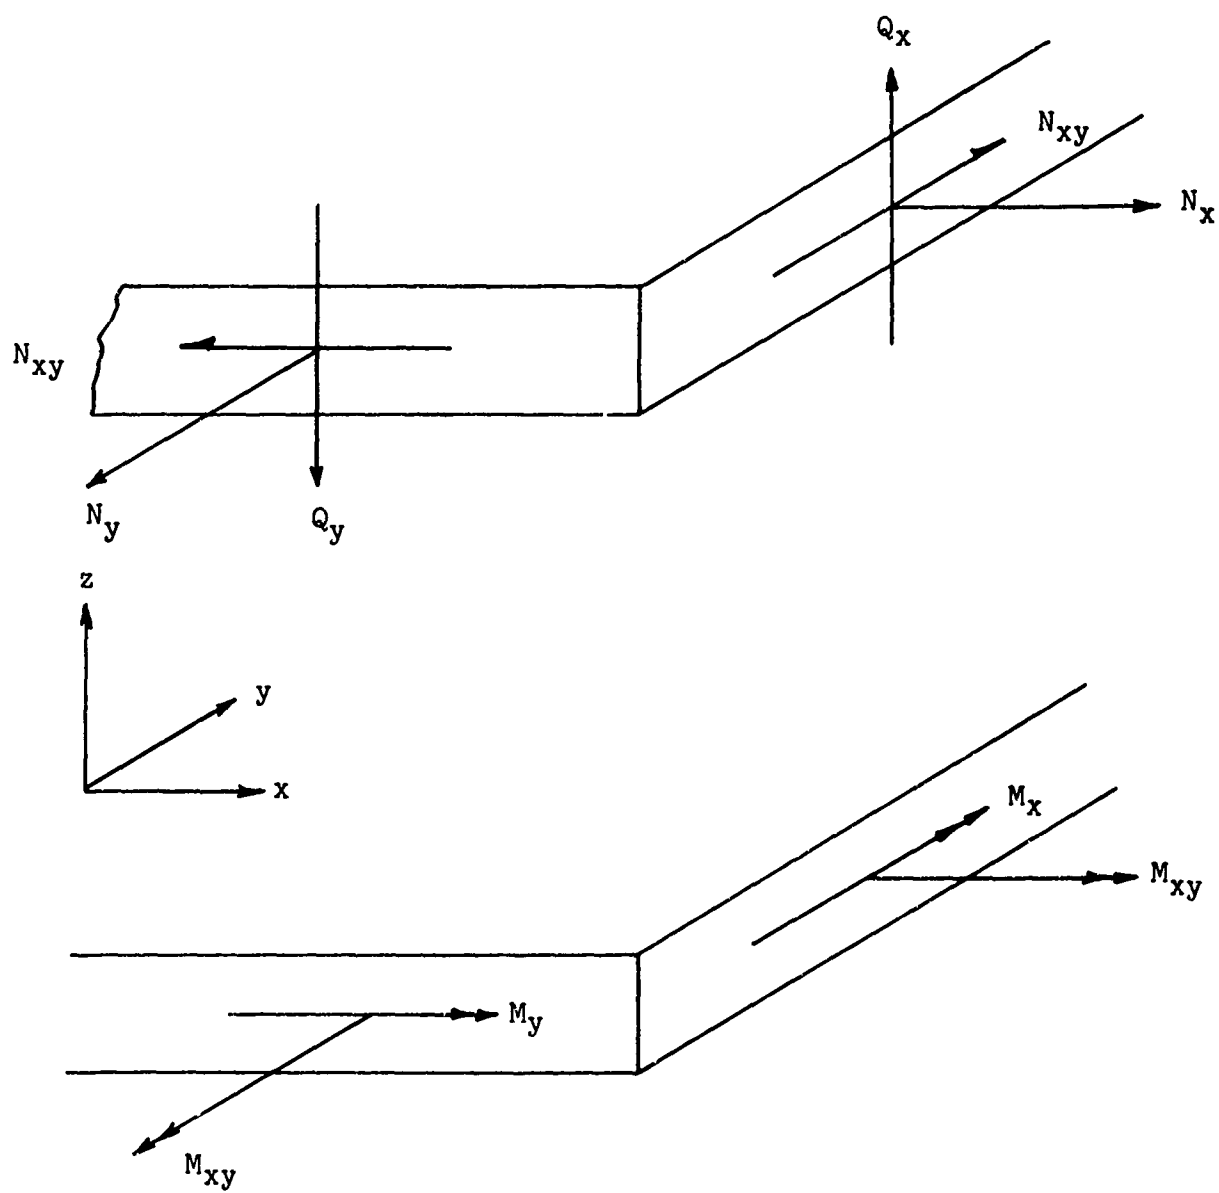

Stress Resultants

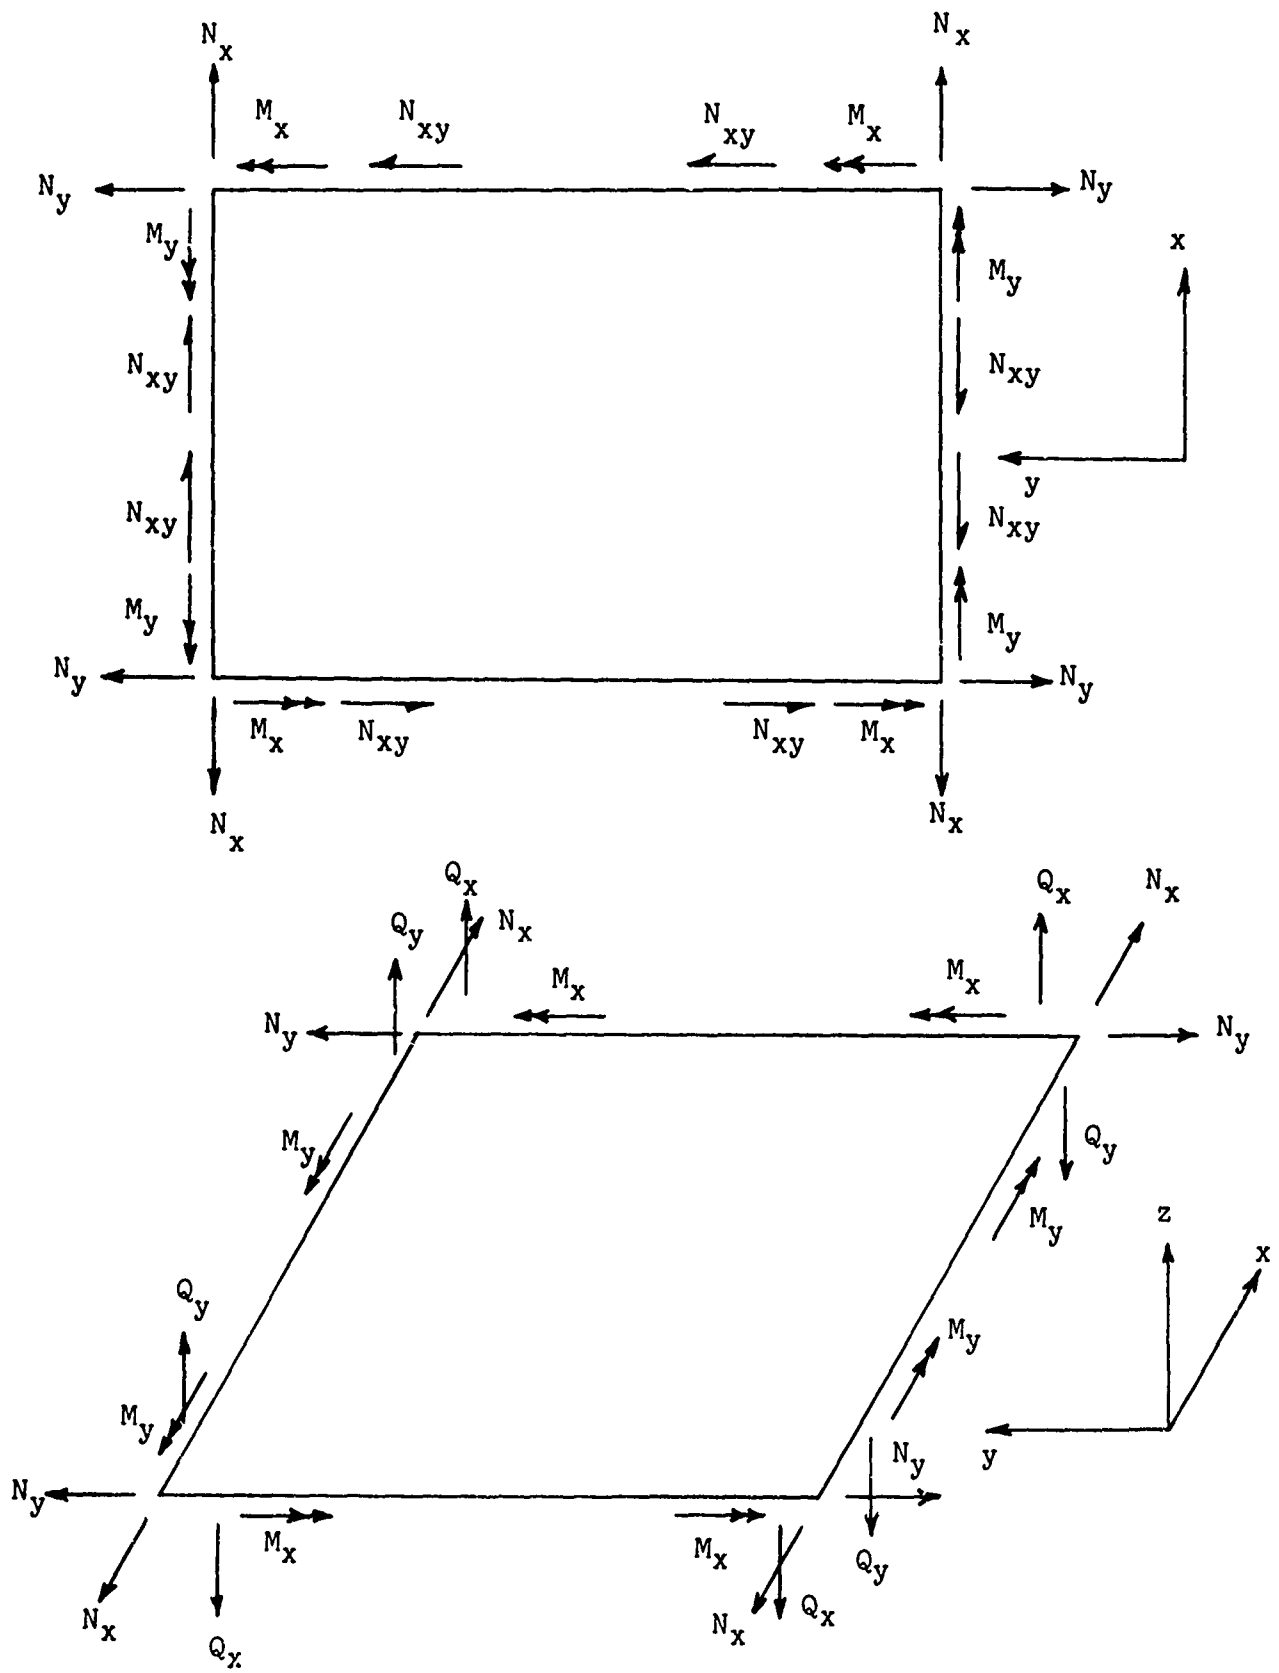

The stress vector is in general referenced to the element coordinate system. For the quadrilateral or triangular thin shell elements however, the User has the option of specifying material or stress axes in order to effectively define stress output direction. This is accomplished by utilizing locations 9 and 10 or 11 and 12 of the node point portion of the Element Control Section. In this particular problem the numbers '1' and '2' were entered in locations 9 and 10 of the node point portion of the Element Control Section. These two points define the X direction of the material properties axes. (Positive X from node point 1 to node point 2.) This axis of reference then becomes the reference axis for the stress output. The ordering of the stress matrix is as follows: (Note that only non-zero terms are printed in the output display.)

MATRIX STRESS

NRSEL	ELEMENT	STRESS RESULTANT	NODE POINT
1	1	$N_x = 88.9985$	1
2	1	$N_y = -15.2888$	1
3	1	$N_{xy} = -0.00000117$	1
9	1	$N_x = 106.172$	2
10	1	$N_y = 27.8697$	2
11	1	$N_{xy} = -22.2835$	2
17	1	$N_x = 30.5088$	3
18	1	$N_y = 5.17088$	3
19	1	$N_{xy} = -2.41999$	3
25	1	$N_x = 27.6819$	4
26	1	$N_y = 3.72625$	4
27	1	$N_{xy} = -2.69847$	4
33	1	$N_x = 63.5077$	(Int. of Diag.)
34	1	$N_y = -10.7390$	(Int. of Diag.)
35	1	$N_{xy} = -1.73356$	(Int. of Diag.)

Figure III-F.16 displays the vector of Matrix Forces. These forces are defined with respect to the Global Coordinate System. The Matrix Force Vector is a 48 x 1 vector for the following reason. The quadrilateral thin shell element is defined by eight node points (4 cornerpoints and 4 mid-side node points). Since there are six forces per node point (F_X , F_Y , F_Z , M_X , M_Y , M_Z) a total of 48 forces per element are defined. The ordering of the Matrix Forces is as follows. (See Figure III-F.1 for the element numbering sequence.)

MATRIX FORCES

D.O.F.	ELEMENT NO.	FORCE	NODE POINT
1	1	$F_X = -225.893$	1
2	1	$F_Y = 23.6375$	1
7	1	$F_X = 667.670$	2
8	1	$F_Y = -141.051$	2
13	1	$F_X = 400.000$	3
14	1	$F_Y = 0.00000381 = 0$	3
19	1	$F_X = -122.911$	4
20	1	$F_Y = 0.0000305 = 0$	4
25	1	$F_X = 0.0000591 = 0$	5
26	1	$F_Y = 117.413$	5
37	1	$F_X = 0.00000343 = 0$	7
38	1	$F_Y = -0.00000996 = 0$	7
43	1	$F_X = -718.866$	8
44	1	$F_Y = -0.0000153 = 0$	8

Note that for this particular problem Mid-Side Node #6 was suppressed.

The final item of information contained in Figure III-F.16 is the vector of reactions (MATRIX REACT). This vector is a 48×1 since there are eight node points associated with this problem and six associated degrees of freedom per node point. The reactions are read row-wise and are interpreted as follows: (Note that the reactions are referenced to the Global Coordinate System).

MATRIX REACT

D.O.F.	REACTION	NODE POINT
1	$P_{RX} = -225.893$	1
2	$P_{RY} = 23.6375$	1
7	$P_{RX} = -0.000069 = 0$	2
8	$P_{RY} = -141.051$	2
13	$P_{RX} = -0.000046 = 0$	3
14	$P_{RY} = -0.000004 = 0$	3
19	$P_{RX} = -122.911$	4
20	$P_{RY} = 0.00003 = 0$	4
25	$P_{RX} = 0.00006 = 0$	5
26	$P_{RY} = 117.413$	5
37	$P_{RX} = 0.00003 = 0$	7
38	$P_{RY} = -0.000009 = 0$	7
43	$P_{RX} = -718.866$	8
44	$P_{RY} = 0.00002 = 0$	8

THIN SQUARE ISOTROPIC PLATE SUBJECTED TO A SELF
EQUILIBRATING PARABOLIC MEMBRANE LOADING-ONE QUADRILATERAL
THIN SHELL ELEMENT USED IN THE IDEALIZATION,MIDPOINT MODE ON
THE LOADED EDGE IS SUPPRESSED IN THIS ANALYSIS
REFERENCE- TIMOSHENKO,S. AND GOODIER,J.N., THEORY OF ELASTICITY,
SECOND EDITION,MCGRAW HILL NEW YORK 1951.

REVISIONS OF MATERIAL TAPE

ASTERISK (*) PRECEEDING MATERIAL
IDENTIFICATION INDICATES THAT INPUT
ERROR RETURNS WILL NOT RESULT IN
TERMINATION OF EXECUTION

REVISION 12
MATERIAL IDENTIFICATION STEEL
NUMBER OF MATERIAL PROPERTY POINTS. . . . 1
NUMBER OF PLASTIC PROPERTY POINTS -0
MASS DENSITY.-0.

MATERIAL PROPERTIES

YOUNG'S MODULI				POISSON'S RATIOS			
DIRECTIONS				DIRECTIONS			
TEMPERATURE	XX	YY	ZZ	XY	YZ	ZX	
0.	0.300000E 08	0.300000E 08	0.300000E 08	0.300000E 00	0.300000E 00	0.300000E 00	
THERMAL EXPANSION COEFFICIENTS				RIGIDITY MODULI			
DIRECTIONS				DIRECTIONS			
TEMPERATURE	XX	YY	ZZ	XY	YZ	ZX	
0.	-0.	-0.	-0.	0.115385E 08	0.115385E 08	0.115385E 08	

FIGURE III-F.11 TITLE AND MATERIAL DATA OUTPUT, SQUARE PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

NO. DIRECTIONS - 3 NO. COPIES OF PAGES - 3

TEST NUMBER	TEMPERATURE	CRIMPING DATA	Y	X	TESTER
		2			1
00	00	00	00	00	1
01	01	00	00	00	2
02	02	00	00	00	3
03	03	00	00	00	4
04	04	00	00	00	
05	05	00	00	00	
06	06	00	00	00	
07	07	00	00	00	
08	08	00	00	00	
09	09	00	00	00	
10	10	00	00	00	
11	11	00	00	00	
12	12	00	00	00	
13	13	00	00	00	
14	14	00	00	00	
15	15	00	00	00	
16	16	00	00	00	
17	17	00	00	00	
18	18	00	00	00	
19	19	00	00	00	
20	20	00	00	00	
21	21	00	00	00	
22	22	00	00	00	
23	23	00	00	00	
24	24	00	00	00	
25	25	00	00	00	
26	26	00	00	00	
27	27	00	00	00	
28	28	00	00	00	
29	29	00	00	00	
30	30	00	00	00	
31	31	00	00	00	
32	32	00	00	00	
33	33	00	00	00	
34	34	00	00	00	
35	35	00	00	00	
36	36	00	00	00	
37	37	00	00	00	
38	38	00	00	00	
39	39	00	00	00	
40	40	00	00	00	
41	41	00	00	00	
42	42	00	00	00	
43	43	00	00	00	
44	44	00	00	00	
45	45	00	00	00	
46	46	00	00	00	
47	47	00	00	00	
48	48	00	00	00	
49	49	00	00	00	
50	50	00	00	00	
51	51	00	00	00	
52	52	00	00	00	
53	53	00	00	00	
54	54	00	00	00	
55	55	00	00	00	
56	56	00	00	00	
57	57	00	00	00	
58	58	00	00	00	
59	59	00	00	00	
60	60	00	00	00	
61	61	00	00	00	
62	62	00	00	00	
63	63	00	00	00	
64	64	00	00	00	
65	65	00	00	00	
66	66	00	00	00	
67	67	00	00	00	
68	68	00	00	00	
69	69	00	00	00	
70	70	00	00	00	
71	71	00	00	00	
72	72	00	00	00	
73	73	00	00	00	
74	74	00	00	00	
75	75	00	00	00	
76	76	00</			

SOURCE: COMMUNICATION INFORMATION

INDEX	DEGREES OF FREEDOM
1	0
2	1
3	1
4	0
5	1
6	0
7	1
8	0

TOTAL NO. ELEMENTS = 1

ELEMENT TYPE		PAT NO.	CODE	TEMP.	PRINT NO.	GRID POINTS							EXTRA GRID PTS			SECTION PROPERTIES						
1	21	12	0	-0.	2	0					1	2	3	4	5	6	7	8	9	10	11	12
MATERIAL NUMBER 12 POINT IDENTIFICATION STEEL MEMBER CAPABILITY 15CTHROPIC INPUT PRINT CODE 1 ELEMENT PRINT CODE -1																						

INTERPOLATED MATERIAL PROPERTIES	
TEMPERATURE -	G.
YOUNG'S MODULUS	0.1000000E 00
POISSON'S RATIO	0.3000000E 00
EXPANSION COEFFICIENT	-0.0000000E 00
DENSITY - MGN/IN ³	0.11520441E 00

INTERPOLATED PLASTIC PROPERTIES

PAGE-STRAIN IMPUT

3424
10441 117108-314

POST-STRESS INPUT

三

EXTERNAL LOAD CONDITIONS 1

LOAD NO.	1		
NUMBER OF LOADED MODES	2		
2	0.66767E 03	0.	0.
3	0.40000E 03	0.	0.

TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN

48 X 1

0.	0.	0.	0.
0.66767000E 03	0.	0.	0.
0.40000000E 03	0.	0.	0.
0.	0.	0.	0.
0.	0.	0.	0.
0.	0.	0.	0.
0.	0.	0.	0.
0.	0.	0.	0.
0.	0.	0.	0.
0.	0.	0.	0.

T-ZERO FOR STRUCTURE = 0.

FIGURE III-F.13 TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN OUTPUT, SQUARE PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

		CUTOFF = C.		MATRIX STIFF		SIZE		BY		PAGE	
		FORCE		FORCE		FORCE		FORCE		I.	
DISP.	1	1	0.203956E 07	2	0.906593E 06	3	-0.412088E 05	4	-0.178571E 06	5	-0.329670E 07
	5	5	-0.105890E 07	7	0.714286E 06	8	0.585938E-01				
DISP.	2	1	0.906593E 06	2	0.253956E 07	3	0.535714E 06	4	0.137362E 05	5	-0.109890E 07
	5	5	-0.329670E 07	7	-0.549451E 05	8	0.273438E-01				
DISP.	3	1	-0.412088E 05	2	0.535714E 06	3	0.151099E 07	4	0.384615E 06	5	-0.714286E 06
	5	5	0.549450E 05	7	-0.115385E 07	8	-0.384615E 06				
DISP.	4	1	-0.178571E 06	2	0.137362E 05	3	0.384615E 06	4	0.296703E 07	5	0.234375E-01
	5	5	0.559341E 06	7	-0.115385E 07	8	-0.329670E 07				
DISP.	5	1	-0.329670E 07	2	-0.109890E 07	3	-0.714286E 06	4	0.234375E-01	5	0.736264E 07
	5	5	0.142857E 07	7	-0.101563E 00	8	0.142857E 07				
DISP.	6	1	-0.109890E 07	2	-0.329670E 07	3	0.549450E 05	4	0.659341E 06	5	0.142857E 07
	5	5	0.736264E 07	7	0.156250E 00	8	-0.142857E 07				
DISP.	7	1	0.714286E 06	2	-0.549451E 05	3	-0.115385E 07	4	-0.115385E 07	5	-0.101563E 00
	5	5	0.156250E 00	7	0.450549E 07	8	0.109375E 00				
DISP.	8	1	0.585938E-01	2	0.273438E-01	3	-0.384615E 06	4	-0.329670E 07	5	0.142857E 07
	5	5	-0.142857E 07	7	0.109375E 00	8	0.736264E 07				

FIGURE III-F.14 REDUCED STIFFNESS MATRIX OUTPUT, SQUARE PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

MATRIX LOAD PAGE 1
 CUTOFF = 0.
 REDDOF REDDOF REDDOF REDDOF
 1 1 0.667670E 03 2 C.4C0000E 03
 SIZE 8 BY 1
 REDDOF REDDOF

MATRIX DISPR PAGE 1
 CUTOFF = C.
 REDDOF REDDOF REDDOF REDDOF
 1 1 0.510389E-03 2 0.201391E-03 3 -0.212361E-04 4 -0.140178E-03 5 0.252377E-03
 6 0.112433E-03 7 -0.119797E-03 8 -0.910289E-04
 SIZE 8 BY 1
 REDDOF REDDOF

MATRIX STRESS PAGE 1
 CUTOFF = C.
 NRSEL NRSEL NRSEL NRSEL
 1 1 0.889585E 02 2 -0.152888E 02 3 -0.117351E-05 9 0.106172E 03 10 0.278697E 02
 11 -0.222835E 02 17 0.305088E 02 18 0.517088E 01 19 -0.242999E 01 25 0.476819E 02
 26 0.372625E 01 27 -0.269847E 01 33 0.635077E 02 34 -0.107390E 02 35 -0.173356E 01
 SIZE 40 BY 1
 NRSEL NRSEL NRSEL NRSEL

FIGURE III-F.15 LOAD, DISPLACEMENT AND STRESS OUTPUT, SQUARE PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

```

      MATRIX FORCES
      CUTOFF = 0.
      O.O.F
      1 1 -0.225893E 03 2 0.236375E 02 7 0.667670E 03 8 -0.141051E 03 13 0.400000E 03
      14 0.381470E-05 19 -0.122911E 03 20 0.305176E-04 25 0.591270E-04 26 0.117413E 03
      37 0.343323E-04 38 -0.995628E-05 43 -0.718866E 03 44 -0.152588E-04
      CONO.
      PAGE 1
  
```

```

      MATRIX REACT
      CUTOFF = 0.
      O.O.F
      1 1 -0.225893E 03 2 0.236375E 02 7 -0.686644E-04 8 -0.141051E 03 13 -0.457764E-04
      14 0.381470E-05 19 -0.122911E 03 20 0.305176E-04 25 0.591270E-04 26 0.117413E 03
      37 0.343323E-04 38 -0.995628E-05 43 -0.718866E 03 44 -0.152588E-04
      CONO.
      PAGE 1
      SEND
  
```

```

      $IBSYS
      $REMOVE
      SYSLS2
  
```

FIGURE III-F.16 FORCE AND REACTION OUTPUT, SQUARE PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

G. SQUARE PLATE - NORMAL PRESSURE LOADING -
(Quadrilateral Thin Shell Idealization)

A simply supported isotropic square plate, under the action of normal pressure loading is shown in Figure III-G.1 along with its dimensions and pertinent material properties. This plate is idealized utilizing one quadrilateral thin shell element.


The preprinted input data forms associated with this example are shown in Figures III-G.2 through III-G.11.

In Figure III-G.5 (Gridpoint Coordinate Section) it can be seen that only the gridpoint coordinates for the four corner points of the element are entered. The coordinates associated with mid-point nodes are calculated internally by the MAGIC System.

In Figure III-G.6 (Gridpoint Pressure Section) the MODAL entry is used for the input pressure values. This entry means that the normal pressures are acting at every grid point with a value of -1.0 psi. The sign of the pressure is minus since its direction is in the negative element Z_g direction.

In Figure III-G.7 (Boundary Condition Section) it is instructive to note the nature of the boundary conditions which apply to each grid point (see Figure III-G.1). Let us examine the Listed Input (Exceptions to the MODAL Card) first.

- (1) Grid Point Number 1 (center of plate) has an unknown displacement in the w direction, all others are zero due to symmetry.
- (2) Grid Point Number 2 has an unknown rotation, θ_y . The others are Zero due to the fact that the grid-point 2 is a point of simple support.
- (3) Grid Point Number 3 has all degrees of freedom fixed. This is due to the fact that this is the point where the simple supports meet restricting rotation in the θ_x and θ_y directions.
- (4) Grid Point Numbers 5 and 8 are repeated and also have all degrees of freedom fixed. These are mid-side nodes and the only possible degrees of freedom allowed are u , v , and θ_n (θ normal). Since this is a pure bending problem, u and v are equal to zero. Since Grid Points 5 and 8 lie along symmetric boundaries θ_n equals zero.

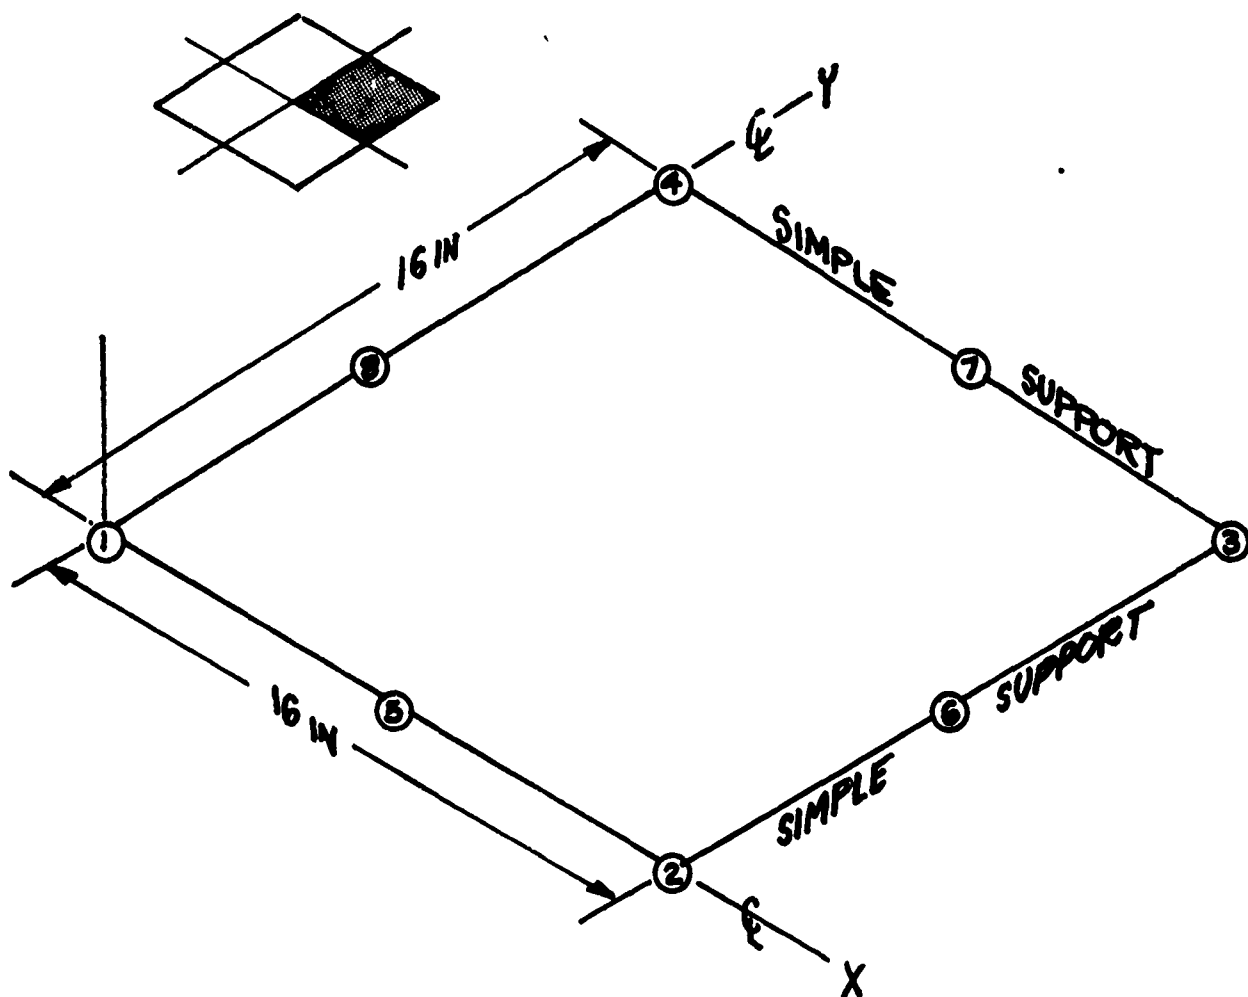

$$t = 0.10 \text{ INCH}$$

$$P = 1.0 \text{ PSI}$$

$$E = 30. \times 10^6 \text{ PSI}$$

$$\mu = .30$$

FIGURE III - G.1 - Idealized Simply Supported Plate with Normal Pressure Loading (Quadrilateral Thin Shell Idealization)

The MODAL card is now examined for the remaining grid points. Since Grid Point Numbers 1, 2, 3, 5, and 8 were called out under Listed Input, the MODAL entry pertains to Grid Point Numbers 4, 6, and 7.

- (1) Grid Point Number 4 has an unknown rotation, θ_x . The others are zero since Grid Point 4 is a point of simple support.
- (2) Grid Points 6 and 7 are mid-side nodes and the only possible degrees of freedom allowed are u , v , and θ_n (θ normal). Since this is a pure bending problem, u and v are equal to zero. However, there is an unknown slope θ_n , associated with these grid points. The Code (0, 1, 2) associated with these normal slope values is always entered in the θ_x location for consistency.

In Figure III-G.8 (External Loads Section) the following information is evident.

- (1) One load condition is input
- (2) The External Applied Load Scalar equals 1.0
- (3) The MODAL option is employed and External Force and Moment values of 0.0 are entered in the appropriate locations. Since the Quadrilateral Thin Shell Element is formulated with six degrees of freedom per point, two external load cards per grid point are required.

The Element Applied Load Scalar was set equal to 1.0 because of the following:

Total Load = External Loads + EALS (Element Applied Loads)

Since the External Loads are equal to zero, and the EALS = 1.0

Total Load = Element Applied Load

These are the correct loads since for this case the Element Applied Loads are equal to the normal pressure loads.

In Figure III-G.9 (Element Control Data Section) the following information is of importance.

- (1) The numbers '1' and '2' are entered in locations 11 and 12 of the node point portion of the Element Control Section. These two points define the direction of the (X) stress axis. With this definition, the stresses in the other directions retain their proper orientation with respect to this axis. It should be noted that the stress axis determination is element related and therefore if locations 11 and 12 are used for stress directions, then each following element (if they exist) must be considered separately and node points related to that particular element would be used in determining the stress direction.

In Figure III-G.10 (Element Input Section) only one item of information is entered in Location B as follows:

Location B - Flexural Thickness (t_f) = 0.10

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

7 8 9
No. of Requests
(1)

MATERIAL TAPE INPUT

[illegible]

MATERIAL PROPERTIES TABLE

[illegible]

FIGURE III-G.3 MATERIAL TAPE INPUT, SIMPLY SUPPORTED PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

SYSTEM CONTROL INFORMATION

ENTER APPROPRIATE NUMBER, RIGHT
ADJUSTED, IN BOX OPPOSITE
APPLICABLE REQUESTS

	<table border="1" style="display: inline-table;"> <tr><td>S</td><td>Y</td><td>S</td><td>T</td><td>E</td><td>M</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td></tr> </table>	S	Y	S	T	E	M	1	2	3	4	5	6	(/)		
S	Y	S	T	E	M											
1	2	3	4	5	6											
1. Number of System Grid Points	<table border="1" style="display: inline-table;"> <tr><td></td><td></td><td></td><td></td><td></td><td>8</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td></tr> </table>						8	1	2	3	4	5	6			
					8											
1	2	3	4	5	6											
2. Number of Input Grid Points	<table border="1" style="display: inline-table;"> <tr><td></td><td></td><td></td><td></td><td></td><td>4</td></tr> <tr><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td></tr> </table>						4	7	8	9	10	11	12			
					4											
7	8	9	10	11	12											
3. Number of Degrees of Freedom/Grid Point	<table border="1" style="display: inline-table;"> <tr><td></td><td>6</td></tr> <tr><td>13</td><td>14</td></tr> </table>		6	13	14											
	6															
13	14															
4. Number of Load Conditions	<table border="1" style="display: inline-table;"> <tr><td></td><td>1</td></tr> <tr><td>15</td><td>16</td></tr> </table>		1	15	16											
	1															
15	16															
5. Number of Initially Displaced Grid Points	<table border="1" style="display: inline-table;"> <tr><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td></tr> </table>							17	18	19	20	21	22			
17	18	19	20	21	22											
6. Number of Prescribed Displaced Grid Points	<table border="1" style="display: inline-table;"> <tr><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td></tr> </table>							23	24	25	26	27	28			
23	24	25	26	27	28											
7. Number of Grid Point Axes Transformation Systems	<table border="1" style="display: inline-table;"> <tr><td></td><td></td></tr> <tr><td>29</td><td>30</td></tr> </table>			29	30											
29	30															
8. Number of Elements	<table border="1" style="display: inline-table;"> <tr><td></td><td></td><td></td><td></td><td></td><td>1</td></tr> <tr><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td></tr> </table>						1	31	32	33	34	35	36			
					1											
31	32	33	34	35	36											
9. Number of Requests and/or Revisions of Material Tape.	<table border="1" style="display: inline-table;"> <tr><td></td><td>1</td></tr> <tr><td>37</td><td>38</td></tr> </table>		1	37	38											
	1															
37	38															
10. Number of Input Boundary Condition Points	<table border="1" style="display: inline-table;"> <tr><td></td><td></td><td></td><td></td><td></td><td>5</td></tr> <tr><td>39</td><td>40</td><td>41</td><td>42</td><td>43</td><td>44</td></tr> </table>						5	39	40	41	42	43	44			
					5											
39	40	41	42	43	44											
11. T_0 For Structure (With Decimal Point)	<table border="1" style="display: inline-table;"> <tr><td>0</td><td>.</td><td>0</td><td></td><td></td><td></td><td></td></tr> <tr><td>45</td><td>46</td><td>47</td><td>48</td><td>49</td><td>50</td><td>51</td></tr> </table>	0	.	0					45	46	47	48	49	50	51	(/)
0	.	0														
45	46	47	48	49	50	51										

FIGURE III-G.1 SYSTEM CONTROL INFORMATION, SIMPLY SUPPORTED
PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1	2	3	4	5	6
C	O	O	R	D	

(/)

GRIDPOINT COORDINATE

[illegible]

FIGURE III-G.5 GRIDPOINT COORDINATES, SIMPLY SUPPORTED PLATE
(QUADRILATERAL THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1 2 3 4 5 6

P R E S S

(/)

GRID POINT PRESSURES

1 2 3 4 5 6

M	O	D	A	L
---	---	---	---	---

[illegible][illegible]

BOUNDARY CONDITIONS

1	2	3	4	5	6
B	O	U	N	D	

1	2	3	4	5	6
M	O	D	A	L	

TRANSLATIONS			ROTATIONS			GENERALIZED		
U	V	W	θ_x	θ_y	θ_z	1	2	3
13	14	15	16	17	18	19	20	21
○	○	○	/	○	○			

[illegible]

257

1	2	3	4	5	6
L	O	A	D	S	

(/)

[illegible]Condition
Number

Scalar

MAGIC STRUCTURE

EXT

FORCE VALUES

$$F_x$$
 F_v F_z

M O M

 M_x

1	2	3	4	5	6
M	O	D	A	L	

Grid Pt.
Number

Number	1	2	2	3	3	4																			
7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2

1								2			
3	4	5	6	7	8	9	0	1	2		

k/1

b6
b7C
b7Db6
b7Cb6
b7C

44

11

11

13

7.

11

7.

...

...

1

1

1

4

4

1

1

4

1

11

73

11

11

173

17)

258

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

EXTERNAL LOADS

		MOMENT VALUES																	GENERALIZED VALUES																							
		M _x					M _y					M _z							1					2					3													
		1	2				2	3				3	4						1	2				2	3				3	4												
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	
0	(/)								0.0										0.0																				0.0	(/)		

[illegible]

3

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR ARE
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

MODE POINTS

S S S S S S S S S S S S S S S S S S S

(QUADRILATERAL THIN SHELL IDEALIZATION)

ELEMENT INPUT

[illegible]

Element Number	Report
----------------	--------

[illegible]

FIGURE III-G.10 ELEMENT INPUT, SIMPLY SUPPORTED PLATE
(QUADRILATERAL THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM

INPUT DATA FORMAT

CHECK OR END CARD

C	H	E	C	K
1	2	3	4	5

 (/)

E	N	D
1	2	3

 (/)

FIGURE III-G.11 END CARD, SIMPLY SUPPORTED PLATE
(QUADRILATERAL THIN SHELL IDEALIZATION)

The output supplied by the MAGIC System for the simply supported isotropic square plate subjected to a normal pressure load and idealized using one quadrilateral thin shell element is as follows:

Figures III-G.12 through III-G.14 display the output from the Structural Systems Monitor. These figures record the input data pertinent to the problem being solved.

The Gridpoint Data Information is shown in Figure III-G.13. Note that pressures of -1.0 psi are applied at each gridpoint. The finite element information is also shown in Figure III-G.13. Under the section titled External Input, the second entry has a numerical value of 0.09999999. This value is equal to the flexural thickness of the plate being analyzed.

Figure III-G.14 displays the Transformed External Assembled Load Column. Note that these loads are all equal to zero since input pressures are element applied loads.

System level output of final results is handled by the FORMAT standard matrix capability. These results are shown in Figures III-G.15 through III-G.17.

Figure III-G.15 shows the assembled and reduced stiffness matrix. The stiffness matrix is read row-wise and only non-zero terms are displayed. The ordering of the stiffness matrix is consistent with that of the boundary conditions shown in Figure III-G.13. For this case the displacement vector is ordered as follows:

$$\{q\}^T = [w_1, \theta_{y2}, \theta_{x4}, \theta_{n6}, \theta_{n7}]$$

Where θ_{ni} = normal slope at node point i

Figure III-G.16 displays the vector of Reduced Element Applied Loads (MATRIX FTELAR). The size of this vector is a 5 x 1, since there are five degrees of freedom remaining in the assembled and reduced stiffness matrix. The vector appears as follows and is read row-wise:

MATRIX FTELAR

REDDOF	NODE POINT	ELEMENT APPLIED LOAD VALUE
1	1	$F_Z = -64.0000$
2	2	$M_Y = -102.400$
3	4	$M_X = -102.400$
4	6	$M_Y = -136.533$
5	7	$M_X = -136.533$

The vector of displacements (DISPR) is the next item of information presented in Figure III-G.16. This vector is also a 5 x 1 since there are five degrees of freedom remaining after assembly and reduction. The ordering of the displacement vector is consistent with that of the boundary conditions shown in Figure III-G.13.

$$\{q\}^T = [w_1, \theta_{y2}, \theta_{x4}, \theta_{n6}, \theta_{n7}]$$

The displacements are referred to the global axis of reference unless otherwise indicated.

The MATRIX DISPR is interpreted as follows:

MATRIX DISPR

REDDOF	NODE POINT	D.O.F.	DISP. VALUE
1	1	w	-1.55818
2	2	θ_y	-0.163346
3	4	θ_x	-0.163346
4	6	θ_n	-0.117302
5	7	θ_n	-0.117302

The final item of information presented in Figure III-G.16 is the Stress Matrix (MATRIX STRESS). The stress matrix is a 40 x 1 for the following reason. Eight stress resultants are evaluated at each corner point of the quadrilateral and also at the diagonal intersection, giving a total of 40 stress resultants per element.

The stress resultants for the quadrilateral thin shell were explicitly defined in Section III-G (Square Plate-Parabolic Membrane Loading). Sketches were also provided to facilitate proper interpretation of the stress resultants.

The stress vector is in general referenced to the element coordinate system. For the quadrilateral or triangular thin shell elements however, the User has the option of specifying material or stress axes in order to effectively define stress output direction. This is accomplished by utilizing locations 9 and 10 or 11 and 12 of the node point portion of the Element Control Section. In this particular problem the numbers '1' and '2' were entered in locations 11 and 12 of the node point portion of the Element Control Section for Element Number 1.

These two points define the x direction of the stress axis (positive x from node point 1 to node point 2). These axes of reference then become the reference stress axis.

The ordering of the stress matrix is as follows:

MATRIX STRESS

NRSEL	ELEMENT	STRESS RESULTANT	NODE POINT
4	1	$M_x = -57.5059$	1
5	1	$M_y = -57.5059$	1
6	1	$M_{xy} = -0.0000010 = 0$	1
7	1	$Q_x = -2.86170$	1
8	1	$Q_y = 3.59377$	1
12	1	$M_x = -8.28234$	2
13	1	$M_y = -2.48470$	2
14	1	$M_{xy} = 2.50353$	2
15	1	$Q_x = -4.32583$	2
16	1	$Q_y = 3.59377$	2
20	1	$M_x = -0.0000007 = 0$	3
21	1	$M_y = -0.0000019 = 0$	3
22	1	$M_{xy} = 36.7623$	3
23	1	$Q_x = -4.32583$	3
24	1	$Q_y = -3.59377$	3
28	1	$M_x = -7.13411$	4
29	1	$M_y = -12.9318$	4
30	1	$M_{xy} = 0.0000021 = 0$	4

MATRIX STRESS

NRSEL	ELEMENT	STRESS RESULTANT	NODE POINT
31	1	$Q_x = -2.86170$	4
32	1	$Q_y = -3.59377$	4
36	1	$M_x = -34.1365$	Int. of Diag.
37	1	$M_y = -34.1365$	Int. of Diag.
38	1	$M_{xy} = 15.4824$	Int. of Diag.
39	1	$Q_x = -3.59377$	Int. of Diag.
40	1	$Q_y = -0.00000009=0$	Int. of Diag.

Figure III-G.17 presents the vector of element forces. (MATRIX FORCES). These forces are defined with respect to the Global Coordinate System. The Matrix Force vector is a 48 x 1 vector for the following reason. The quadrilateral thin shell element is defined by eight node points (4 corner points and 4 mid-side node points). Since there are six forces per node point ($F_x, F_y, F_z, M_x, M_y, M_z$) a total of 48 forces per element are defined. Note that the Mid-side nodes have allowable degrees of freedom equal to u, v , and normal slope (θ_n). Therefore, in a flexure problem, the moment at any mid-side node is associated with the normal slope. The ordering of the Matrix Forces is as follows (See Figure III-G.1 for the element numbering sequence).

MATRIX FORCES

D.O.F.	ELEMENT NO.	FORCE	NODE POINT
3	1	$F_Z = 0.0000029 = 0$	1
4	1	$M_X = -136.282$	1
5	1	$M_Y = 136.282$	1
9	1	$F_Z = 99.8212$	2
10	1	$M_X = 252.536$	2
11	1	$M_Y = 0.0000296 = 0$	2
15	1	$F_Z = 56.3576$	3
16	1	$M_X = -190.243$	3
17	1	$M_Y = 190.243$	3
21	1	$F_Z = 99.8212$	4
22	1	$M_X = -0.000033 = 0$	4
23	1	$M_Y = -252.536$	4
28	1	$M_N = -376.872$	5
34	1	$M_N = -0.00000 = 0$	6
40	1	$M_N = -0.0000134 = 0$	7
46	1	$M_N = 376.872$	8

The final item of information contained in Figure III-G. 17 is the vector of reactions (MATRIX REACT). This vector is a 48 x 1 since there are eight node points associated with this problem and six associated degrees of freedom per node point. The reactions are read row-wise and are interpreted as follows: (Note that the reactions are referenced to the Global Coordinate System.)

MATRIX REACT

D.O.F.	REACTION	NODE POINT
3	$P_{RX} = 0.00000 = 0$	1
4	$M_{RX} = -136.282$	1
5	$M_{RY} = 136.282$	1
9	$P_{RZ} = 99.8212$	2
10	$M_{RX} = 252.536$	2
11	$M_{RY} = 0.0000296 = 0$	2
15	$P_{RZ} = 56.3576$	3
16	$M_{RX} = -190.243$	3
17	$M_{RY} = 190.243$	3
21	$P_{RZ} = 99.8212$	4
22	$M_{RX} = -0.000033 = 0$	4
23	$M_{RY} = -252.536$	4
28	$M_{RN} = -376.872$	5
34	$M_{RN} = -0.0000095 = 0$	6
40	$M_{RN} = -0.0000134 = 0$	7
46	$M_{RN} = 376.872$	8

SIMPLY SUPPORTED ISOTROPIC SQUARE PLATE SUBJECTED TO A
UNIFORM NORMAL PRESSURE LOAD OF 1 PSI- ONE QUADRILATERAL
THIN SHELL ELEMENT USED IN THE IDEALIZATION

REVISIONS OF MATERIAL TAPE

ASTERISK (*) PRECEDING MATERIAL
IDENTIFICATION INDICATES THAT INPUT
ERROR RETURNS WILL NOT RESULT IN
TERMINATION OF EXECUTION

REVISION	NUMBER	12	INPUT CODE	1
MATERIAL IDENTIFICATION	STEEL			
NUMBER OF MATERIAL PROPERTY POINTS	1			
NUMBER OF PLASTIC PROPERTY POINTS	0			
MASS DENSITY	0.0			

MATERIAL PROPERTIES

YOUNG'S MODULI

DIRECTIONS

TEMPERATURE	XX	YY	ZZ	XY	YZ	ZX
0.	0.300000E 00	0.300000E 00	0.300000E 00	0.300000E 00	0.300000E 00	0.300000E 00

THERMAL EXPANSION COEFFICIENTS

DIRECTIONS

TEMPERATURE	XX	YY	ZZ	XY	YZ	ZX
0.	-0.	-0.	-0.	0.115305E 00	0.115305E 00	0.115305E 00

POISSON'S RATIOS

DIRECTIONS

YZ	0.300000E 00
----	--------------

RIGIDITY MODULI

DIRECTIONS

YZ	0.115305E 00
----	--------------

FIGURE III-G.12 TITLE AND MATERIAL DATA OUTPUT, SIMPLY SUPPORTED PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

The final item of information contained in Figure III-G. 17 is the vector of reactions (MATRIX REACT). This vector is a 48 x 1 since there are eight node points associated with this problem and six associated degrees of freedom per node point. The reactions are read row-wise and are interpreted as follows: (Note that the reactions are referenced to the Global Coordinate System.)

MATRIX REACT

D.O.F.	REACTION	NODE POINT
3	$P_{RX} = 0.00000 = 0$	1
4	$M_{RX} = -136.282$	1
5	$M_{RY} = 136.282$	1
9	$P_{RZ} = 99.8212$	2
10	$M_{RX} = 252.536$	2
11	$M_{RY} = 0.0000296 = 0$	2
15	$P_{RZ} = 56.3576$	3
16	$M_{RX} = -190.243$	3
17	$M_{RY} = 190.243$	3
21	$P_{RZ} = 99.8212$	4
22	$M_{RX} = -0.000033 = 0$	4
23	$M_{RY} = -252.536$	4
28	$M_{RN} = -376.872$	5
34	$M_{RN} = -0.0000095 = 0$	6
40	$M_{RN} = -0.0000134 = 0$	7
46	$M_{RN} = 376.872$	8

SIMPLY SUPPORTED ISOTROPIC SQUARE PLATE SUBJECTED TO A
UNIFORM NORMAL PRESSURE LOAD OF 1 PSI- ONE QUADRILATERAL
THIN SHELL ELEMENT USED IN THE IDEALIZATION

REVISIONS OF MATERIAL TAPE

ASTERISK (*) PRECEDING MATERIAL
IDENTIFICATION INDICATES THAT INPUT
ERROR RETURNS WILL NOT RESULT IN
TERMINATION OF EXECUTION

REVISION NUMBER 12 INPUT CODE 1
MATERIAL IDENTIFICATION STEEL
NUMBER OF MATERIAL PROPERTY POINTS . . . 1
NUMBER OF PLASTIC PROPERTY POINTS . . . -0
MASS DENSITY -0.

MATERIAL PROPERTIES

YOUNG'S MODULI

DIRECTIONS

TEMPERATURE XX 0.300000E 08 YY 0.300000E 08 ZZ 0.300000E 08
0. 0.300000E 08

THERMAL EXPANSION COEFFICIENTS

DIRECTIONS

TEMPERATURE XX -0. YY -0. ZZ -0.
0. -0.

POISSON'S RATIOS

DIRECTIONS

YZ 0.300000E 00 ZX 0.300000E 00
XY 0.300000E 00

RIGIDITY MODULI

DIRECTIONS

YZ 0.115385E 08 ZX 0.115385E 08
XY 0.115385E 08

FIGURE III-G-12 TITLE AND MATERIAL DATA OUTPUT, SIMPLY SUPPORTED PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

6 REP. POINTS

NO. CONNECTIONS = 3 NO. SECTIONS OF PROBLEM = 2

GRID POINT DATA		ORIGIN DATA		TEMPERATURES		PRESSURES	
POINT		1	2	7	2		
1	0.	0.	0.	0.	0.	0.	0.
2	0.10000000	0.	0.	0.	0.	0.	0.
3	0.10000000	0.	0.	0.	0.	0.	0.
4	0.	0.10000000	0.	0.	0.	0.	0.

BOUNDARY CONDITION INFORMATION

SECTIONS	SECTIONS OF PROBLEM	
1	3	1
2	0	0
3	0	0
4	0	0
5	0	0
6	0	0
7	0	0
8	0	0

TOTAL NO. ELEMENTS = 1

ELM TYPE		NO. EL.	CODE	TEMP.	PROF	NO.	GRID POINTS							SECTION PROPERTIES				
1	21	12	0	0	2	0	1	2	3	4	5	6	7	8	9	10	11	12
MATERIAL IDENTIFICATION																		
ANALYSIS CAPABILITY																		
INPUT PRINTER CODE																		
ELEMENT PRINTER CODE																		

INTERPOLATED MATERIAL PROPERTIES

TEMPERATURE	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.
YOUNG'S MODULI	0.10000000	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.
POISSON'S RATIOS	0.10000000	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.
THERMAL EXPANSION COEFFICIENTS	0.11390000	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.
RIGIDITY MODULI	0.11390000	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.	0.

INTERPOLATED PLASTIC PROPERTIES

NAME

PRE-STRAIN INPUT

NAME

PRE-STRESS INPUT

NAME

EXTERNAL INPUT

0.

FIGURE III-G-13 GRID POINT DATA, BOUNDARY CONDITION AND FINITE ELEMENT DESCRIPTION OUTPUT, SIMPLY SUPPORTED PLATE (QUADRILATERAL FIN SHELL IDEALIZATION)

[illegible]

LOAD NO.	1	NUMBER OF LOADED NODES	S	ELEMENT LOAD SCALAR = 0.1000000E 01
1	0.	0.	0.	0.
2	0.	0.	0.	0.
3	0.	0.	0.	0.
4	0.	0.	0.	0.
5	0.	0.	0.	0.
6	0.	0.	0.	0.
7	0.	0.	0.	0.
8	0.	0.	0.	0.

A 6x8 grid of dots representing a binary image. The dots are arranged in a pattern that resembles a stylized '1' or a vertical bar with some internal structure. The dots are black on a white background.

[illegible]

T-ZERO FOR STRUCTURE = 0.

FIGURE III-G.14 TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN OUTPUT,
SIMPLY SUPPORTED PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

PAGE 1

MATRIX STIFF

CUTOFF = 0.

	FORCE	FORCE	FORCE	SIZE	BY	FORCE					
DISP.	1	1	0.128777E 03	2	-0.171703E 03	3	0.171703E 03	4	-0.343407E 03	5	-0.343407E 03
DISP.	2	1	-0.171703E 03	2	0.618132E 04	3	-0.686813E 03	4	-0.549450E 04	5	-C.915751F 03
DISP.	3	1	C.171703E 03	2	-0.686813E .03	3	0.618132E 04	4	0.915751E 03	5	0.549450E 04
DISP.	4	1	-C.343407E 03	2	-0.549450E 04	3	0.915751E 03	4	0.183150E 05	5	-0.366300E 04
DISP.	5	1	-0.343407E 03	2	-0.915751E 03	3	0.549450E 04	4	-0.366300E 04	5	0.183150E 05

PAGE 1

MATRIX FTELAR

CUTOFF = 0.

	REDDOF	REDDOF	REDDOF	SIZE	BY	REDDOF					
COND.	1	1	-0.640000E 02	2	-0.102400E 03	3	0.102400E 03	4	-0.136533E 03	5	-0.136533E 03

FIGURE III-G.15 REDUCED STIFFNESS MATRIX AND REDUCED ELEMENT APPLIED LOADS,
SIMPLY SUPPORTED PLATE (QUADRILATERAL THIN SHELL IDEALIZATION)

CUTOFF = 0.
 MATRIX LOAD
 SIZE 5 BY 1
 PAGE 1
 NULL MATRIX

CUTOFF = 0.
 MATRIX DISPR
 SIZE 5 BY 1
 REDDOF REDDOF
 COMD. 1 1 -0.155810E 01 2 -0.163346E 00 3 0.163346E 00 4 -0.117302E 00 5 -0.117302E 00
 PAGE 1

CUTOFF = 0.
 MATRIX STRESS
 SIZE 40 BY 1
 MRSEL MRSEL
 COMD. 1 4 -0.575059E 02 5 -0.575059E 02 6 -0.103504E-05 7 -0.286170E 01 8 0.359377E 01
 12 -0.828234E 01 13 -0.248470E 01 14 0.250353E 01 15 -0.432583E 01 16 0.359377E 01
 20 -0.715254E-06 21 -0.190735E-05 22 0.367623E 02 23 -0.432583E 01 24 -0.359377E 01
 28 -0.713411E 01 29 -0.129318E 02 30 0.212396E-05 31 -0.286170E 01 32 -0.359377E 01
 36 -0.341365E 02 37 -0.341365E 02 38 0.154824E 02 39 -0.359377E 01 40 -0.894070E-07
 PAGE 1

FIGURE III-G.16 LOAD, DISPLACEMENT AND STRESS OUTPUT, SIMPLY SUPPORTED PLATE
 (QUADRILATERAL THIN SHELL IDEALIZATION)

MATRIX FORCES
 CUTOFF = 0.
 D.O.F. 1 3 0.286102E-05 4 -0.136282E 03 5 C.136282E 03 9 0.998212E 02 1C 0.252536E 03
 11 0.295639E-04 15 0.563576E 02 16 -0.190243E 03 17 0.190243E 03 21 0.998212E 02
 22 -0.333786E-04 23 -0.252536E 03 28 -0.376872E 03 34 -0.953674E-05 40 -0.133514E-04
 44 0.376872E 03

MATRIX REACT
 CUTOFF = 0.
 D.O.F. 1 3 0.286102E-05 4 -0.136282E 03 5 0.136282E 03 9 0.998212E 02 10 0.252536E 03
 11 0.295639E-04 15 0.563576E 02 16 -0.190243E 03 17 0.190243E 03 21 0.998212E 02
 22 -0.333786E-04 23 -0.252536E 03 28 -0.376872E 03 34 -0.953674E-05 40 -0.133514E-04
 44 0.376872E 03

SEND
 STOPS
 REMOVE
 SEND
 NOT A BASIC MONITOR CONTROL CARD
 PRESS START TO IGNORE OR
 PROVIDE CLARIFICATION IN CARD READER
 OPER. ACTION PAUSE
 ..CONTINUING
 STOPS
 STOP

FIGURE III-G.17 FORCE AND REACTION OUTPUT, SIMPLY SUPPORTED PLATE
 (QUADRILATERAL THIN SHELL IDEALIZATION)

H. SQUARE PLATE - PARABOLIC MEMBRANE LOADING (Triangular Thin Shell Idealization)

An isotropic, square plate under the action of a parabolic membrane loading is shown in Figure III-H.1, along with its dimensions and pertinent material properties. The plate is idealized utilizing two triangular thin shell elements.

The preprinted input data forms associated with this example are shown in Figures III-H.2 through III-H.10.

In Figure III-H.5 (Gridpoint Coordinate Section) it can be seen that only the grid point coordinates for the three corner points of each element are entered. The coordinates associated with mid-point nodes are calculated internally by the MAGIC System.

In Figure III-H.6 (Boundary Condition Section) it is instructive to note the nature of the boundary conditions which apply to each grid point (See Figure III-H.1). Remember that in a pure membrane problem, u and v are the only degrees of freedom which are of interest.

Let us examine the Listed Input (Exceptions to the MODAL Card) first.

- (1) Grid Point Number 1 (Center of Plate) has all degrees of freedom fixed. This is true because this grid point is at the center of the plate and the plate is loaded by a self-equilibrating parabolic membrane load.
- (2) Grid Point Numbers 2 and 5 only have an unknown displacement in the u direction. This is true because these grid points lie along a symmetric boundary defined by the X axis.
- (3) Grid Point Numbers 4 and 8 only have an unknown displacement in the v direction. This is true because these grid points lie along a symmetric boundary defined by the Y axis.
- (4) Grid Point Number 6 is suppressed, therefore, all associated degrees of freedom are fixed.

The MODAL card is now examined for the remaining grid points. Since Grid Point Numbers 1, 2, 4, 5, and 8 were called out under Listed Input, the MODAL entry pertains to Grid Point Numbers 3, 7, and 9.

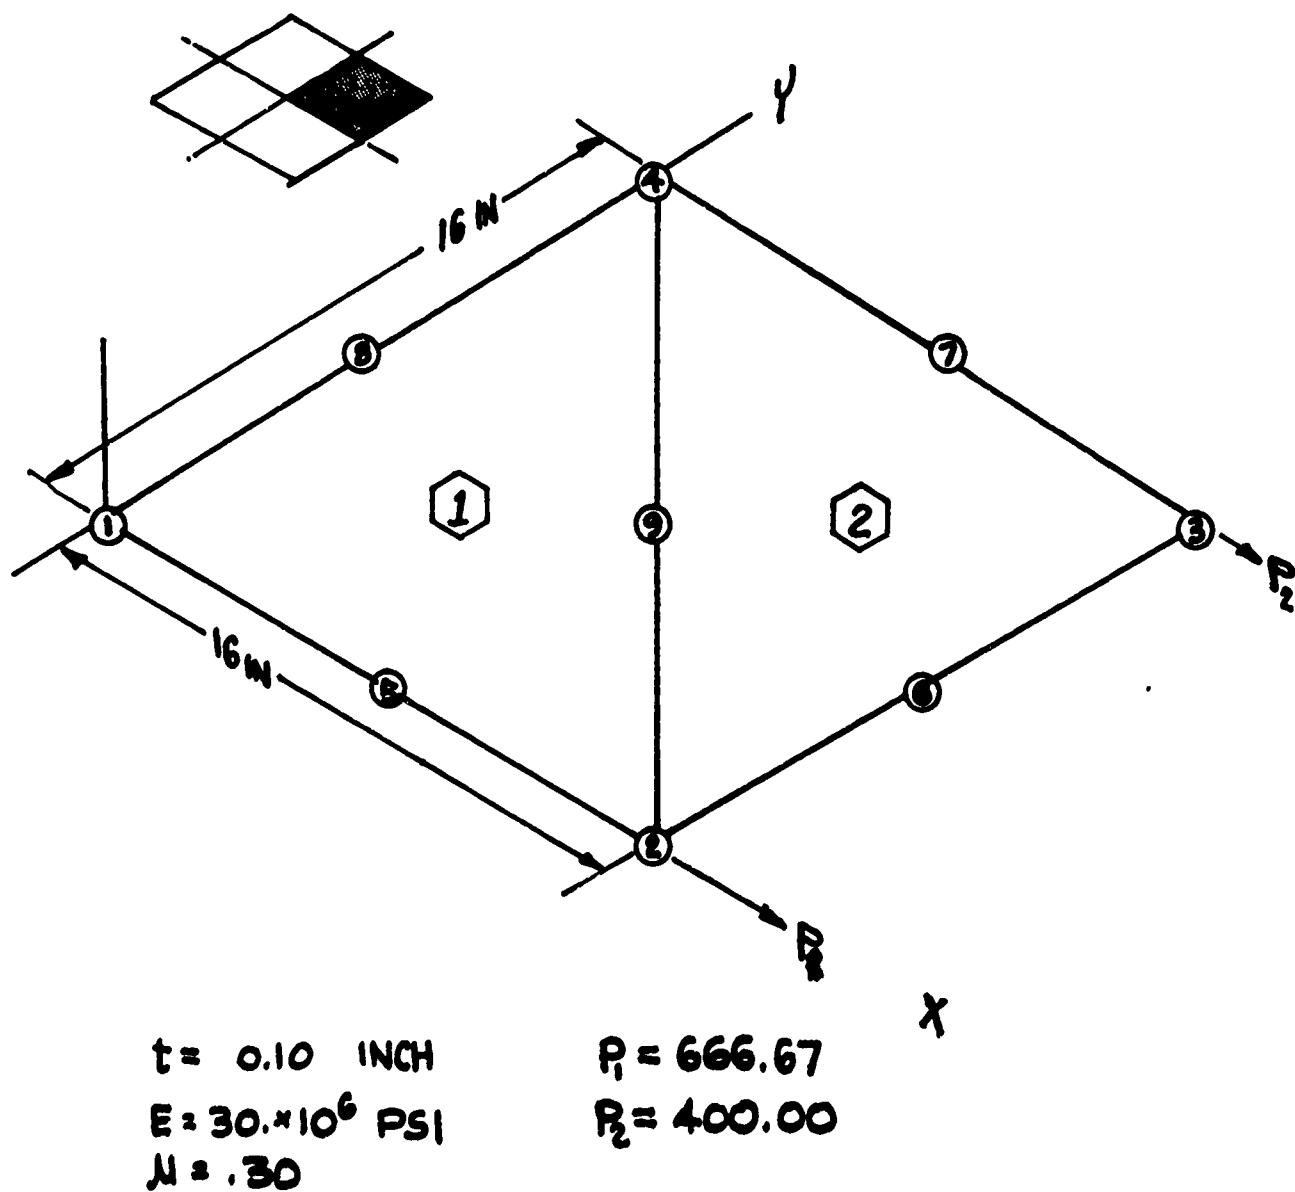


FIGURE III.- H.1 - Idealized Square Plate, Parabolic Membrane Loading (Triangular Thin Shell Idealization)

Grid Point Numbers 3, 7, and 9 have unknown displacements both in the u and v directions.

In Figure III-H.7 (External Loads Section) Grid Points 2 and 3 have applied external loading. Note that there are two external load cards per grid point.

In Figure III-H.8 (Element Control Data Section) the following information is of importance.

- (1) For element number 2, mid-point node number 6 is suppressed. This element is therefore numbered 2, 3, 4, 0, 7, 9. These entries are made in the first six locations of the node point section as shown in Figure III-H.8.
- (2) For element numbers 1 and 2, the numbers '1' and '2' are entered in locations 9 and 10 of the node point portion of the Element Control Section. These two points define the X direction for the material properties axes. This allows the User to effectively define stress output direction. The same two points, used for Element Number 1, can also be used for Element Number 2 as shown in the figure.

In Figure III-H.9 (Element Input Section) only one item of information is entered in Location A of the MODAL section.

Location A - Membrane Thickness (t_m) = 0.10

This MODAL entry signifies that this thickness applies to all elements used in this analysis.

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

REPORT (1)

TITLE INFORMATION

1 2 3 4 5 6

THIS IS THE FIRST ENTRY ON ALL REPORT FORM INPUT RUNS AND IT IS REQUIRED FOR ALL RUNS.

TITLE	(/)

789

NUMBER OF TITLE CARDS

[illegible]

FIGURE III-H.2 TITLE INFORMATION, SQUARE PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM

INPUT DATA FORMAT

789
No. of Requests
(1)

MATERIAL TAPE INPUT

[illegible]

MATERIAL PROPERTIES TABLE

TEMPERATURE	
1	2
34	89012
0.0	

	YOUNGS MODULI								
Direction	2	3	4	5	6	7	8	9	0
ϵ_x	2	3	4	5	6	7	8	9	0
ϵ_y	1	2	3	4	5	6	7	8	9
ϵ_z	0	1	2	3	4	5	6	7	8

[illegible][illegible][illegible]

FIGURE III-H.3 MATERIAL TAPE INPUT, SQUARE PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

SYSTEM CONTROL INFORMATION

ENTER APPROPRIATE NUMBER, RIGHT
ADJUSTED, IN BOX OPPOSITE
APPLICABLE REQUESTS

		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="padding: 2px 5px;">S</td> <td style="padding: 2px 5px;">Y</td> <td style="padding: 2px 5px;">S</td> <td style="padding: 2px 5px;">T</td> <td style="padding: 2px 5px;">E</td> <td style="padding: 2px 5px;">M</td> </tr> <tr> <td style="text-align: center; font-size: small;">1</td> <td style="text-align: center; font-size: small;">2</td> <td style="text-align: center; font-size: small;">3</td> <td style="text-align: center; font-size: small;">4</td> <td style="text-align: center; font-size: small;">5</td> <td style="text-align: center; font-size: small;">6</td> </tr> </table>	S	Y	S	T	E	M	1	2	3	4	5	6	(/)
S	Y	S	T	E	M										
1	2	3	4	5	6										
1. Number of System Grid Points		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 16.6%; height: 20px;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%; text-align: center;">9</td> </tr> <tr> <td style="text-align: center; font-size: x-small;">1</td> <td style="text-align: center; font-size: x-small;">2</td> <td style="text-align: center; font-size: x-small;">3</td> <td style="text-align: center; font-size: x-small;">4</td> <td style="text-align: center; font-size: x-small;">5</td> <td style="text-align: center; font-size: x-small;">6</td> </tr> </table>						9	1	2	3	4	5	6	
					9										
1	2	3	4	5	6										
2. Number of Input Grid Points		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 16.6%; height: 20px;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%; text-align: center;">4</td> </tr> <tr> <td style="text-align: center; font-size: x-small;">7</td> <td style="text-align: center; font-size: x-small;">8</td> <td style="text-align: center; font-size: x-small;">9</td> <td style="text-align: center; font-size: x-small;">10</td> <td style="text-align: center; font-size: x-small;">11</td> <td style="text-align: center; font-size: x-small;">12</td> </tr> </table>						4	7	8	9	10	11	12	
					4										
7	8	9	10	11	12										
3. Number of Degrees of Freedom/Grid Point		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 50%; height: 20px;"></td> <td style="width: 50%; text-align: center;">6</td> </tr> <tr> <td style="text-align: center; font-size: x-small;">13</td> <td style="text-align: center; font-size: x-small;">14</td> </tr> </table>		6	13	14									
	6														
13	14														
4. Number of Load Conditions		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 50%; height: 20px;"></td> <td style="width: 50%; text-align: center;">1</td> </tr> <tr> <td style="text-align: center; font-size: x-small;">15</td> <td style="text-align: center; font-size: x-small;">16</td> </tr> </table>		1	15	16									
	1														
15	16														
5. Number of Initially Displaced Grid Points		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 16.6%; height: 20px;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> </tr> <tr> <td style="text-align: center; font-size: x-small;">17</td> <td style="text-align: center; font-size: x-small;">18</td> <td style="text-align: center; font-size: x-small;">19</td> <td style="text-align: center; font-size: x-small;">20</td> <td style="text-align: center; font-size: x-small;">21</td> <td style="text-align: center; font-size: x-small;">22</td> </tr> </table>							17	18	19	20	21	22	
17	18	19	20	21	22										
6. Number of Prescribed Displaced Grid Points		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 16.6%; height: 20px;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> </tr> <tr> <td style="text-align: center; font-size: x-small;">23</td> <td style="text-align: center; font-size: x-small;">24</td> <td style="text-align: center; font-size: x-small;">25</td> <td style="text-align: center; font-size: x-small;">26</td> <td style="text-align: center; font-size: x-small;">27</td> <td style="text-align: center; font-size: x-small;">28</td> </tr> </table>							23	24	25	26	27	28	
23	24	25	26	27	28										
7. Number of Grid Point Axes Transformation Systems		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 50%; height: 20px;"></td> <td style="width: 50%;"></td> </tr> <tr> <td style="text-align: center; font-size: x-small;">29</td> <td style="text-align: center; font-size: x-small;">30</td> </tr> </table>			29	30									
29	30														
8. Number of Elements		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 16.6%; height: 20px;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%; text-align: center;">2</td> </tr> <tr> <td style="text-align: center; font-size: x-small;">31</td> <td style="text-align: center; font-size: x-small;">32</td> <td style="text-align: center; font-size: x-small;">33</td> <td style="text-align: center; font-size: x-small;">34</td> <td style="text-align: center; font-size: x-small;">35</td> <td style="text-align: center; font-size: x-small;">36</td> </tr> </table>						2	31	32	33	34	35	36	
					2										
31	32	33	34	35	36										
9. Number of Requests and/or Revisions of Material Tape.		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 50%; height: 20px;"></td> <td style="width: 50%; text-align: center;">1</td> </tr> <tr> <td style="text-align: center; font-size: x-small;">37</td> <td style="text-align: center; font-size: x-small;">38</td> </tr> </table>		1	37	38									
	1														
37	38														
10. Number of Input Boundary Condition Points		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 16.6%; height: 20px;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%; text-align: center;">6</td> </tr> <tr> <td style="text-align: center; font-size: x-small;">39</td> <td style="text-align: center; font-size: x-small;">40</td> <td style="text-align: center; font-size: x-small;">41</td> <td style="text-align: center; font-size: x-small;">42</td> <td style="text-align: center; font-size: x-small;">43</td> <td style="text-align: center; font-size: x-small;">44</td> </tr> </table>						6	39	40	41	42	43	44	
					6										
39	40	41	42	43	44										
11. T_0 For Structure (With Decimal Point)		<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <td style="width: 16.6%; text-align: center;">0</td> <td style="width: 16.6%; text-align: center;">.</td> <td style="width: 16.6%; text-align: center;">0</td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> <td style="width: 16.6%;"></td> </tr> <tr> <td style="text-align: center; font-size: x-small;">45</td> <td style="text-align: center; font-size: x-small;">46</td> <td style="text-align: center; font-size: x-small;">47</td> <td style="text-align: center; font-size: x-small;">48</td> <td style="text-align: center; font-size: x-small;">49</td> <td style="text-align: center; font-size: x-small;">50</td> </tr> </table>	0	.	0				45	46	47	48	49	50	(/)
0	.	0													
45	46	47	48	49	50										

FIGURE III-H.4 SYSTEM CONTROL INFORMATION, SQUARE PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1	2	3	4	5	6
C	O	O	R	D	

(/)

GRIDPOINT COORDINATE

D I R E C T I O N S																																				
Grid Point Number	X - R												Y - Θ												Z - Z											
7 8 9 0 1 2	1 3 4 5 6 7 8 9 0 1 2												2 3 4 5 6 7 8 9 0 1 2												3 3 4 5 6 7 8 9 0 1 2											
				1	0.	0										0.	0										0.	0							(/)	
				2	1	6.	0									0.	0										0.	0							(/)	
				3	1	6.	0									1	6.	0									0.	0							(/)	
				4	0.	0										1	6.	0									0.	0							(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	
																																			(/)	

FIGURE III-H.5 GRIDPOINT COORDINATES, SQUARE PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

EXTERNAL LOADS

				MOMENT VALUES																				GENERALIZED VALUES																			
				M _x				M _y				M _z								1				2				3															
				1		2		2		3		3		4						1		2		2		3		3		4													
4				9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2						
(/)																				(/)																				(/)			

[illegible]

(S)

ELEMENT NUMBER	PLUG NO.	MATERIAL NUMBER	Interpolated Nodes	MATERIAL TEMPERATURE	Repeat Elem. Matrix	Elem. Input	PRINT			No. of Assem. Nodes	NODE POINTS																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															
							Print	Elem. Mat.	Fail		Number of Input Nodes	1	2	3	4	5	6	7	8	9	10	11	12																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
17	890	1	2	01234567	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																													
	120		12			X			X																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	

FIGURE III-H.8 ELEMENT CONTROL DATA, SQUARE PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR ARE
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

ELEMENT INPUT

[illegible]

FIGURE III-H.9 ELEMENT INPUT, SQUARE PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM

INPUT DATA FORMAT

CHECK OR END CARD

C	H	E	C	K
1	2	3	4	5

 (/)

E	N	D
1	2	3

 (/)

FIGURE III-H.10 END CARD, SQUARE PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

The output supplied by the MAGIC System for the thin square plate subjected to parabolic loading and idealized with two triangular thin shell elements is as follows:

Figures III-H.11 thru III-H.13 display the output from the Structural Systems Monitor. These figures record the input data pertinent to the problem being solved.

In Figure III-H.12, the finite element information is shown. Under the section titled External Input, the first entry printed has a numerical value of 0.0999999. This value is equal to the membrane thickness of the plate being analyzed.

Figure III-H.13 displays the External Load Column for this problem. The 54×1 vector shown in the figure is the total unreduced transformed external load column which is read row-wise. The ordering is consistent with that of the boundary condition information shown in Figure III-H.12. An external load of 667.67 is applied at node point 2 and also a load of 400.0 is applied at node point 3 both in the positive Global X direction.

System level matrix output of final results is handled by the FORMAT standard matrix print capability. These results are shown in Figures III-H.14 thru III-H.16. Figure III-H.14 shows the reduced stiffness matrix for this problem. Only non-zero terms in the stiffness matrix are displayed. The stiffness matrix is presented row-wise and its ordering is consistent with that of the boundary conditions shown in Figure III-H.12. For this case, the ordering of the displacement vector is as follows:

$$\{q\}^T = [u_2, u_3, v_3, v_4, u_5, u_7, v_7, v_8, u_9, v_9]$$

The reduced externally applied load vector (LOADR) is presented in Figure III-H.15. The size of this vector is 10×1 . This is true because there are 10 degrees of freedom in the reduced stiffness matrix. There are 2 non-zero values of force shown in this vector. From the figure it is seen that the force values presented correspond to reduced degrees of freedom (REDDOF) 1 and 2. From the Boundary Condition Information (Figure III-H.12) it is seen that these correspond to forces in the global X direction at node points 2 and 3 having numerical values of 667.67 and 400.0 respectively. The vector of displacements (DISPR) is the next item of information presented in Figure III-H.15. This vector is a 10×1 since there are 10 degrees of freedom remaining after assembly and reduction. The ordering of the displacement vector is consistent with that of the boundary conditions shown in Figure III-H.12 which are as follows:

$$\{a\}^T = [u_2, u_3, v_3, v_4, u_5, u_7, v_7, v_8, u_9, v_9]$$

The displacements are referenced to the global axis of reference unless otherwise indicated. The Matrix DISPR is interpreted as follows:

MATRIX DISPR

REDDOF	NODE POINT	D.O.F.	DISP. VALUE
1	2	u	0.000521835
2	3	u	0.000189278
3	3	v	-0.0000131521
4	4	v	-0.000141067
5	5	u	0.000243609
6	7	u	0.000110739
7	7	v	-0.000121466
8	8	v	-0.0000862857
9	9	u	0.000187977
10	9	v	-0.0000796332

The final item of information shown in Figure III-H.15 is the stress matrix (MATRIX STRESS). The stress matrix is of the order 64×1 for the following reason. Eight stress resultants are evaluated at each corner point of the triangle and also at its centroid, giving a total of 32 stress resultants per element. Since two triangular thin shell elements were employed in this analysis, the size of the stress matrix is 64×1 .

The stress resultants for the triangular thin shell element are defined as follows.

$$N_x = \int_z \sigma_x \, dz \quad ; \text{ units } \frac{\text{force}}{\text{length}}$$

$$N_y = \int_z \sigma_y \, dz \quad ; \text{ units } \frac{\text{force}}{\text{length}}$$

$$N_{xy} = \int_z \tau_{xy} \, dz \quad ; \text{ units } \frac{\text{force} \times \text{length}}{\text{length}}$$

$$M_x = \int_z z \sigma_x \, dz \quad ; \text{ units } \frac{\text{force} \times \text{length}}{\text{length}}$$


$$M_y = \int_z z \sigma_y \, dz \quad ; \text{ units } \frac{\text{force} \times \text{length}}{\text{length}}$$



$$M_{xy} = \int_z z \tau_{xy} \, dz \quad ; \text{ units } \frac{\text{force} \times \text{length}}{\text{length}}$$

$$Q_x = \int_z z \frac{\partial \sigma_x}{\partial x} \, dz + \int_z z \frac{\partial \tau_{xy}}{\partial y} \, dz \quad ; \text{ units } \frac{\text{force}}{\text{length}}$$

$$Q_y = \int_z z \left(\frac{\partial \sigma_y}{\partial y} \right) \, dz + \int_z z \left(\frac{\partial \tau_{xy}}{\partial x} \right) \, dz \quad ; \text{ units } \frac{\text{force}}{\text{length}}$$

The following sketches show the proper manner in which to interpret the stress resultants.

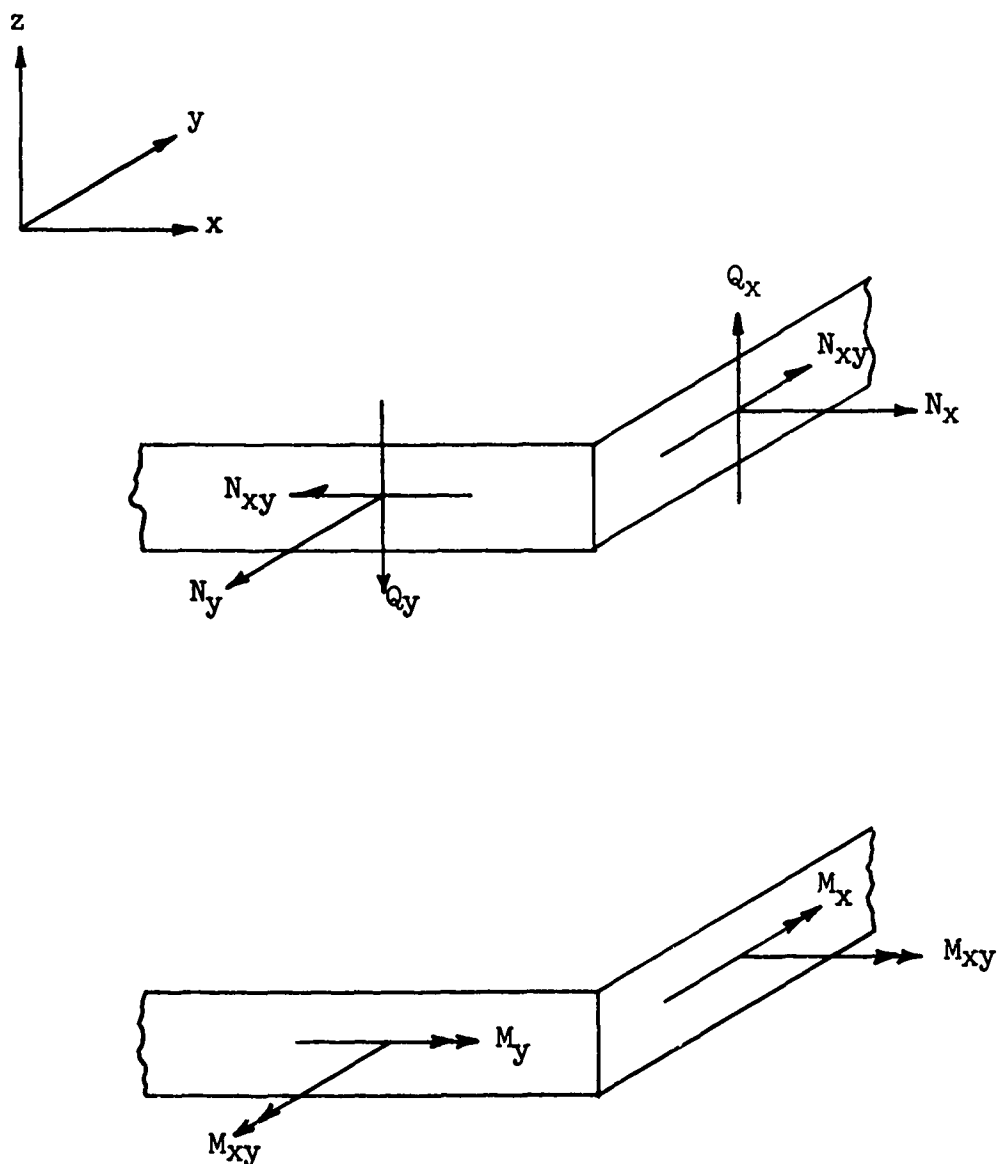

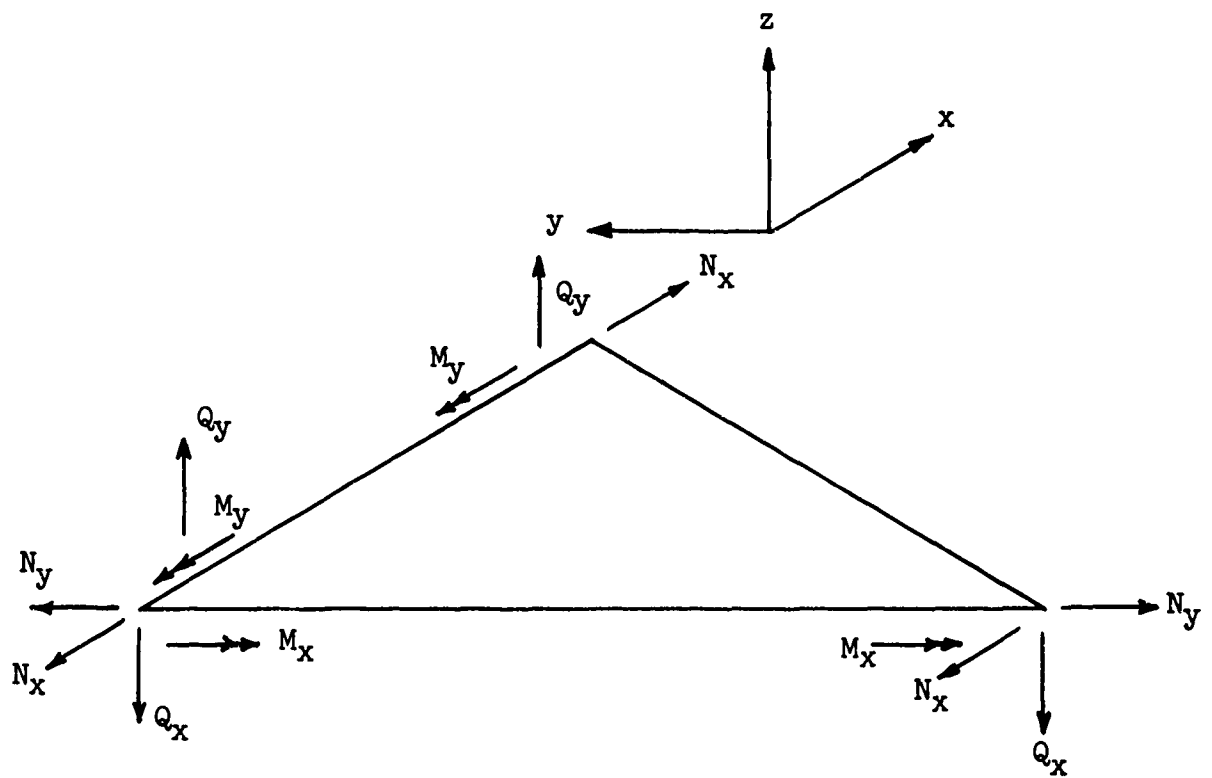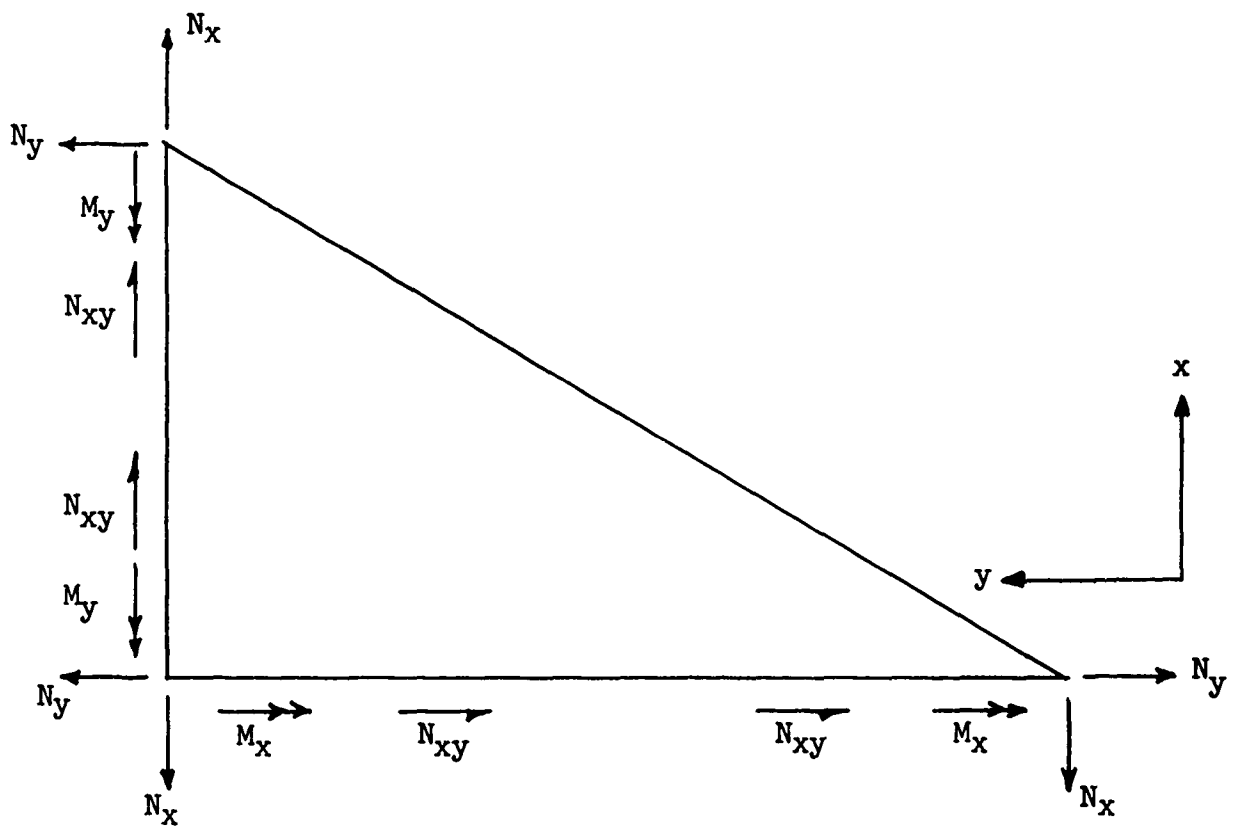

The stress vector is in general referenced to the element coordinate system. For the quadrilateral or triangular thin shell elements however, the User has the option of specifying material or stress axes in order to effectively define stress output direction. This is accomplished by utilizing locations 9 and 10 or 11 and 12 of the node point portion of the Element Control Section. In this particular problem the numbers '1' and '2' were entered in locations 9 and 10 of the node point portion of the Element Control Section. These two points define the x direction of the material properties axes (Positive x from nodepoint 1 to nodepoint 2). This axis of reference then becomes the reference axis for the stress output.

There is one exception to the usual rules of presenting the stress output for the triangular thin shell element.

For each triangular element, the centroidal values of the stress resultants for that element are the first to be printed. In the general case the node point stresses are printed and then the centroidal stresses.

The ordering of the stress matrix is as follows:

MATRIX STRESS

NRSEL	ELEMENT		NODE POINT
1	1	$N_x = 78.0125$	Centroid
2	1	$N_y = -53.2127$	Centroid
3	1	$N_{xy} = -4.70957$	Centroid
9	1	$N_x = 80.6407$	1
10	1	$N_y = -14.0719$	1
11	1	$N_{xy} = -0.0000012 = 0$	1
17	1	$N_x = 110.817$	2
18	1	$N_y = -0.02969$	2
19	1	$N_{xy} = -16.0477$	2
25	1	$N_x = 42.5797$	4
26	1	$N_y = -1.86218$	4
27	1	$N_{xy} = 1.91897$	4
33	2	$N_x = 55.3213$	Centroid
34	2	$N_y = 5.32127$	Centroid
35	2	$N_{xy} = -5.32127$	Centroid
41	2	$N_x = 98.3029$	2
42	2	$N_y = 27.0248$	2
43	2	$N_{xy} = -12.1330$	2
49	2	$N_x = 24.9175$	3
50	2	$N_y = 5.00922$	3
51	2	$N_{xy} = -1.96864$	3
57	2	$N_x = 42.7434$	4
58	2	$N_y = -16.0703$	4
59	2	$N_{xy} = -1.86219$	4

Figure III-H.16 displays the vector of Matrix Forces. These forces are defined with respect to the Global Coordinate System. The Matrix Force Vector is a 72×1 vector for the following reason. The triangular thin shell element is defined by six node points (3 corner points and 3 mid-side node points). Since there are six forces per node point (F_x , F_y , F_z , M_x , M_y , M_z) a total of 36 forces per element are defined. Since two elements were utilized in this particular problem, the size of the force vector is 72×1 . The ordering of the Matrix Forces is as follows: (See Figure III-H.1 for the element numbering sequence).

MATRIX FORCES

D.O.F.	ELEMENT NO.	FORCE	NODE POINT
1	1	$F_X = -215.042$	1
2	1	$F_Y = 37.5251$	1
7	1	$F_X = 295.512$	2
8	1	$F_Y = -42.7938$	2
13	1	$F_Y = 5.11725$	4
14	1	$F_Y = -4.96580$	4
19	1	$F_X = -0.0000048 = 0$	5
20	1	$F_Y = 85.4431$	9
25	1	$F_X = 657.175$	9
26	1	$F_Y = -75.2086$	9
31	1	$F_X = 742.763$	8
32	1	$F_Y = -0.000018 = 0$	8
37	2	$F_X = 371.158$	2
38	2	$F_Y = -80.1744$	2
43	2	$F_X = 400.000$	3
44	2	$F_Y = -0.0000005 = 0$	3
49	2	$F_X = -113.983$	4
50	2	$F_Y = 4.96583$	4
61	2	$F_X = -0.000008 = 0$	7
62	2	$F_Y = -0.000015 = 0$	7
67	2	$F_X = -657.175$	9
68	2	$F_Y = 75.2086$	9

Note that for this particular problem mid-side node #6 was suppressed.

The final item of information contained in Figure III-H.16 is the vector of reactions (MATRIX REACT). This vector is of the size 54×1 since there are nine node points associated with this particular problem and six associated degrees of freedom per node point. The reactions are read row-wise and are interpreted as follows: (Note that the reactions are referenced to the Global Coordinate System.)

MATRIX REACT

D.O.F.	REACTION	NODE POINT
1	$P_{RX} = 215.042$	1
2	$P_{RY} = 37.5251$	1
7	$P_{RX} = -0.000099 = 0$	2
8	$P_{RY} = -122.968$	2
13	$P_{RX} = -0.000065 = 0$	3
14	$P_{RY} = -0.0000005 = 0$	3
19	$P_{RX} = -108.865$	4
20	$P_{RY} = 0.000024 = 0$	4
25	$P_{RX} = -0.000005 = 0$	5
26	$P_{RY} = 85.4431$	5
37	$P_{RX} = -0.000008 = 0$	7
38	$P_{RY} = -0.000015 = 0$	7
43	$P_{RX} = -742.763$	8
44	$P_{RY} = -0.0000018 = 0$	8
49	$P_{RX} = 0.000084 = 0$	9
50	$P_{RY} = 0.0000076 = 0$	9

THIN SQUARE ISOTROPIC PLATE SUBJECTED TO A SELF
 EQUILIBRATING PARABOLIC MEMBRANE LOADING-TWO TRIANGULAR
 THIN SHELL ELEMENTS USED IN THE IDEALIZATION, MID-POINT NODE ON
 THE LOADED EDGE IS SUPPRESSED IN THIS ANALYSIS
 REFERENCE-TIMOSHENKO, S. AND GOODIER, J. N., THEORY OF ELASTICITY,
 SECOND EDITION, MCGRAW HILL NEW YORK 1951.

REVISIONS OF MATERIAL TAPE

ASTERISK (*) PRECEDING MATERIAL
 IDENTIFICATION INDICATES THAT INPUT
 ERROR RETURNS WILL NOT RESULT IN
 TERMINATION OF EXECUTION

REVISION 12
 MATERIAL IDENTIFICATION STEEL
 NUMBER OF MATERIAL PROPERTY POINTS . . . 1
 NUMBER OF PLASTIC PROPERTY POINTS . . . -0
 MASS DENSITY -0.

MATERIAL PROPERTIES

YOUNG'S MODULI

DIRECTIONS

TEMPERATURE XX 0.300000E 08 YY 0.300000E 08 ZZ 0.300000E 08
 0. 0.300000E 08

THERMAL EXPANSION COEFFICIENTS

DIRECTIONS

TEMPERATURE XX -0. YY -0. ZZ -0.
 0. -0.

POISSON'S RATIOS

DIRECTIONS

YZ 0.300000E 00 ZX 0.300000E 00
 0.300000E 00

RIGIDITY MODULI

DIRECTIONS

YZ 0.115385E 08 ZX 0.115385E 08
 0.115385E 08

FIGURE III-H.11 TITLE AND MATERIAL DATA OUTPUT, SQUARE PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

EXTERNAL LOAD CONDITIONS 1

LOAD NO. 1

NUMBER OF LOADED NODES 2
 2 0.66667E 03 0.
 3 0.40000E 03 0.

ELEMENT LOAD SCALAR = 0.
 0.
 0.

TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN

24 X 1

0.
 0.66667000E 03
 0.40000000E 03
 0.
 0.
 0.
 0.
 0.
 0.
 0.

0.
 0.
 0.
 0.
 0.
 0.
 0.
 0.
 0.
 0.

0.
 0.
 0.
 0.
 0.
 0.
 0.
 0.

0.
 0.
 0.
 0.
 0.
 0.
 0.
 0.

T-ZERO FOR STRUCTURE = -0.

FIGURE III-H.13 TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN OUTPUT, SQUARE PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

MATRIX LOAD PAGE 1

CUTOFF = 0.

REDOOF REDOOF

SIZE 10 BY 1

REDOOF

COND. 1 1 0.666670E 03 2 0.4C0000E 03

MATRIX DISPR PAGE 1

CUTOFF = 0.

REDOOF REDOOF

SIZE 10 BY 1

REDOOF

COND. 1 1 0.521835E-03 2 0.189278E-03 3 -0.131521E-04 4 -0.141067E-03 5 0.243609E-03

6 0.110739E-03 7 -0.121444E-03 8 -0.862857E-04 9 0.187977E-03 10 -0.796332E-04

MATRIX STRESS PAGE 1

CUTOFF = 0.

MRSEL MRSEL

SIZE 64 BY 1

MRSEL

COND. 1 1 0.780125E 02 2 -0.532127E 01 3 -0.470957E 01 9 0.806407E 02 10 -0.140719E 02

11 -0.115192E-05 17 0.110817E 03 18 -0.296926E-01 19 -0.160477E 02 25 0.425797E 02

26 -0.186218E 01 27 0.151897E 01 33 0.553213E 02 34 0.532127E 01 35 -0.532127E 01

41 0.983029E 02 42 C.270240E 02 43 -0.121330E 02 49 0.249175E 02 50 0.500922E 01

51 -0.196864E 01 57 C.427434E 02 58 -0.160703E 02 59 -0.186219E 01

FIGURE III-H.15 LOAD, DISPLACEMENT AND STRESS OUTPUT, SQUARE PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

MATRIX FORCES										PAGE	1
CUTOFF = 0.											
D.O.F		D.O.F		D.O.F		D.O.F		D.O.F			
1		2		7		8		13		0.511725E 01	
14		-0.496580E 01		-0.476837E-05		0.854431E 02		0.657175E 03		-0.752884E 02	
31		-0.742763E 03		-0.181198E-04		0.371158E 03		-0.801744E 02		0.400000E 03	
44		-0.476837E-06		-0.113983E 03		0.496583E 01		-0.762939E-05		-0.152588E-04	
67		-0.657175E 03		0.752086E 02							
COMD.											

MATRIX REACT										PAGE	1
CUTOFF = 0.											
D.O.F		D.O.F		D.O.F		D.O.F		D.O.F			
1		2		7		8		13		-0.648499E-04	
14		-0.476837E-06		-0.108865E 03		0.237226E-04		-0.476837E-05		0.854431E 02	
37		-0.762939E-05		-0.152588E-04		-0.742763E 03		-0.181198E-04		0.839233E-04	
50		0.762939E-05									
COMD.											
SEMO											
SISYS											
SREMOVE											
SISYS											
SSTOP											
SYSL02											

FIGURE III-H.16 FORCE AND REACTION OUTPUT, SQUARE PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

I. SQUARE PLATE - NORMAL PRESSURE LOADING -
(Triangular Thin Shell Idealization)

A simply supported isotropic square plate, under the action of normal pressure loading is shown in Figure III-I.1 along with its dimensions and pertinent material properties. The plate is idealized utilizing two triangular thin shell elements.

The preprinted input data forms associated with this example are shown in Figures III-I.2 through III-I.11.


In Figure III-I.5 (Gridpoint Coordinate Section) it is seen that only the grid points for the three corner points of each element are entered. The coordinates associated with mid-point nodes are calculated internally by the MAGIC System.

In Figure III-I.6 (Grid Point Pressure Section) the MODAL entry is used for the input pressure values.

This entry means that the normal pressures are acting at every grid point with a value of -1.0 psi. The sign of the pressure is minus since its direction is in the negative element Z_g direction.

In Figure III-I.7 (Boundary Condition Section) it is instructive to note the nature of the boundary conditions which apply to each grid point (See Figure III-I.1). Let us examine the Listed Input (Exceptions to the MODAL card) first.

- (1) Grid Point Number 1 (Center of plate) has an unknown displacement in the w direction, all others are zero due to symmetry.
- (2) Grid Point Number 2 has an unknown rotation, θ_y . The others are zero due to the fact that grid point 2 is a point of simple support.
- (3) Grid Point Number 3 has all degrees of freedom fixed. This is true because the simple supports meet at this point restricting rotation in the θ_x and θ_y directions.
- (4) Grid Point Numbers 5 and 8 are repeated and also have all degrees of freedom fixed. These are mid-side nodes and the only possible degrees of freedom allowed are u , v , and θ_n (θ normal). Since this is a pure bending problem u and v are equal to zero. Since Grid Points 5 and 8 lie along symmetric boundaries, θ_n equals zero.

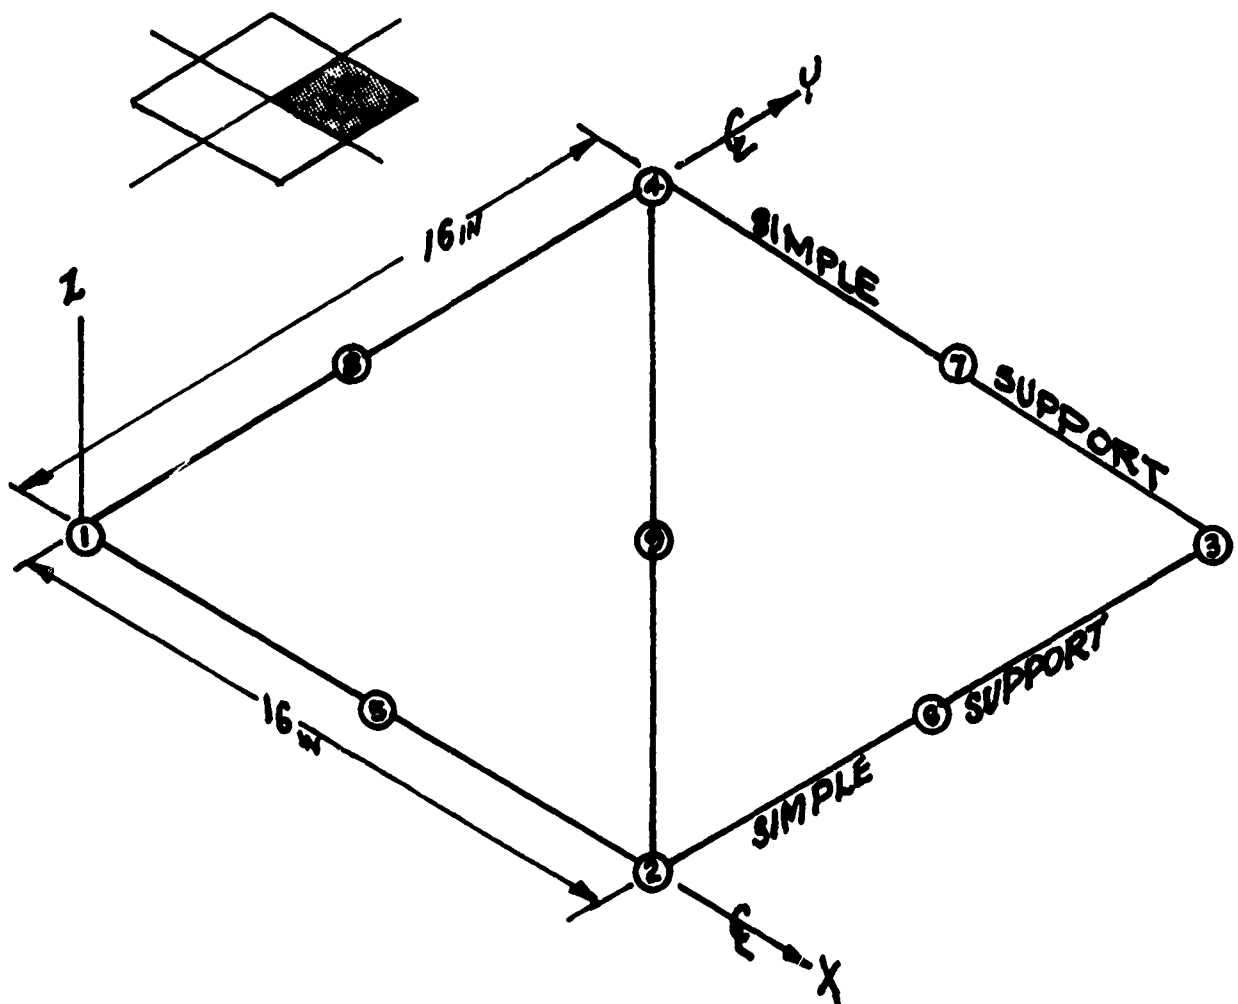

$t = 0.10 \text{ INCH}$
 $E = 30. \times 10^6 \text{ PSI}$

$P = 1.0 \text{ PSI}$
 $\mu = .30$

FIGURE III - T.1 - Idealized Simply Supported Plate With Normal Pressure Loading
(Triangular Thin Shell Idealization of One Quadrant)

The MODAL card is now examined for the remaining grid points. Since Grid Point Numbers 1, 2, 3, 5, and 8 were called out under Listed Input, the MODAL entry pertains to Grid Point Numbers 4, 6, 7, and 9.

- (1) Grid Point Number 4 has an unknown rotation, θ_x . The others are zero since grid point 4 is a point of simple support.
- (2) Grid points 6, 7, and 9 are mid-side nodes and the only possible degrees of freedom allowed are u , v , and θ_n (θ normal). Since this is a pure bending problem u and v are equal to zero. However, there is an unknown normal slope θ_n , associated with these grid points. The codeⁿ(0, 1, 2) associated with these normal slope values is always entered in the θ_x location for consistency.

In Figure III-I.8 (External Loads Section) the following information is evident.

- (1) One load condition is input
- (2) The External Applied Load Scalar equals 1.0
- (3) The MODAL option is employed and External Force and Moment values of 0.0 are entered in the appropriate locations. Since the Triangular Thin Shell Element is formulated with six degrees of Freedom per point, two external load cards per grid point are required.

The Element Applied Load Scalar was set equal to 1.0 because of the following:

Total Load = External Loads + EALS (Element Applied Loads)

Since the External Loads are equal to zero and the EALS = 1.0

Total Load = Element Applied Load

These are the correct loads since for this case the Element Applied Loads are equal to the normal pressure loads.

In Figure III-I.9 (Element Control Data Section) the following information is of importance.

- (1) The numbers '1' and '2' are entered in locations 11 and 12 of the node point portion of the Element Control Section for Element Number 1. These two points define the direction of the (X) stress axis for Element Number 1. With this definition, the stresses in the other directions retain their proper orientation with respect to this axis.
- (2) The numbers '4' and '3' are entered in locations 11 and 12 of the node point portion of the Element Control Section for Element Number 2. These two points define the direction of the (X) stress axis for Element Number 2.

It should be noted that the stress axis determination is element related and therefore if locations 11 and 12 are used for stress directions then each element must be considered separately. Node points related to each particular element must be used when determining stress directions utilizing locations 11 and 12.

In Figure III-I.10 (Element Input Section) only one item of information is entered in Location B of the MODAL section.

Location B - Flexural Thickness - (t_f) = 0.10

This MODAL entry signifies that this thickness applies to all elements used in this analysis.

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

REPORT (1)

1	2	3	4	5	6
T	I	T	L	E	

(/)

789 3

NUMBER OF TITLE CARDS

TITLE INFORMATION

[illegible]

FIGURE III-I.2 TITLE INFORMATION, SIMPLY SUPPORTED PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

7 8 9
No. of Requests
(1)

MATERIAL TAPE INPUT

[illegible]

MATERIAL PROPERTIES TABLE

TEMPERATURE									
1	4	5	6	7	8	9	0	1	2
0	0	0							

308

[illegible][illegible]

		COEF. OF THERMAL EXPANSION												
Direction		4	3	4	5	6	7	8	9	0	1	2		
α_x	Direction	8.50										5-6		G_{xy}
α_y														G_{yz}
α_z														G_{zx}

[illegible]

FIGURE III-I.3 MATERIAL TAPE INPUT, SIMPLY SUPPORTED PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

SYSTEM CONTROL INFORMATION

ENTER APPROPRIATE NUMBER, RIGHT
ADJUSTED, IN BOX OPPOSITE
APPLICABLE REQUESTS

	S	Y	S	T	E	M	(/)
	1	2	3	4	5	6	
1. Number of System Grid Points						9	
	1	2	3	4	5	6	
2. Number of Input Grid Points						4	
	7	8	9	10	11	12	
3. Number of Degrees of Freedom/Grid Point						6	
						13 14	
4. Number of Load Conditions						1	
						15 16	
5. Number of Initially Displaced Grid Points							
	17	18	19	20	21	22	
6. Number of Prescribed Displaced Grid Points							
	23	24	25	26	27	28	
7. Number of Grid Point Axes Transformation Systems							
						29 30	
8. Number of Elements						2	
	31	32	33	34	35	36	
9. Number of Requests and/or Revisions of Material Tape.						1	
						37 38	
10. Number of Input Boundary Condition Points						5	
	39	40	41	42	43	44	
11. T_0 For Structure (With Decimal Point)	0	.	0				(/)
	45	46	47	48	49	50 51 52	

FIGURE III-I.4 SYSTEM CONTROL INFORMATION, SIMPLY SUPPORTED PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

1	2	3	4	5	6
C	O	O	R	D	

(/)

GRIDPOINT COORDINATE

[illegible]

FIGURE III-I.5 GRIDPOINT COORDINATES. SIMPLY SUPPORTED PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

BOUNDARY CONDITIONS

INPUT CODE - 0 - No Displacement Allowed
1 - Unknown Displacement
2 - Known Displacement

1	2	3	4	5	6
B	O	U	N	D	

(//)

PRE-SET MODE

1	2	3	4	5	6
M	O	D	A	L	

TRANSLATIONS			ROTATIONS			GENERALIZED		
U	V	W	Θ_x	Θ_y	Θ_z	1	2	3
13	14	15	16	17	18	19	20	21
0	0	0	1	0	0			

(//)

LISTED INPUT

Grid Point Number					Repeat										
7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	
			1			0	0	1	0	0	0				(/)
			2			0	0	0	0	1	0				(/)
			3			0	0	0	0	0	0				(/)
			5X												(/)
			8X												(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)
															(/)

1	2	3	4	5	6
L	O	A	D	S	

(11)

[illegible]

(13)

Condition
Number

Scalar

FORCE VALUES

$$F_x$$
$$F_v$$
$$F_z$$
M₂

1	2	3	4	5	6
M	O	D	A	L	

[illegible]

1	3	4	5	6	7	8

Grid Pt.
Number

1		2		2		3		3		4					
7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2

3 4 5 6 7 8

143

k/v

113

11/1

4

1

1.

1.

711

b7c

11

11)

11

1

1

4.

11

b1, b7C

11

11)

11

1

100

11

1

1

313

MAGIC STRUCTURAL ANALYSIS SYSTEM INPUT DATA FORMAT

EXTERNAL LOADS

[illegible]

(S)

1
 2
 3
 4
 5
 6
 7
 8
 9
 10
 11
 12
 13
 14
 15
 16
 17
 18
 19
 20
 21
 22
 23
 24
 25
 26
 27
 28
 29
 30
 31
 32
 33
 34
 35
 36
 37
 38
 39
 40
 41
 42
 43
 44
 45
 46
 47
 48
 49
 50
 51
 52
 53
 54
 55
 56
 57
 58
 59
 60
 61
 62
 63
 64
 65
 66
 67
 68
 69
 70
 71
 72
 73
 74
 75
 76
 77
 78
 79
 80
 81
 82
 83
 84
 85
 86
 87
 88
 89
 90
 91
 92
 93
 94
 95
 96
 97
 98
 99
 100
 101
 102
 103
 104
 105
 106
 107
 108
 109
 110
 111
 112
 113
 114
 115
 116
 117
 118
 119
 120
 121
 122
 123
 124
 125
 126
 127
 128
 129
 130
 131
 132
 133
 134
 135
 136
 137
 138
 139
 140
 141
 142
 143
 144
 145
 146
 147
 148
 149
 150
 151
 152
 153
 154
 155
 156
 157
 158
 159
 160
 161
 162
 163
 164
 165
 166
 167
 168
 169
 170
 171
 172
 173
 174
 175
 176
 177
 178
 179
 180
 181
 182
 183
 184
 185
 186
 187
 188
 189
 190
 191
 192
 193
 194
 195
 196
 197
 198
 199
 200
 201
 202
 203
 204
 205
 206
 207
 208
 209
 210
 211
 212
 213
 214
 215
 216
 217
 218
 219
 220
 221
 222
 223
 224
 225
 226
 227
 228
 229
 230
 231
 232
 233
 234
 235
 236
 237
 238
 239
 240
 241
 242
 243
 244
 245
 246
 247
 248
 249
 250
 251
 252
 253
 254
 255
 256
 257
 258
 259
 260
 261
 262
 263
 264
 265
 266
 267
 268
 269
 270
 271
 272
 273
 274
 275
 276
 277
 278
 279
 280
 281
 282
 283
 284
 285
 286
 287
 288
 289
 290
 291
 292
 293
 294
 295
 296
 297
 298
 299
 300
 301
 302
 303
 304
 305
 306
 307
 308
 309
 310
 311
 312
 313
 314
 315
 316
 317
 318
 319
 320
 321
 322
 323
 324
 325
 326
 327
 328
 329
 330
 331
 332
 333
 334
 335
 336
 337
 338
 339
 340
 341
 342
 343
 344
 345
 346
 347
 348
 349
 350
 351
 352
 353
 354
 355
 356
 357
 358
 359
 360
 361
 362
 363
 364
 365
 366
 367
 368
 369
 370
 371
 372
 373
 374
 375
 376
 377
 378
 379
 380
 381
 382
 383
 384
 385
 386
 387
 388
 389
 390
 391
 392
 393
 394
 395
 396
 397
 398
 399
 400
 401
 402
 403
 404
 405
 406
 407
 408
 409
 410
 411
 412
 413
 414
 415
 416
 417
 418
 419
 420
 421
 422
 423
 424
 425
 426
 427
 428
 429
 430
 431
 432
 433
 434
 435
 436
 437
 438
 439
 440
 441
 442
 443
 444
 445
 446
 447
 448
 449
 450
 451
 452
 453
 454
 455
 456
 457
 458
 459
 460
 461
 462
 463
 464
 465
 466
 467
 468
 469
 470
 471
 472
 473
 474
 475
 476
 477
 478
 479
 480
 481
 482
 483
 484
 485
 486
 487
 488
 489
 490
 491
 492
 493
 494
 495
 496
 497
 498
 499
 500
 501
 502
 503
 504
 505
 506
 507
 508
 509
 510
 511
 512
 513
 514
 515
 516
 517
 518
 519
 520
 521
 522
 523
 524
 525

This Document Contains
Missing Page/s That Are
Unavailable In The
Original Document

OR ARE
Blank pgs.
that have
Been Removed

**BEST
AVAILABLE COPY**

EXTEIN
1 2 3 4 5 6 (/)

MODAL
1 2 3 4 5 6

MAGIC STRUCTURAL ANALYSIS SYSTEM
INPUT DATA FORMAT

ELEMENT INPUT

A						B						C						D						E						F					
1	2	3	4	5	6	1	2	3	4	5	6	1	2	3	4	5	6	1	2	3	4	5	6	1	2	3	4	5	6	1	2	3	4	5	6
7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2
0.0	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.10

Element Number	Repeat	A						B						C						D						E						F					
1	1	1	2	3	4	5	6	1	2	3	4	5	6	1	2	3	4	5	6	1	2	3	4	5	6	1	2	3	4	5	6	1	2	3	4	5	6
7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	1	2	3	4	5	6	1	2	3	4	5	6	7	8	9	0	1	2
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	

FIGURE III-I.10 ELEMENT INPUT, SIMPLY SUPPORTED PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

MAGIC STRUCTURAL ANALYSIS SYSTEM

INPUT DATA FORMAT

CHECK OR END CARD

C	H	E	C	K
1	2	3	4	5

 (/)

E	N	D
1	2	3

 (/)

FIGURE III-1.11 END CARD, SIMPLY SUPPORTED PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

The output supplied by the MAGIC System for the simply supported isotropic square plate subjected to a normal pressure load and idealized using two triangular thin shell elements is as follows:

Figures III.I.12 through III.I.14 display the output from the Structural Systems Monitor. These figures record the input data pertinent to the problem being solved.

The Gridpoint Data Information is shown in Figure III.I.13. Note that pressures of -1.0 psi are applied at each grid point. The finite element information is also shown in Figure III.I.13. Under the Section titled External Input, the second entry has a numerical value of 0.09999999. This value is equal to the flexural thickness of the plate being analyzed.

Figure III.I.14 displays the Transformed External Assembled Load column. Note that these loads are all equal to zero since input pressures are element applied loads.

System level output of final results is handled by the FORMAT standard matrix print capability. These results are shown in Figures III.I.15 through III.I.17.

Figure III.I.15 shows the assembled and reduced stiffness matrix. The stiffness matrix is read row-wise and only non-zero terms are displayed. The ordering of the stiffness matrix is consistent with that of the boundary conditions shown in Figure III.I.13. For this case the displacement vector is ordered as follows:

$$\{q\}^T = [w_1, \theta_{y2}, \theta_{x4}, \theta_{n6}, \theta_{n7}, \theta_{n9}]$$

Where θ_{ni} = normal slope at node point i

Figure III.I.16 displays the vector of Reduced Element Applied Loads. (MATRIX FTELAR). The size of this vector is a 6 x 1 since there are six degrees of freedom remaining in the assembled and reduced stiffness matrix. The vector appears as follows and is read row-wise:

MATRIX FTELAR

REDDOF	NODE POINT	ELEMENT APPLIED LOAD VALUE
1	1	$F_Z = -46.9333$
2	2	$M_Y = -216.178$
3	4	$M_X = 216.178$
4	6	$M_Y = -45.5111$
5	7	$M_X = -45.5111$
6	9	$M_N = 0.0000119 = 0$

The vector of displacements (DISPR) is the next item of information presented in Figure III.I.16. This vector is also a 6 x 1 since there are six degrees of freedom remaining after assembly and reduction. The ordering of the displacement vector is consistent with that of the boundary conditions shown in Figure III.I.13.

$$\{q\}^T = [w_1, \theta_{y2}, \theta_{x4}, \theta_{n6}, \theta_{n7}, \theta_{n9}]$$

The displacements are referenced to the global axis of reference unless otherwise indicated. The MATRIX DISPR is interpreted as follows:

MATRIX DISPR

REDDOF	NODE POINT	D.O.F.	DISP. VALUE
1	1	w	-1.35273
2	2	θ_y	-0.180968
3	4	θ_x	0.180968
4	6	θ_n	-0.105614
5	7	θ_n	-0.105614
6	9	θ_n	-0.100746

The final item of information presented in Figure III.I. 16 is the Stress Matrix (MATRIX STRESS). The stress matrix is a 64×1 for the following reason. Eight stress resultants are evaluated at each corner point of the triangle and also at its centroid, giving a total of 32 stress resultants per element. Since two triangular thin shell elements were employed in this analysis, the size of the stress matrix is 64×1 .

The stress resultants for the triangular thin shell were explicitly defined in Section III.H (Square Plate - Parabolic Membrane Loading). Sketches were also provided to facilitate proper interpretation of the stress resultants.

The stress vector is in general referenced to the element coordinate system. For the quadrilateral or triangular thin shell elements however, the User has the option of specifying material or stress axes in order to effectively define stress output direction. This is accomplished by utilizing locations 9 and 10 or 11 and 12 of the Node Point portion of the Element Control Section. In this particular problem the numbers '1' and '2' were entered in locations 11 and 12 of the node point portion of the Element Control Section for Element Number 1 and for Element Number 2 the numbers '4' and '3' were entered in locations 11 and 12. These two points define the x direction of the stress axis (Positive x from node point 1 to node point 2 for element No. 1 and positive x from node point 4 to node point 3 for element No. 2). These axes of reference then become the reference stress axes for elements 1 and 2 respectively.

It is to be remembered for the triangular thin shell element that for each element, the centroidal value of the stress resultants for that element are the first to be printed. (In the general case the node point stresses are printed and then the centroidal stresses.)

The ordering of the stress matrix is as follows:

MATRIX STRESS

NRSEL	ELEMENTS	STRESS RESULTANT	NODE POINT
4	1	$M_x = -39.4002$	Centroid
5	1	$M_y = -36.0867$	Centroid
6	1	$M_{xy} = -0.0000038 = 0$	Centroid
7	1	$Q_x = -6.44949$	Centroid
8	1	$Q_y = -0.0000025 = 0$	Centroid
12	1	$M_x = -32.4414$	1
13	1	$M_y = -32.4414$	1
14	1	$M_{xy} = 0.0000036 = 0$	1
15	1	$Q_x = -6.44949$	1
16	1	$Q_y = -0.0000025 = 0$	1
20	1	$M_x = -45.0097$	2
21	1	$M_y = -45.0097$	2
22	1	$M_{xy} = 1.79741$	2
23	1	$Q_x = -6.44949$	2
24	1	$Q_y = -0.00000 = 0$	2
28	1	$M_x = -11.9934$	4
29	1	$M_y = -31.8742$	4
30	1	$M_{xy} = -9.25269$	4
31	1	$Q_x = -6.44949$	4
32	1	$Q_y = -0.0000025 = 0$	4

MATRIX STRESS (CONTD)

NRSEL	ELEMENTS	STRESS RESULTANT	NODE POINT
36	2	$M_x = -24.9945$	Centroid
37	2	$M_y = 6.98283$	Centroid
38	2	$M_{xy} = 11.9915$	Centroid
39	2	$Q_x = 0.817928$	Centroid
40	2	$Q_y = 1.66367$	Centroid
(Etc)	2	(See Figure III-I.16)	2

Figure III.I.17 presents the vector of element forces (MATRIX FORCES). These forces are defined with respect to the Global Coordinate System. The Matrix Force Vector is a 72 x 1 vector for the following reason. The triangular thin shell element is defined by six node points (3 corner points and 3 mid-side node points). Since there are six forces per node point (F_x , F_y , F_z , M_x , M_y , M_z) a total of 36 forces per element are defined. Note that the mid-side nodes have allowable degrees of freedom equal to u , v , and normal slope (θ_n). Therefore in a flexure problem, the moment at any mid-side node is associated with the normal slope. The ordering of the Matrix Forces is as follows (see Figure III.I.1 for the element numbering sequence).

MATRIX FORCES

D.O.F.	ELEMENT NO.	FORCE	NODE POINT
3	1	$F_Z = 0.000018 = 0$	1
4	1	$M_X = -107.312$	1
5	1	$M_Y = 107.312$	1
9	1	$F_Z = 64.0000$	2
10	1	$M_X = 267.905$	2
11	1	$M_Y = 110.276$	2
15	1	$F_Z = 64.0000$	4
16		$M_X = -110.276$	4
17	1	$M_Y = -267.905$	4
22	1	$M_N = -484.202$	5
28	1	$M_N = -130.888$	9
34	1	$M_N = 484.202$	8
39	2	$F_Z = 40.1146$	2
40	2	$M_X = 114.680$	2
41	2	$M_Y = -110.275$	2
45	2	$F_Z = 47.7707$	3
46	2	$M_X = -173.237$	3
(Etc)	(Etc)	(Etc)	(Etc)

The final item of information contained in Figure III.I.17 is the vector of reactions (MATRIX REACT). This vector is a 54×1 since there are nine node points associated with this problem and six associated degrees of freedom per node point. The reactions are read row-wise and are interpreted as follows: (Note that the reactions are referenced to the Global Coordinate System.)

MATRIX REACT

D.O.F.	REACTION	NODE POINT
3	$P_{RZ} = 0.000018 = 0$	1
4	$M_{RX} = -107.312$	1
5	$M_{RY} = 107.312$	1
9	$P_{RZ} = 104.115$	2
10	$M_{RX} = 382.585$	2
11	$M_{RY} = 0.000075 = 0$	2
15	$P_{RZ} = 47.7707$	3
16	$M_{RX} = -173.237$	3
17	$M_{RY} = 173.237$	3
21	$P_{RZ} = 104.115$	4
22	$M_{RX} = -0.000031 = 0$	4
23	$M_{RY} = -382.585$	4
28	$M_{RN} = -484.202$	5
34	$M_{RN} = -0.0000024 = 0$	6
40	$M_{RN} = -0.00061 = 0$	7
46	$M_{RN} = 484.202$	8
52	$M_{RN} = 0.000019 = 0$	9

SIMPLY SUPPORTED ISOTROPIC SQUARE PLATE SUBJECTED TO A
UNIFORM NORMAL PRESSURE LOAD OF 1 PSI-- TWO TRIANGULAR
THIN SHELL ELEMENTS USED IN THE IDEALIZATION

REVISIONS OF MATERIAL TAPE

ASTERISK (*) PRECEDING MATERIAL
IDENTIFICATION INDICATES THAT INPUT
ERROR RETURNS WILL NOT RESULT IN
TERMINATION OF EXECUTION

REVISION NUMBER 12 INPUT CODE I
MATERIAL IDENTIFICATION STEEL
NUMBER OF MATERIAL PROPERTY POINTS . . . 1
NUMBER OF PLASTIC PROPERTY POINTS . . . -0
MASS DENSITY -0.

MATERIAL PROPERTIES

YOUNG'S MODULI

DIRECTIONS

TEMPERATURE XX 0.300000E 08 YY 0.300000E 08 ZZ 0.300000E 08
0. 0.300000E 08

THERMAL EXPANSION COEFFICIENTS

DIRECTIONS

TEMPERATURE XX -0. YY -0. ZZ -0.
0. -0.

POISSON'S RATIOS

DIRECTIONS

XY 0.300000E 00 YZ 0.300000E 00 ZX 0.300000E 00

RIGIDITY MODULI

DIRECTIONS

XY 0.115385E 08 YZ 0.115385E 08 ZX 0.115385E 08

FIGURE III-I.12 TITLE AND MATERIAL DATA OUTPUT, SIMPLY SUPPORTED PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

NO. DIRECTIONS - 3 MC. DEGREES OF FREEDOM - 3

[illegible]

SECURITY CONDITION INFORMATION

DECADES OF FREEDOM

[illegible]

TOTAL NO. ELEMENTS • 2

ITEM TYPE	MAT. NO.	CODE	TEMP.	PHANT AG.	-----GRID POINTS-----	EXTRA GRID PTS	-----SELECTION PROPERTIES-----
1	20	12	0 - 0.	2	6	0	1 2
MATERIAL NUMBER. 12							
MATERIAL IDENTIFICATION. STEEL							
ANALYSIS CAPABILITY. ISOTROPIC							
INPUT POINT CODE 1							

ELEMENTARY PRINT CODE -1

INTERPOLATED MATERIAL PROPERTIES

TEMPERATURE - C.

17000 S. 2nd Ave.
Suite 200
Tucson, AZ 85710

WILSON'S

1 MOON A 1101910
S1W1171 44107 MOISW473 2W113M

[illegible]

RELATED PLASTIC PROPERTIES

Figure 1

DATA INPUT

none

• • • • •

STRESS-LESS INVESTMENT

NOTE

SYSTEM INPUT

११

ITEM TYPE MAT.

2 20

1

FIGURE 1

FIGURE III-1.13 GRIDPOINT DATA, BOUNDARY CONDITION AND FINITE ELEMENT DESCRIPTION OUTPUT, SIMPLY SUPPORTED PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

LOAD NO. 1		NUMBER OF LOADED MODES	ELEMENT LOAD SCALAR = 0.1000000E 01
1	0.	0.	0.
2	0.	0.	0.
3	0.	0.	0.
4	0.	0.	0.
5	0.	0.	0.
6	0.	0.	0.
7	0.	0.	0.
8	0.	0.	0.
9	0.	0.	0.

ELEMENT LOAD SCALAR = 0.1000000E 01

TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN

54 X 1

T-ZERO FOR STRUCTURE = 0.

FIGURE III-I.14 TRANSFORMED EXTERNAL ASSEMBLED LOAD COLUMN OUTPUT, SIMPLY SUPPORTED PLATE
(TRIANGULAR THIN SHELL IDEALIZATION)

MATRIX STIFF

CUTOFF = 0.

	FORCE		FORCE		FORCE		FORCE		FORCE		FORCE		SIZE	BY	6	FORCE
	1	2	3	4	5	6	7	8	9	10	11	12				
DISP.	1	0.665350E 03	2	-0.123054E 04	3	0.123054E 04	4	6	-0.404708E 04							
DISP.	2	1	-0.123054E 04	2	0.158730E 05	3	-0.106074E 05	4	5	-0.120574E 05	5	-0.747863E 04				
	6	-0.841794E 04														
DISP.	3	1	0.123054E 04	2	-0.106074E 05	3	0.158730E 05	4	5	0.747863E 04	5	0.120574E 05				
	6	0.841793E 04														
DISP.	4	2	-0.120574E 05	3	0.747863E 04	4	0.244200E 05	5	6	-0.122100E 04	6	0.112239E 05				
DISP.	5	2	-0.747863E 04	3	0.120574E 05	4	-0.122100E 04	5	6	0.244200E 05	6	0.112239E 05				
DISP.	6	1	-0.404708E 04	2	-0.841794E 04	3	0.841793E 04	4	5	0.112239E 05	5	0.112239E 05				
	6	0.610501E 05														

FIGURE III-I-15 REDUCED STIFFNESS MATRIX OUTPUT, SIMPLY SUPPORTED PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

MATRIX PTELAR

CUTOFF = 0.

REDOOF

COND. 1 1 -0.449333E 02 2 -0.216170E 03 3 0.216170E 03 4 -0.495111E 02 5 -0.495111E 02

SIZE 6 BY 1

REDOOF

PAGE 1

MATRIX DISPR

CUTOFF = 0.

REDOOF

COND. 1 1 -0.132273E 01 2 -0.100948E 00 3 0.100948E 00 4 -0.105614E 00 5 -0.105614E 00

SIZE 6 BY 1

REDOOF

PAGE 1

MATRIX STRESS

CUTOFF = C.

REDOOF

COND. 1 1 -0.394002E 02 2 -0.324414E 02 3 -0.324414E 02 4 -0.324414E 02 5 -0.324414E 02 6 -0.324414E 02 7 -0.324414E 02 8 -0.324414E 02 9 -0.324414E 02 10 -0.324414E 02 11 -0.324414E 02 12 -0.324414E 02 13 -0.324414E 02 14 -0.324414E 02 15 -0.324414E 02 16 -0.324414E 02 17 -0.324414E 02 18 -0.324414E 02 19 -0.324414E 02 20 -0.324414E 02 21 -0.324414E 02 22 -0.324414E 02 23 -0.324414E 02 24 -0.324414E 02 25 -0.324414E 02 26 -0.324414E 02 27 -0.324414E 02 28 -0.324414E 02 29 -0.324414E 02 30 -0.324414E 02 31 -0.324414E 02 32 -0.324414E 02 33 -0.324414E 02 34 -0.324414E 02 35 -0.324414E 02 36 -0.324414E 02 37 -0.324414E 02 38 -0.324414E 02 39 -0.324414E 02 40 -0.324414E 02 41 -0.324414E 02 42 -0.324414E 02 43 -0.324414E 02 44 -0.324414E 02 45 -0.324414E 02 46 -0.324414E 02 47 -0.324414E 02 48 -0.324414E 02 49 -0.324414E 02 50 -0.324414E 02 51 -0.324414E 02 52 -0.324414E 02 53 -0.324414E 02 54 -0.324414E 02 55 -0.324414E 02 56 -0.324414E 02 57 -0.324414E 02 58 -0.324414E 02 59 -0.324414E 02 60 -0.324414E 02

SIZE 64 BY 1

REDOOF

PAGE 1

FIGURE III-I.16 LOAD, DISPLACEMENT AND STRESS OUTPUT, SIMPLY SUPPORTED PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

```

PAGE 1
MATRIX FORCES
CUTOFF = 0.
D.O.F 1 3 0.181190E-04 4 -0.107312E 03 5 -0.107312E 03 9 0.107312E 03 10 0.267905E 03
11 0.110276E 03 15 0.640000E 02 16 -0.110276E 03 17 -0.267905E 03 22 -0.484202E 03
28 -0.130880E 03 34 0.484202E 03 39 0.401144E 02 40 0.114680E 03 41 0.110275E 03
45 0.477707E 02 46 -0.173237E 03 47 -0.173237E 03 51 0.401147E 02 52 0.110275E 03
53 -0.114680E 03 58 -0.238419E-05 64 -0.610352E-04 70 0.130880E 03

```

```

PAGE 1
MATRIX REACT
CUTOFF = 0.
D.O.F 1 3 0.181190E-04 4 -0.107312E 03 5 -0.107312E 03 9 0.104115E 03 10 0.382585E 03
11 0.753403E-04 15 0.477707E 02 16 -0.173237E 03 17 0.173237E 03 21 0.104115E 03
22 -0.305176E-04 23 -0.382585E 03 28 -0.484202E 03 34 -0.238419E-05 40 -0.610352E-04
46 0.484202E 03 52 0.190735E-04

```

```

END
HRES01 FIRST CARD IS NOT A -S- CONTROL CARD
SEND

```

```

SIBSYS
SREMOVE
SIBSYS
SSTOP
SYSLB2

```

FIGURE III-I.17 FORCE AND REACTION OUTPUT, SIMPLY SUPPORTED PLATE (TRIANGULAR THIN SHELL IDEALIZATION)

SECTION IV

REFERENCES

1. Mallett, R. H., and Jordan, S., "MAGIC: An Automated General Purpose System for Structural Analysis; Volume I. Engineer's Manual", AFFDL-TR-68- , Volume I, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, March 1968.
2. DeSantis, D., "MAGIC: An Automated General Purpose System For Structural Analysis; Volume III. Programmer's Manual," AFFDL-TR-68- , Volume III, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, March 1968.
3. Pickard, J., "FORMAT II - Second Version of Fortran Matrix Abstraction Technique; Volume I. Engineering User Report." AFFDL-TR-66-207, Volume I, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, December 1966.
4. Jordan, S., "Formulation and Evaluation of a Frame Discrete Element," BAC Technical Report No. 9500-941010, June 1967.
5. Mallett, R. H., "Formulation and Evaluation of a Quadrilateral Shear Panel Discrete Element," BAC Technical Report No. 9500-941012, June 1967.
6. Helle, E., "Formulation and Evaluation of a Triangular Cross-Section Ring Discrete Element," BAC Technical Report No. 9500-941003, June 1966.
7. Mallett, R. H., and Helle, E., "Formulation and Evaluation of a Toroidal Ring Discrete Element," BAC Technical Report No. 9500-941001, May 1966.
8. Mallett, R. H., "Formulation and Evaluation of a Quadrilateral Thin Shell Discrete Element," BAC Technical Report No. 9500-941005, April 1966.
9. Helle, E. and Mallett, R. H., "Formulation and Evaluation of a Triangular Thin Shell Discrete Element", BAC Technical Report No. 9500-941002, May 1966.

APPENDIX III

TABLE OF ERROR MESSAGES

AN ERROR HAS OCCURRED IN THE USER04 MODULE. FORMAT WILL ATTEMPT TO CONTINUE.

Subroutine: USER04

Explanation: Self explanatory

ASSEMBLY TRANSFORMATION MATRIX SIZE XXXXXX EXCEEDS LIMIT XXXXXX OF FORMAT SYSTEM.

Subroutine: US04A

Explanation: Self explanatory

AVAILABLE SCRATCH DATA SETS XXXX IS LESS THAN THE REQUIRED 4.

Subroutine: US04A

Explanation: The USER04 module requires at least four scratch data sets. The addition of more data sets is required by the program.

DUE TO ABOVE ERROR CONDITION CHECK CARD WILL BE INSERTED. EXECUTION WILL BE SUPPRESSED.

Subroutine: PHASE2

Explanation: Self explanatory

DUE TO ABOVE ERROR MESSAGE THIS SECTION WILL BE OMITTED AND CHECK CARD INSERTED.

Subroutine: PHASE1

Explanation: Self explanatory

IE TO PREVIOUSLY ENCOUNTERED ERROR CONDITION THIS SECTION IS BEING SKIPPED. PROGRAM WILL FLUSH DATA DECK UNTIL NEXT RECOGNIZABLE INPUT SECTION IS ENCOUNTERED.

Subroutine: PHASE1

Explanation: Self explanatory

! TO THE OMISSION OF THIS SECTION THE FOLLOWING SECTIONS MAY BE IGNORED - XXXXXX XXXXXX XXXXXX ...

Subroutine: PHASE2

Explanation: The final processing of certain sections requires data from other sections which by omission or other input error are not present.

ELEMENT CONTROL ERROR IN SUBROUTINE ELEM

ELEMENT NUMBER XXXXX CALLS PLUG NUMBER XXX. PLUG NUMBER SHOULD BE GREATER THAN ZERO. EXECUTION TERMINATED.

Subroutine: ELEM

Explanation: All element type code numbers are greater than zero. Proper element type cannot be selected.

ELEMENT CONTROL ERROR IN SUBROUTINE ELEM

ELEMENT NUMBER XXXXX HAS MATERIAL NUMBER XXXXX. MATERIAL IDENTIFICATION MUST BE DIFFERENT FROM ZERO. EXECUTION TERMINATED.

Subroutine: ELEM

Explanation: Self explanatory

ELEMENT CONTROL ERROR IN SUBROUTINE ELEM

ELEMENT NUMBER XXXXX HAS NUMBER OF INPUT POINTS.= XX. NUMBER OF INPUT POINTS MUST BE POSITIVE. EXECUTION TERMINATED.

Subroutine: ELEM

Explanation: Self explanatory

ELEMENT CONTROL ERROR IN SUBROUTINE ELEM

ELEMENT NUMBER XXXXX HAS NUMBER OF GRID POINTS = XXX. NUMBER OF GRID POINTS MUST BE GREATER THAN ZERO AND NO GREATER THAN EIGHT. EXECUTION TERMINATED.

Subroutine: ELEM

Explanation: Self explanatory

ELEMENT INPUT ERROR NO. X PLUG NO. XX ELEMENT NO. XXXX

Subroutine: ELPLUG

Explanation: Error number 1 - incorrect plug number (element type code)
Error number 2 - incorrect number of element defining points
Error number 3 - incorrect value for extra element input indicator
Error number 4 - incorrect matrix orders for element (number of degrees of freedom per point incorrect)

ELEMENT GENERATION CORE STORAGE REQUIRED XXXXXX EXCEEDS THAT AVAILABLE XXXXXX TO DISPLACEMENT METHOD MATRIX GENERATOR.

Subroutine: US04A

Explanation: Blank common work area is not large enough for generation of element matrices.

ELEMENT SORT ROUTINE CORE STORAGE REQUIRED XXXXXX EXCEEDS
THAT AVAILABLE XXXXXX TO DISPLACEMENT METHOD MATRIX
GENERATOR.

Subroutine: US04B

Explanation: Blank common work area is not large
enough for output of generated
matrices.

ERROR MESSAGE FROM SUBROUTINE MAT
ATTEMPT TO DELETE MATERIAL NUMBER XXXXXX USING LOCK CODE XX.
INCORRECT LOCK CODE, REQUEST IGNORED.

Subroutine: FMAT

Explanation: Self explanatory

ERROR MESSAGE FROM SUBROUTINE MAT
ATTEMPT TO DELETE MATERIAL THAT WAS NOT ON MATERIAL TAPE.
MATERIAL NUMBER XXXXXX. MATERIAL IDENTIFICATION IS
XXXXXXXXXXXXXXXXXXXXXXXXXXXX. INPUT CODE IS XXX.
REQUEST IGNORED.

Subroutine: FMAT

Explanation: Self explanatory

ERROR MESSAGE FROM SUBROUTINE MAT
ATTEMPT TO INPUT PLASTIC DATA ONLY FOR MATERIAL WHICH WAS
NOT ON TAPE. MATERIAL NUMBER XXXXXX. MATERIAL IDENTIFICA-
TION IS XXXXXXXXXXXXXXXXXXXXXXXX. INPUT CODE IS XXX.
REQUEST IGNORED.

Subroutine: FMAT

Explanation: Usage of an input code of "P" requires
that the material to be revised already
exists in the material library.

ERROR MESSAGE FROM SUBROUTINE MAT
ATTEMPT TO REVISE MATERIAL NUMBER XXXXXX USING LOCK CODE XX.
INPUT LOCK CODE DOES NOT MATCH TAPE LOCK CODE FOR THIS
MATERIAL. REVISIONS OR DELETIONS NOT ALLOWED WITHOUT
PROPER LOCK CODE. EXECUTION TERMINATED.

Subroutine: FMAT

Explanation: Self explanatory

ERROR MESSAGE FROM SUBROUTINE MAT
NUMBER OF REQUESTS RECEIVED IS ZERO.

Subroutine: FMAT

Explanation: Number of requests must not be zero.
Value of zero indicates improper
operation of program.

ERROR MESSAGE FROM SUBROUTINE MAT

REQUEST FOR PRINT OF MATERIAL THAT WAS NOT ON TAPE.
MATERIAL NUMBER XXXXXX. MATERIAL IDENTIFICATION IS
XXXXXXXXXXXXXXXXXXXXXXXXXXXX. INPUT CODE IS XXX.
REQUEST IGNORED.

Subroutine: FMAT

Explanation: Self explanatory

ERROR MESSAGE FROM SUBROUTINE MAT

UNRECOGNIZABLE DATA INPUT CODE. LEGAL CODES ARE PI, PO,
I, O, P, OUT, ALL, SEE, SUM. MATERIAL NUMBER XXXXXX.
MATERIAL IDENTIFICATION IS XXXXXXXXXXXXXXXXXXXXXXXX.
INPUT CODE IS XXX. EXECUTION TERMINATED.

Subroutine: FMAT

Explanation: Self explanatory

ERROR MESSAGE FROM SUBROUTINE MAT

ADDITIONS REQUESTED EXCEED CAPACITY OF MATERIAL TAPE.
MAXIMUM NUMBER OF MATERIALS CANNOT EXCEED XXX.

Subroutine: FMAT

Explanation: Self explanatory

FOR I = XX AND N = XX INTEGRAL DOES NOT CONVERGE

Subroutine: PLUG5

Explanation: No convergence has been obtained for
the given integral calculated by the
Romberg technique in the Toroidal
Ring Element.

GRID POINT LOADS MATRIX STORAGE REQUIRED XXXXXX EXCEEDS
THAT AVAILABLE XXXXXX TO DISPLACEMENT METHOD MATRIX
GENERATOR.

Subroutine: US04A

Explanation: Blank common work area is not large
enough for generation of grid point
loads matrix.

GRID POINT LOAD MATRIX SIZE XXXXXX EXCEEDS LIMIT XXXXXX
OF FORMAT SYSTEM.

Subroutine: US04A

Explanation: Self explanatory

ILLEGAL MODAL CARD ENCOUNTERED. CARD WILL BE IGNORED.

Subroutine: PHASE1

Explanation: A modal card has been found while
reading an input section for which
no modal card has been defined.

INPUT ERROR IN SUBROUTINE ELEM, AFTER INTERPOLATION
POISSON VALUE EQUALS \pm .XXXXXXXXXE \pm XX IN MATERIAL
NUMBER XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX. VALUE SHOULD
BE GREATER THAN -1.0 AND LESS THAN 1.0. EXECUTION
TERMINATED.

Subroutine: ELEM
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE ELEM, AFTER INTERPOLATION
RIGIDITY VALUE EQUALS \pm .XXXXXXXXXE \pm XX IN MATERIAL
NUMBER XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX. VALUE SHOULD
BE GREATER THAN 1.0. EXECUTION TERMINATED.

Subroutine: ELEM
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE ELEM, AFTER INTERPOLATION
THERMAL COEFFICIENT VALUE EQUALS \pm .XXXXXXXXXE \pm XX IN
MATERIAL NUMBER XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX.
VALUE SHOULD BE GREATER THAN -1.0 AND LESS THAN 1.0.
EXECUTION TERMINATED.

Subroutine: ELEM
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE ELEM, AFTER INTERPOLATION
VALUE OF YOUNG'S MODULUS EQUALS \pm .XXXXXXXXX \pm XX IN
MATERIAL NUMBER XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX.
VALUE SHOULD BE GREATER THAN 1.0. EXECUTION TERMINATED.

Subroutine: ELEM
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE ELEM
ELEMENT NODE POINT IS NEGATIVE OR ZERO IN ELEMENT
NUMBER XXXXX.

Subroutine: ELEM
Explanation: No element defining point number may
be negative and only mid-points may
be zero.

INPUT ERROR IN SUBROUTINE ELEM
ELEMENT NUMBER XXXXXX IS DEFINED BY NODE POINTS FOR
WHICH NO COORDINATES HAVE BEEN INPUT. CALCULATION OF
MATERIAL TEMPERATURE IMPOSSIBLE. EXECUTION TERMINATED.

Subroutine: ELEM
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE ELEM
MASS DENSITY VALUE EQUALS \pm .XXXXXXXXXXE \pm XX IN MATERIAL
NUMBER XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX. VALUE SHOULD
BE GREATER THAN ZERO. EXECUTION TERMINATED.

Subroutine: ELEM
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE ELEM
VALUE OF IP = XXX, VALUE OF IPRE = XXX FOR ELEMENT
NUMBER ONE. REQUEST TO REPEAT DATA FROM ELEMENT
PREVIOUS TO FIRST ELEMENT IS ILLOGICAL. EXECUTION
TERMINATED.

Subroutine: ELEM
Explanation: IP and IPRE cannot be negative
for first element.

INPUT ERROR IN SUBROUTINE MAT
MASS DENSITY VALUE EQUALS \pm .XXXXXXXXXXE \pm XX IN MATERIAL
NUMBER XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX. VALUE SHOULD
BE NON-NEGATIVE. EXECUTION TERMINATED.

Subroutine: FMAT
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE MAT
MATERIAL NUMBER XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX.
NUMBER OF MATERIAL TEMPERATURE POINTS IS XXX. NUMBER
OF PLASTIC TEMPERATURE POINTS IS XXX. NUMBER OF
TEMPERATURE POINTS IN EITHER CASE CANNOT EXCEED 9.
EXECUTION TERMINATED.

Subroutine: FMAT
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE MAT
POISSON VALUE EQUALS \pm .XXXXXXXXXXE \pm XX IN MATERIAL NUMBER
XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX. VALUE SHOULD BE
GREATER THAN -1.0 AND LESS THAN 1.0. EXECUTION
TERMINATED.

Subroutine: FMAT
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE MAT
RIGIDITY VALUE EQUALS \pm .XXXXXXXXXXE \pm XX IN MATERIAL NUMBER
XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX. VALUE SHOULD BE
GREATER THAN 1.0. EXECUTION TERMINATED.

Subroutine: FMAT
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE MAT
THERMAL COEFFICIENT VALUE EQUALS \pm .XXXXXXXXXE \pm XX IN
MATERIAL NUMBER XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX.
VALUE SHOULD BE GREATER THAN -1.0 AND LESS THAN 1.0.
EXECUTION TERMINATED.

Subroutine: FMAT
Explanation: Self explanatory

INPUT ERROR IN SUBROUTINE MAT
VALUE OF YOUNG'S MODULUS EQUALS \pm .XXXXXXXXXE \pm XX IN
MATERIAL NUMBER XXXXXX, XXXXXXXXXXXXXXXXXXXXXXXXXX.
VALUE SHOULD BE GREATER THAN 1.0.

Subroutine: FMAT
Explanation: Self explanatory

INPUT ERROR NUMBER OF REFERENCE POINTS INPUT EXCEEDS XXXX.

Subroutine: INPUT
Explanation: Program cannot accommodate more than
the given number of input points.

INPUT ERROR NUMBER OF DIRECTIONS OF GRID POINTS NOT
EQUAL TO NUMBER OF DIRECTIONS OF TRANSFORMATION MATRIX.
EXECUTION TERMINATED.

Subroutine: INPUT
Explanation: Order of grid point axes transformation
matrices must be equal to three.

INPUT ROUTINE CORE STORAGE REQUIRED XXXXXX EXCEEDS THAT
AVAILABLE XXXXXX TO DISPLACEMENT METHOD MATRIX GENERATOR.

Subroutine: US04A
Explanation: Blank common work area is not large
enough for processing input.

INTERNAL TAPE ERROR HAS OCCURRED. PROCESSING ABANDONED.

Subroutine: PHASE2
Explanation: Report form input preprocessor cannot
retrieve information stored on a
scratch data set.

LABEL CARD ERROR XXXXXX

Subroutine: INPUT
Explanation: Input card read should have been label
card. Execution will be terminated.

LOAD CONDITION XXX SUB-LABEL IS INCORRECT. PROGRAM
CANNOT DISTINGUISH BETWEEN LOAD CONDITIONS.
Subroutine: PHASE1
Explanation: Load condition sub-label in report
form input is in error.

MAXIMUM NUMBER OF ITERATIONS REACHED IN ROMBERG
INTEGRATION ROUTINE.
Subroutine: PLUG5
Explanation: Convergence was not obtained in 15
iterations for an integral in the
toroidal thin shell element.
Processing will continue, using
15 iteration result.

MAXIMUM NUMBER OF LOAD CONDITIONS ALLOWED IS 100. THIS
PROBLEM CONTAINS XXXX.
Subroutine: PHASE1
Explanation: Self explanatory

MORE THAN ONE OPTION HAS BEEN SELECTED FOR REQUEST NUMBER XXX
OF MATERIAL LIBRARY. ONLY THE FIRST SELECTION WILL
BE RETAINED.
Subroutine: PHASE1
Explanation: Self explanatory

NEW MATERIAL TAPE NOT GENERATED. ALL REVISIONS AND/OR
DELETIONS REQUESTED BY THIS CASE HAVE BEEN IGNORED.
Subroutine: FMAT
Explanation: Due to a previous error, generation
of a new material library has been
abandoned. Execution will be terminated.

NO END OR CHECK CARD HAS BEEN FOUND. CHECK CARD WILL BE
INSERTED, SUPPRESSING EXECUTION.
Subroutine: PHASE2
Explanation: Self explanatory

NO OPTION HAS BEEN SELECTED FOR REQUEST NUMBER XXX OF
MATERIAL LIBRARY.
Subroutine: PHASE1
Explanation: Self explanatory

NUMBER OF ELEMENTS READ XXXXX IS GREATER THAN 9999.
NUMBER OF ELEMENTS WILL BE SET AT 9999.

Subroutine: PHASE 2

Explanation: Self explanatory, execution will be suppressed.

NUMBER OF ENTRIES READ FOR THIS SECTION, XXXXX, DOES NOT AGREE WITH NUMBER THAT WAS TO BE READ, XXXXX. ACTUAL NUMBER READ WILL BE USED.

Subroutine: PHASE 2

Explanation: Self explanatory

PLUG7 ERROR - THIRD POINT TO DEFINE PLANE WAS NOT GIVEN - INPUT ERROR.

Subroutine: P7PRT

Explanation: Three element defining points are required for the frame element, the third supplying definition of the plane.

REDUCTION OF TRANSFORMATION MATRICES STORAGE XXXXXX EXCEEDS THAT AVAILABLE TO DISPLACEMENT METHOD MATRIX GENERATOR.

Subroutine: US04A

Explanation: Blank common work area is not large enough for generation of reduction transformation matrix.

REDUCTION TRANSFORMATION MATRIX SIZE XXXXXX EXCEEDS LIMIT XXXXXX OF FORMAT SYSTEM.

Subroutine: US04A

Explanation: Self explanatory

REPEAT FOR FIRST POINT IGNORED.

Subroutine: FORMIN

Explanation: Repeat option on table forms of report form input cannot be used for first value entered.

REPORT ROUTINE CORE STORAGE REQUIRED XXXXXX EXCEEDS THAT
AVAILABLE XXXXXX TO DISPLACEMENT METHOD MATRIX GENERATOR.
Subroutine: US04A
Explanation: Blank common work area is not large enough
for processing report form input data.

STIFFNESS MATRIX SIZE XXXXXX EXCEEDS LIMIT OF FORMAT SYSTEM.
Subroutine: US04A
Explanation: Self explanatory

STRESS MATRIX SIZE XXXXXX EXCEEDS LIMIT XXXXXX OF FORMAT
SYSTEM.
Subroutine: US04A
Explanation: Self explanatory

SUBROUTINE MINV HAS DETERMINED ARRAY GAMABQ TO BE SINGULAR,
EXECUTION TERMINATED BY SUBROUTINE TRAIC.
Subroutine: TRAIC
Explanation: Transformation matrix to system
coordinates in triangular cross-section
ring element cannot be inverted,
usually because three element defining
points do not define a triangle.

SYSTEM INFORMATION CARD MISSING. CANNOT ALLOCATE STORAGE.
Subroutine: CONTRL
Explanation: All input data decks must have SYSTEM
section to allocate storage for
processing of input.

THE INTEGRAL OF $(\ln(A+B*X)/X) DX$ IS NOT ALLOWED FOR $A+B*X=0$
 $A = \pm .XXXXXXXXE\pm XX$ $B = \pm .XXXXXXXXE\pm XX$ $X = \pm .XXXXXXXXE\pm XX$
Subroutine: F6211
Explanation: Natural log of zero is undefined.

THERE IS A MISTAKE IN THE COORDINATES FOR THIS TRANSFORMATION,
WE WILL CALCULATE THE REMAINING IN SPITE OF THIS.
Subroutine: FRED
Explanation: An error has occurred in generating a
grid point axes transformation matrix.
Execution will continue.

THIS SECTION HAS EITHER BEEN OMITTED OR FLUSHED BY PHASE ONE ERROR. IN EITHER CASE THIS SECTION IS CONSIDERED CRITICAL AND EXECUTION WILL NOT BE ALLOWED.

Subroutine: PHASE 2

Explanation: Self explanatory

THIS SECTION IS TO BE MERGED WITH XXXXXX AND XXXXXX FOR WHICH MODAL CARDS HAVE BEEN ENCOUNTERED FOR BOTH. TWO VALUES CANNOT BE ASSIGNED TO THE SAME POINT. BOTH MODAL CARDS WILL BE IGNORED.

Subroutine: PHASE 2

Explanation: Self explanatory

THIS SECTION IS TO BE MERGED WITH XXXXXX AND XXXXXX FOR WHICH VALUES HAVE BEEN ASSIGNED BY BOTH FOR POINT NUMBER XXXXX. TWO VALUES CANNOT BE ASSIGNED TO THE SAME POINT. NEITHER VALUE WILL BE USED.

Subroutine: PHASE 2

Explanation: Self explanatory

TOROIDAL RING ELEMENT WITH CO-ORDINATES $R1 = \pm .XXXXXXXXXE \pm XX$
 $R2 = \pm .XXXXXXXXXE \pm XX$ $Z1 = \pm .XXXXXXXXXE \pm XX$
 $Z2 = \pm .XXXXXXXXXE \pm XX$ IS NOT DIAGONALLY DOMINANT AND SHOULD BE SUBDIVIDED.

Subroutine: PRINT 5

Explanation: Element stiffness matrices must be diagonally dominant.

UNEXPECTED BLANK LABEL CARD ENCOUNTERED.

Subroutine: PHASE 1

Explanation: Card read should have contained an input section label. Input processor will attempt to continue.

UNEXPECTED LABEL CARD READ - POINT XXXXX

Subroutine: FORMIN

Explanation: Input section label card encountered while reading table form input. Point reflects entry now being processed.

UNRECOGNIZABLE INPUT SECTION.

Subroutine: PHASE1

Explanation: Input section label has been read
which is undefined in input
processor.

VALUE OF SIN (ALPHA) IS ZERO - RUN TERMINATED.

Subroutine: PLUG1

Explanation: Element defining points are in
error for Quadrilateral Thin Shell
Element.

UNCLASSIFIED

Security Classification

DOCUMENT CONTROL DATA - R & D		
(Security classification of title, body of abstract and indexing annotation must be entered when the overall report is classified)		
1. ORIGINATING ACTIVITY (Corporate author)		3a. REPORT SECURITY CLASSIFICATION
Bell Aerosystems a Textron Company		Unclassified
		2b. GROUP
		N/A
3. REPORT TITLE		
MAGIC - An Automated General Purpose System for Structural Analysis Volume II - User's Manual		
4. DESCRIPTIVE NOTES (Type of report and inclusive dates)		
Final Report		
5. AUTHOR(S) (First name, middle initial, last name)		
Stephen Jordan Gene E. Maddux Robert H. Mallett		
6. REPORT DATE	7a. TOTAL NO. OF PAGES	7b. NO. OF REFS
July 1969	362	9
8a. CONTRACT OR GRANT NO.	8b. ORIGINATOR'S REPORT NUMBER(S)	
AF33(615)-67-C-1505		
a. PROJECT NO.		
1467	AFFDL-TR-68-56, Vol. II	
c.	9b. OTHER REPORT NO(S) (Any other numbers that may be assigned this report)	
Task No. 146702	None	
d.		
10. DISTRIBUTION STATEMENT		
This document has been approved for public release and sale. Its distribution is unlimited.		
11. SUPPLEMENTARY NOTES		12. SPONSORING MILITARY ACTIVITY
None		Air Force Flight Dynamics Laboratory Air Force Systems Command Wright-Patterson AF Base, Ohio
13. ABSTRACT		
<p>An automated general purpose system for analysis is presented. This system, identified by the acronym "MAGIC" for "Matrix Analysis via Generative and Interpretive Computations," provides a flexible framework for implementation of the finite element analysis technology. Powerful capabilities for displacement, stress and stability analyses are included in the subject MAGIC System for structural analysis.</p> <p>The matrix displacement method of analysis based upon finite element idealization is employed throughout. Six versatile finite elements are incorporated in the finite element library. These are: frame, shear panel, triangular cross-section ring, toroidal thin shell ring, quadrilateral thin shell and triangular thin shell elements. These finite element representations include matrices for stiffness, incremental stiffness, prestrain load, thermal load, distributed mechanical load and stress.</p> <p>Documentation of the MAGIC System is presented in three parts; namely, Volume I: Engineer's Manual, Volume II: User's Manual and Volume III: Programmer's Manual. The subject Volume, Volume III, is designed to facilitate implementation, operation, modification, and extension of the MAGIC System.</p>		

DD FORM 1473
1 NOV 66

UNCLASSIFIED

Security Classification

UNCLASSIFIED

Security Classification

14.	KEY WORDS	LINK A		LINK B		LINK C	
		ROLE	WT	ROLE	WT	ROLE	WT
	1. Structural analysis 2. Matrix methods 3. Matrix abstraction 4. Digital computer methods						

UNCLASSIFIED

Security Classification